Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

QFX R-24

QFX R-24 Portable AM/FM/SW1-SW2 Radio Instruction Manual

Model: R-24 | Brand: QFX

Important Safety Information

WARNING: Cancer and Reproductive Harm – www.P65Warnings.ca.gov.
Always read and follow all safety instructions before operating this device. Keep the radio away from water and excessive moisture. Do not expose to extreme temperatures. Use only the specified power sources and batteries. Do not attempt to disassemble or repair the unit yourself; refer all servicing to qualified personnel.

Product Overview

The QFX R-24 is a high-quality, portable AM/FM/SW1-SW2 radio designed for reliable reception and ease of use. Its sleek design and durable construction make it suitable for various environments.

Key Features:

- High Power Dynamic Speaker for clear audio.
- AM/FM/SW1-SW2 Radio with LED Indicator for tuning and power status.
- Convenient Handle Bar for easy portability.
- Telescopic Antenna for enhanced signal reception.
- Multiple Power Options: AC 120V-240V, DC 4.5V Jack, and DC 3x D-Batteries.
- 3.5mm Headphone Jack for private listening.

Product Visuals:



Figure 1: Front view of the QFX R-24 Portable AM/FM/SW1-SW2 Radio, showing the speaker grille, tuning dial, and controls.



Figure 2: The QFX R-24 radio with its telescopic antenna fully extended, ready for optimal reception.

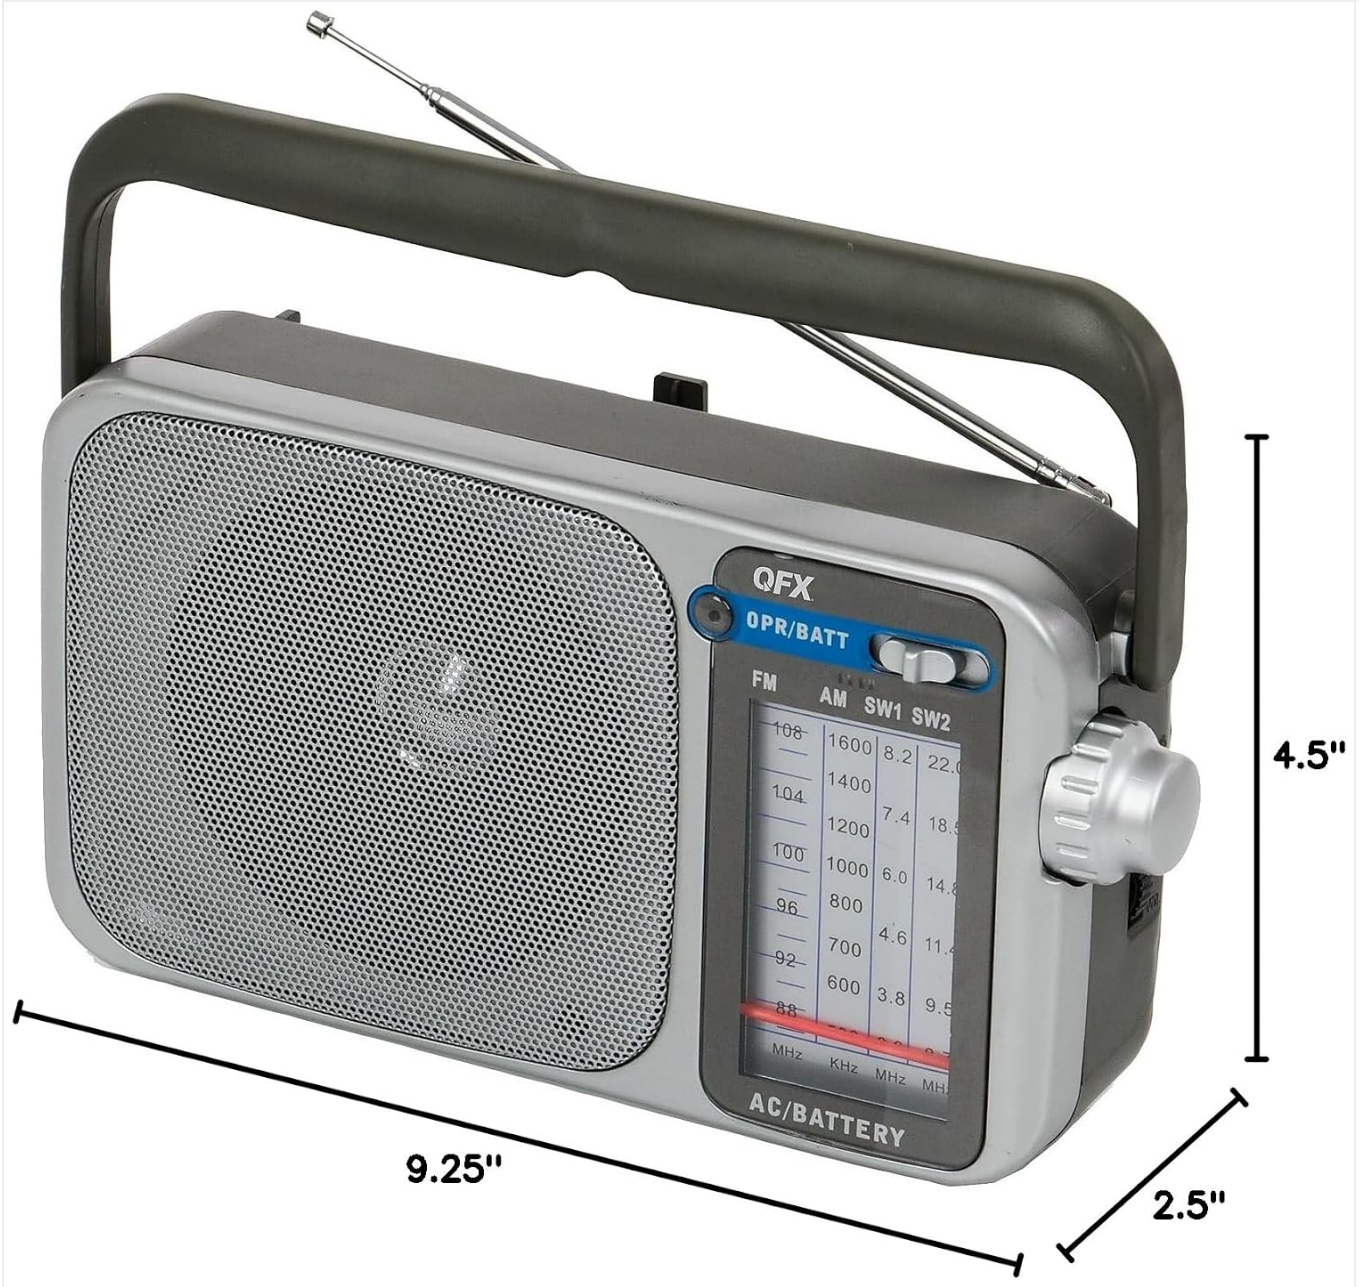

Figure 3: Side view of the QFX R-24 radio illustrating its compact dimensions for portability.

Product Video:

▶ **Watch video online**
QFX R-24 Portable AM/FM/SW1-SW2 Radio

Video 1: An overview of the QFX R-24 Portable AM/FM/SW1-SW2 Radio, highlighting its features and design.

Setup and Powering On

1. Battery Installation:

1. Locate the battery compartment on the back of the radio.
2. Open the battery compartment cover.
3. Insert three (3) D-size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. AC Power Connection:

- For AC power, connect the included AC power cord to the AC input jack on the radio.

- Plug the other end of the AC power cord into a standard 120V-240V wall outlet.
- The radio will automatically switch to AC power when connected.

3. Antenna Extension:

- For optimal reception, extend the telescopic antenna fully.
- Adjust the angle and direction of the antenna to achieve the clearest signal.

Operation

1. Power On/Off and Volume Control:

- Rotate the volume knob clockwise to turn the radio on and increase the volume.
- Rotate the volume knob counter-clockwise to decrease the volume and turn the radio off.

2. Band Selection:

- Use the band selector switch (FM, AM, SW1, SW2) to choose your desired frequency band.

3. Tuning to a Station:

- Rotate the tuning knob to scan through the frequencies within the selected band.
- The LED indicator will illuminate when a strong signal is received.
- Fine-tune the knob for the clearest audio.

4. Headphone Use:

- Plug 3.5mm headphones into the headphone jack located on the side/back of the radio for private listening.
- The internal speaker will automatically mute when headphones are connected.

Care and Maintenance

- Clean the radio with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- If the radio will not be used for an extended period, remove the batteries to prevent leakage and corrosion.
- Store the radio in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the radio or subjecting it to strong impacts.

Troubleshooting

Problem	Possible Cause	Solution
No power	Batteries are dead or incorrectly inserted; AC cord not properly connected.	Replace batteries, ensuring correct polarity. Check AC cord connection to radio and wall outlet.
Poor reception / Static	Antenna not extended; weak signal; interference from other electronics.	Fully extend and adjust the telescopic antenna. Try moving the radio to a different location. Turn off nearby electronic devices that may cause interference.
No sound from speaker	Volume too low; headphones plugged in; speaker malfunction.	Increase volume. Disconnect headphones. If problem persists, contact support.

Problem	Possible Cause	Solution
Tuning dial inaccurate	Minor variations are normal for analog tuning.	Fine-tune slowly to locate the desired station.

Specifications

Feature	Detail
Model Number	R-24
Product Dimensions	9.25"L x 2.5"W x 4.5"H
Item Weight	1.35 pounds
Radio Bands Supported	AM, FM, SW1, SW2
Power Source	AC 120V-240V; DC 4.5V; 3x D-Batteries
Headphone Jack	3.5mm
Included Components	Radio
Manufacturer	QFX
Country of Origin	China

Warranty and Support

For warranty information, technical support, or service inquiries, please contact QFX customer service. Keep your purchase receipt as proof of purchase for any warranty claims.
Contact information can typically be found on the QFX official website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B0080HVA36

More documents and user manuals: **https://manuals.plus/**