Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun cruZer 5 Head

Braun cruZer 5 Head Clipper Hair Trimmer Shaver

INSTRUCTION MANUAL

Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

Introduction

This manual provides detailed instructions for the safe and effective use of your Braun cruZer 5 Head Clipper Hair Trimmer Shaver. Please read all instructions carefully before first use and retain for future reference.

Important Safety Information

- Keep the appliance dry. Do not use it in or near water.
- Do not open the appliance. For repairs, contact an authorized service center.
- Keep out of reach of children.
- Ensure the charging voltage matches your local power supply.
- Unplug the appliance before cleaning.

Setup

Unpacking and Components

Carefully remove all components from the packaging. Ensure all parts are present:

- Braun cruZer 5 Head Trimmer
- Adjustable Hair Comb Attachment
- Charging Adapter
- Cleaning Brush
- Lubricating Oil



Image: All components of the Braun cruZer 5 Head Trimmer, including the main unit, adjustable comb, power adapter, cleaning brush, and lubricating oil.

Charging the Trimmer

Before first use, fully charge the trimmer for approximately 8 hours. Subsequent charges may take less time.

1. Ensure the trimmer is switched off.
2. Connect the charging adapter to the trimmer's charging port.
3. Plug the adapter into a suitable electrical outlet.
4. The charging indicator light will illuminate (if present) to show charging is in progress.
5. Unplug the trimmer once fully charged. Do not use the trimmer while it is connected to the charger.

Attaching the Hair Comb

The adjustable comb allows for various hair lengths.

1. Ensure the trimmer is switched off.
2. Align the comb attachment with the trimmer head.

3. Gently push the comb onto the trimmer head until it clicks securely into place.
4. To remove, press the release button (if available) or gently pull the comb away from the trimmer head.



Image: The Braun cruZer 5 Head Trimmer with its adjustable hair comb attachment securely in place.

Operation

Powering On/Off

Press the power button located on the front of the trimmer to turn it on or off.

Adjusting Trim Length

The trimmer features a memory system SafetyLock with 8 settings for precise length adjustments.

1. Ensure the comb attachment is securely in place.
2. Use the adjustment wheel or slider (depending on model) to select the desired hair length. The available settings are typically indicated in millimeters (mm).

3. The SafetyLock system helps prevent accidental changes to the selected length during use.



Image: A detailed view of the trimmer's adjustable comb and length setting indicator, showing various trim lengths.

Trimming Hair

For best results, ensure hair is clean and dry before trimming.

1. Select your desired trim length.
2. Turn on the trimmer.
3. Hold the trimmer with the comb flat against the skin.
4. Move the trimmer slowly against the direction of hair growth.
5. For an even cut, pass over the same area multiple times.
6. Regularly clear accumulated hair from the comb and blades during use.



Image: A user demonstrating the proper technique for trimming hair with the Braun cruZer 5 Head Trimmer.

Maintenance

Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene.

1. Turn off and unplug the trimmer.
2. Remove the comb attachment.
3. Use the provided cleaning brush to remove hair from the trimmer head and comb.
4. The trimmer head may be rinsed under running water for thorough cleaning. Ensure it is completely dry before reattaching or storing.

Lubrication

To maintain blade performance and longevity, lubricate the blades regularly.

1. After cleaning, apply a small drop of the provided lubricating oil to the blades.
2. Turn on the trimmer for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

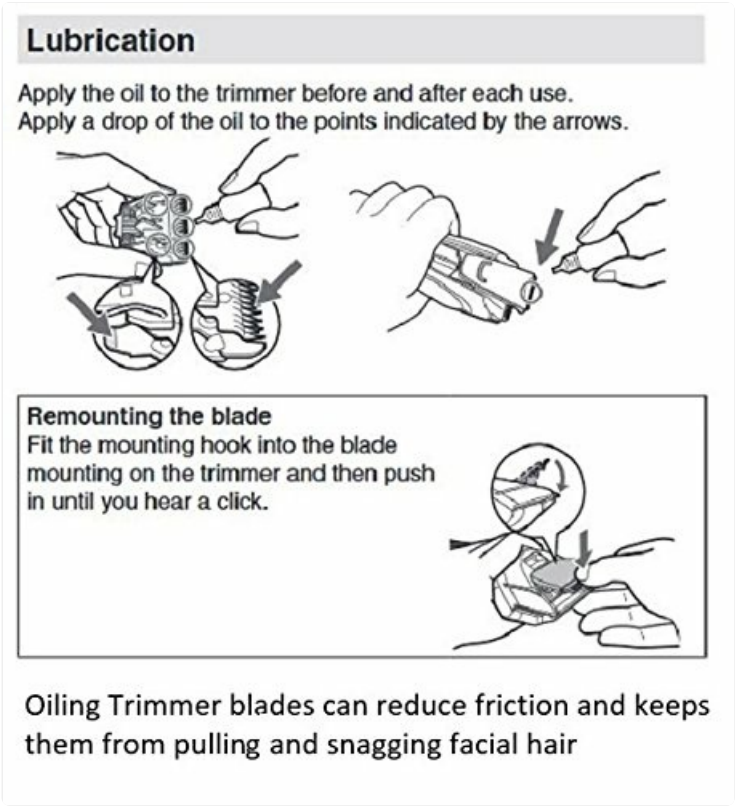


Image: Visual instructions for applying lubricating oil to the trimmer blades and for correctly remounting the blade head after cleaning or maintenance.

Remounting the Blade

If the blade head was removed for cleaning or maintenance, follow these steps to reattach it:

1. Align the mounting hook of the blade head with the corresponding slot on the trimmer body.
2. Gently push the blade head into place until you hear a distinct click, indicating it is securely fastened.

Troubleshooting

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is discharged.	Charge the trimmer fully.
Poor trimming performance.	Blades are dull or clogged with hair.	Clean and lubricate the blades. Consider replacing the blade head if performance does not improve.
Trimmer pulls hair.	Blades are not lubricated or are damaged.	Apply lubricating oil to the blades. Inspect blades for damage; replace if necessary.
Comb attachment falls off.	Comb not securely attached.	Ensure the comb clicks into place firmly.

Specifications

- **Model:** cruZer 5 Head
- **Brand:** Braun
- **Blade Material:** Stainless Steel
- **Special Features:** Rechargeable, Portable, Detachable head, Adjustable trim length settings, Memory system
- **Dimensions (LxWxH):** 15.5 x 5.7 x 22.2 Centimeters
- **Item Weight:** 340 g
- **Power Source:** Battery (2 AAA batteries included)
- **Recommended Uses:** Body, Chest, Face, Head
- **Color:** Blue



Image: A visual representation of the trimmer's dimensions, indicating its length and width.

Warranty and Support

This Braun product is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage details.
For technical support, service, or to inquire about replacement parts, please contact Braun customer service through their official website or the contact information provided in your warranty documentation.
You can also visit the official Braun store for more information:Braun Official Store

© 2023 Braun. All rights reserved. Model: cruZer 5 Head.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00BEAZUVY

More documents and user manuals: **https://manuals.plus/**