Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Z-Lite 872CH-34

Z-Lite 872CH-34 Terra Seven Light Pendant User Manual

Model: 872CH-34 | Brand: Z-Lite

Introduction

Thank you for choosing the Z-Lite 872CH-34 Terra Seven Light Pendant. This exquisite fixture features sparkling crystals and chrome hardware, designed to enhance your indoor living space. The adjustable cable allows for perfect hanging height customization. This manual provides essential information for the safe installation, operation, and maintenance of your new pendant light.

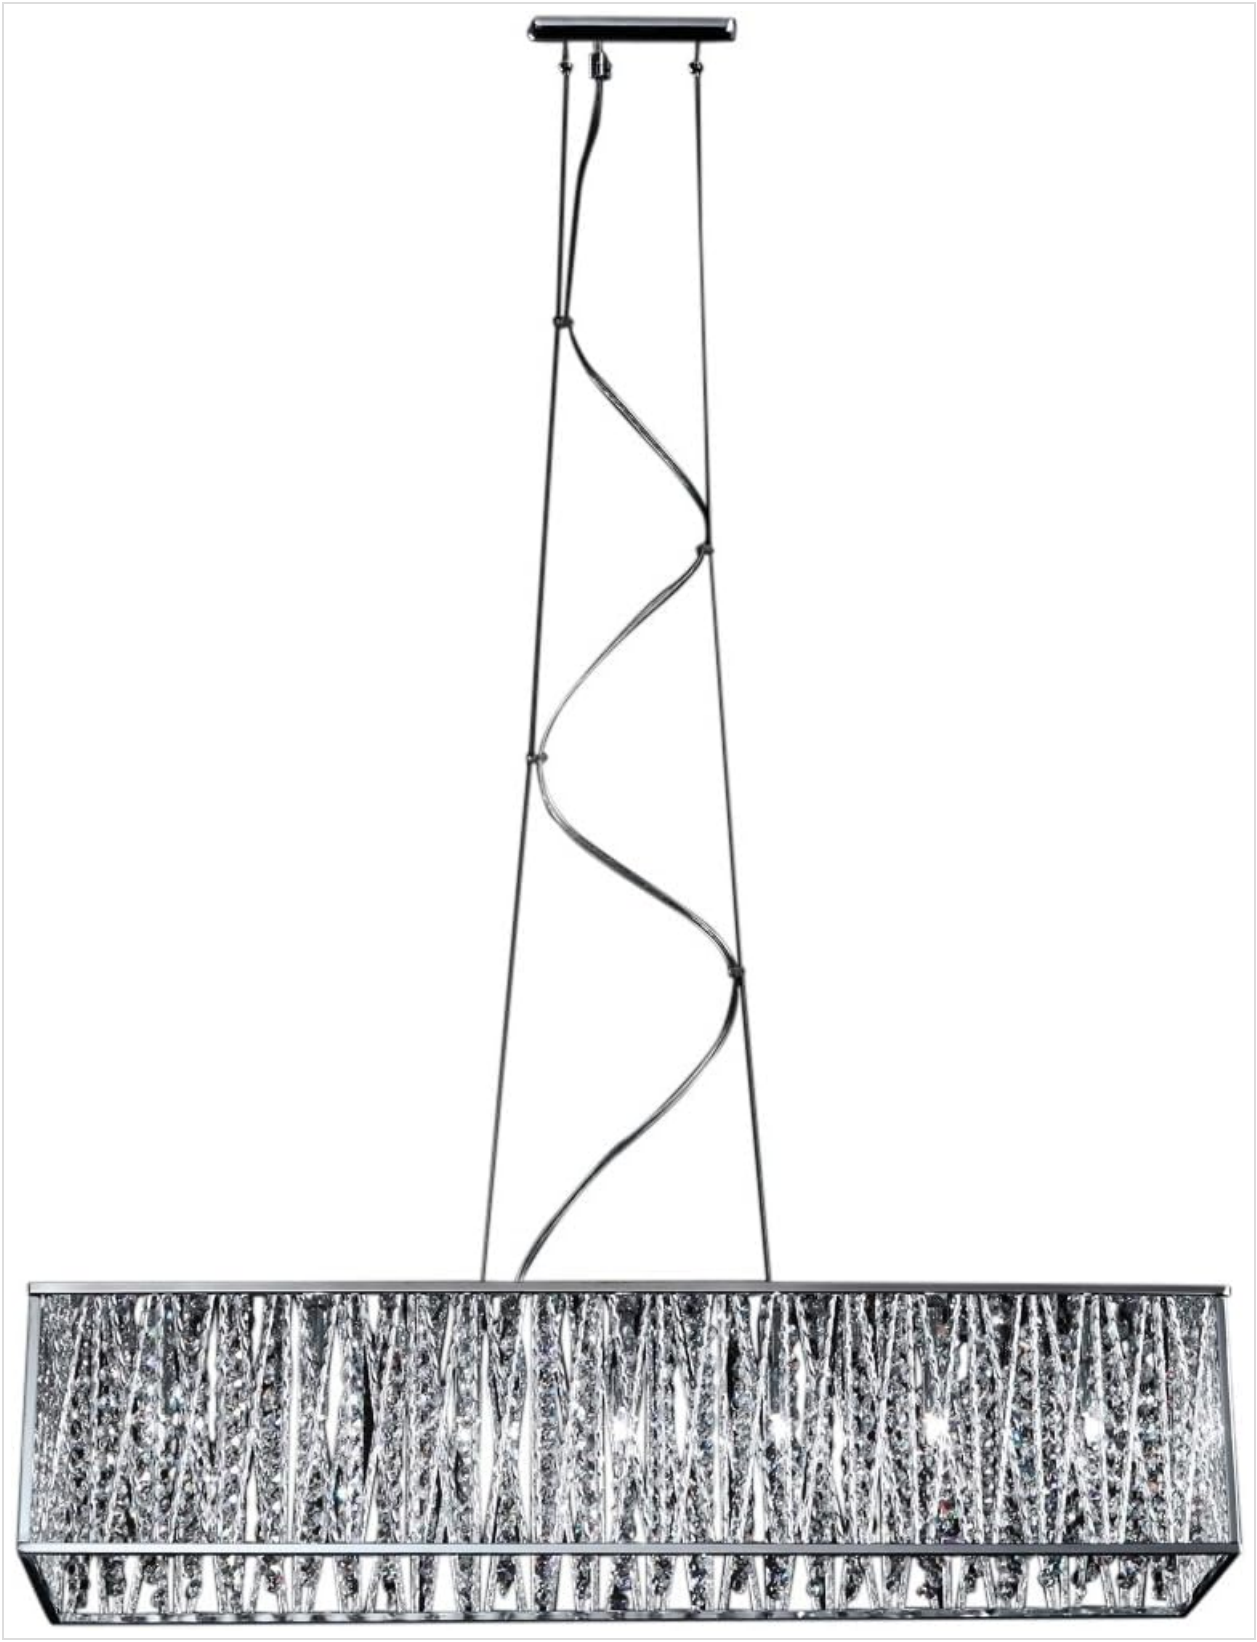

Image: The Z-Lite 872CH-34 Terra Seven Light Pendant, showcasing its rectangular design with multiple crystal elements and a chrome frame, suspended by adjustable cables from a ceiling mount.

Important Safety Information

Please read all instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Please check your local laws before purchasing this product.

- Ensure the power supply is disconnected at the circuit breaker before installation, maintenance, or bulb replacement.
- This fixture operates at **120 Volts**. Ensure your electrical system is compatible.
- Use only G9 base bulbs with a maximum wattage of **60 watts** per bulb.
- Installation should be performed by a qualified electrician if you are unsure about electrical wiring.
- This product is designed for **Indoor Usage** only. Do not expose to moisture.

Package Contents

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, do not proceed with installation and contact customer support.

- Z-Lite 872CH-34 Pendant Light Fixture (1 unit)
- Mounting Hardware (screws, wire nuts, etc.)
- Installation Instructions

Setup and Installation

Before You Begin

- Turn off power at the main circuit breaker.
- Unpack the fixture carefully and inspect for any damage.
- Gather necessary tools (screwdriver, wire strippers, ladder, etc.).

Mounting the Fixture

1. Attach the mounting bracket to the junction box in the ceiling using the provided screws.
2. Adjust the length of the pendant's adjustable cable to achieve the desired hanging height. Secure the cable firmly.
3. Connect the fixture's wires to the corresponding house wires (black to black, white to white, ground to ground) using wire nuts. Ensure all connections are secure.
4. Carefully tuck the wires into the junction box and secure the fixture canopy to the mounting bracket.

Bulb Installation

- This fixture uses G9 base bulbs. Gently insert the G9 bulbs into their respective sockets. Do not exceed the maximum wattage of 60 watts per bulb.
- Ensure bulbs are seated correctly to prevent flickering or non-illumination.

Operating Instructions

Once installed and wired correctly, the Z-Lite 872CH-34 Terra Seven Light Pendant is ready for operation.

- Turn on the power at the main circuit breaker.
- Control the light using the wall switch (Rocker type) connected to the fixture.
- While the fixture itself does not have 'App' control, if you use smart G9 LED bulbs, they may offer app-based control features independently.

Care and Maintenance

Regular cleaning and proper maintenance will ensure the longevity and appearance of your pendant light.

- **Cleaning:** Turn off the power before cleaning. Use a soft, dry cloth to wipe the chrome finish. For the glass shade and crystals, a slightly damp cloth with a mild glass cleaner can be used, then dry immediately. Avoid abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure the fixture is cool and power is off before replacing bulbs. Gently remove the old G9 bulb and insert a new one, ensuring it is securely seated.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

Troubleshooting

If you encounter issues with your pendant light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	No power to the fixture; Loose wiring; Faulty bulb; Tripped circuit breaker	Check circuit breaker; Verify all wire connections are secure; Replace bulb; Ensure wall switch is on
Light flickers	Loose bulb; Incorrect bulb type/wattage; Loose wiring	Ensure bulb is fully seated; Verify bulb specifications; Check wiring connections
Humming noise	Incompatible dimmer switch (if applicable); Loose components	Ensure dimmer is compatible with LED/G9 bulbs; Check for loose parts within the fixture

Technical Specifications

Feature	Specification
Model Number	872CH-34
Brand	Z-Lite
Color	Silver / Pewters
Material	Aluminum (frame), Glass (shade), Crystal (embellishment)
Style	Modern
Light Fixture Form	Pendant
Specific Uses	General Purpose
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Installation Type	Semi Flush Mount
Special Feature	Adjustable (cable height)
Light Source Type	LED (compatible, not included)
Finish Type	Chrome

Feature	Specification
Voltage	120 Volts
Included Components	872CH-34 (fixture)
Specification Met	UL Listed
Item Weight	9.4 Pounds
Number of Items	1
Wattage	60 watts (max per bulb)
Bulb Base	G9
Switch Type	Rocker (wall switch)
Assembly Required	Yes
Assembled Diameter	9.75 Inches

Warranty and Support

The Z-Lite 872CH-34 Terra Seven Light Pendant comes with a Manufacturer's Warranty. For specific details regarding the warranty period and coverage, please refer to the documentation included with your purchase or contact Z-Lite Lighting directly.

- **Warranty Type:** Manufacturer
- **Support:** For technical assistance, missing parts, or warranty claims, please contact Z-Lite Lighting customer service. Contact information can typically be found on the manufacturer's website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00BQ0TK4A

More documents and user manuals: **https://manuals.plus/**