Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

UPBRIGHT YJS015D-1900600U

UpBright 19V AC/DC Adapter Instruction Manual

Model: YJS015D-1900600U

1. Product Overview

This manual provides essential instructions for the safe and effective use of your UpBright 19V AC/DC Adapter. This power supply is designed to provide stable power for charging bases of compatible Tesvor robotic vacuum cleaners.
Compatible Models:

- Tesvor V300 Robotic Vacuum Charging Base
- Tesvor V300s Robotic Vacuum Charging Base
- Tesvor X500 Robotic Vacuum Charging Base
- Tesvor Alex M1 Robotic Vacuum Charging Base
- Tesvor Smart S6 Robotic Vacuum Charging Base

2. Safety Information

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or other hazards.

- Use only with compatible devices as specified in this manual.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Do not disassemble or modify the adapter. Refer all servicing to qualified personnel.
- Ensure the power outlet voltage matches the adapter's input specifications (100-240VAC, 50/60Hz).
- Avoid placing the adapter in areas with poor ventilation.
- Unplug the adapter from the power outlet when not in use for extended periods.
- This adapter features Over Voltage Protection (OVP), Over Current Protection (OCP), and Short Circuit Protection (SCP) to ensure safe operation.


3. Package Contents

Verify that all items are present upon opening the package:

- 1 x UpBright 19V AC/DC Adapter (Model: YJS015D-1900600U)
- 1 x Suitable Outlet Adapter (for international orders, if applicable)



This image displays the UpBright 19V AC/DC adapter, featuring a standard US two-prong plug, the main adapter unit, and an integrated power cord terminating in a DC barrel connector.

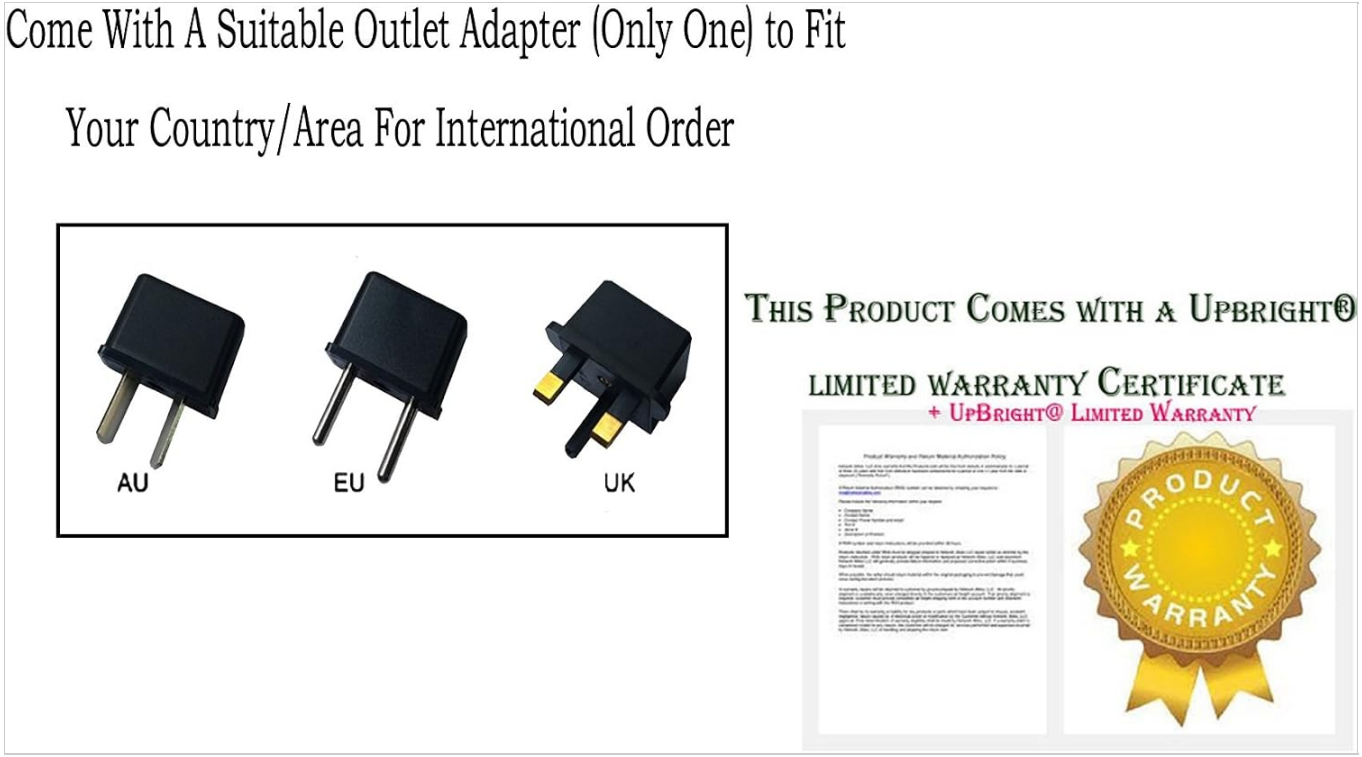

This image illustrates various international plug adapters, including Australian (AU), European (EU), and United Kingdom (UK) types, which may be included with international orders. A sample warranty certificate is also shown.

4. Setup

1. **Inspect the Adapter:** Before connecting, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
2. **Connect to Charging Base:** Insert the DC barrel connector of the UpBright adapter firmly into the power input port on your Tesvor robotic vacuum's charging base.
3. **Connect to Power Outlet:** Plug the AC prongs of the adapter (or the appropriate international plug adapter) into a standard wall power outlet.
4. **Verify Connection:** Ensure all connections are secure. The charging base should indicate power, and the robotic vacuum can now be placed on the base for charging.

5. Operating Instructions

The UpBright 19V AC/DC Adapter operates automatically once connected. It provides the necessary power to your Tesvor robotic vacuum's charging base.

- Once the adapter is properly connected to the charging base and a power outlet, the charging base will be ready to receive the robotic vacuum.
- Place your Tesvor robotic vacuum onto its charging base. The vacuum should automatically begin charging, indicated by its internal charging lights or display.
- The adapter continuously supplies power to maintain the vacuum's charge when docked.

6. Maintenance

Proper maintenance ensures the longevity and safe operation of your adapter.

- **Cleaning:** Disconnect the adapter from the power outlet and the charging base before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.

- **Storage:** Store the adapter in a cool, dry place when not in use. Avoid wrapping the cable too tightly.
- **Cable Care:** Do not bend, twist, or pull the power cord excessively. Avoid placing heavy objects on the cable.

7. Troubleshooting

If you encounter issues with your UpBright adapter, refer to the following common solutions:

- **No Power to Charging Base:**
  - Ensure the adapter is securely plugged into both the wall outlet and the charging base.
  - Check if the wall outlet is functional by plugging in another device.
  - Inspect the adapter cable for any visible damage. If damaged, discontinue use.
- **Robotic Vacuum Not Charging:**
  - Confirm the charging base is receiving power (check its indicator lights).
  - Ensure the robotic vacuum is correctly positioned on the charging base, making proper contact with the charging terminals.
  - Refer to your robotic vacuum's manual for specific charging instructions and troubleshooting.

If problems persist, contact UpBright customer support.

8. Specifications

Input Voltage	100-240VAC, 50/60Hz
Output Voltage	19VDC
Output Current	0.6A - 1A (600mA)
Protection Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)
Model Number	YJS015D-1900600U
Item Weight	Approximately 4 ounces (113 grams)
Product Dimensions	Approximately 3 x 3 x 1 inches (7.6 x 7.6 x 2.5 cm)

9. Warranty and Support

UpBright products are designed for reliability and performance.

- **Refund Policy:** UpBright offers a 30-day refund period from the date of purchase.
- **Exchange Policy:** A 24-month exchange warranty is provided for defective units.
- For warranty claims or technical assistance, please contact UpBright customer support through your retailer or the official UpBright website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00DGUHCK2

More documents and user manuals: **https://manuals.plus/**