Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Frigidaire FD5153

Frigidaire FD5153 1.5 Liter Blender with Grinder

User Instruction Manual

1. Introduction

Thank you for purchasing the Frigidaire FD5153 Blender with Grinder. This appliance is designed for efficient blending and grinding tasks in your kitchen. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. This product is designed for overseas use with 220-240 Volt / 50-60 Hz power supply and will not work in the US.

2. Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit in water or any other liquid.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only.
- Keep hands and utensils out of the jar while blending to prevent the possibility of severe injury to persons or damage to the blender.
- Blades are sharp. Handle with care.
- Ensure the lid is securely locked in place before operating.

3. Parts and Features

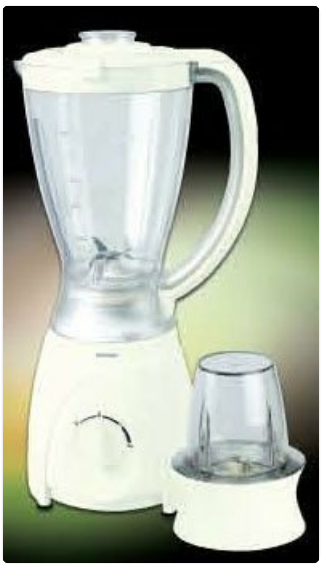


Figure 1: Frigidaire FD5153 Blender and Grinder. Shows the main blender unit with its 1.5-liter transparent plastic jar and the separate grinder attachment.

1. Motor Unit (Base)
2. Blender Jar (1.5 Liter Transparent Plastic)
3. Blender Lid
4. Stainless Steel Blender Blades
5. Grinder Attachment
6. Rotary Switch (Speed Control)
7. Power Cord

4. Setup and Assembly

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, wash the blender jar, lid, and grinder attachment in warm soapy water. Rinse thoroughly and dry. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
3. **Assembling the Blender:** Place the blender jar onto the motor unit. Ensure it is securely seated and the safety lock engages. The jar is detachable from its base for easy cleaning.
4. **Assembling the Grinder:** For grinding tasks, attach the grinder cup onto the grinder blade assembly, then place the assembled grinder onto the motor unit, ensuring it locks securely.
5. **Placement:** Place the appliance on a stable, flat, and dry surface.

5. Operating Instructions

5.1 Using the Blender

1. Ensure the blender jar is securely attached to the motor unit.
2. Add ingredients to the blender jar. Do not exceed the 1.5-liter maximum fill line.
3. Place the lid securely on the blender jar.
4. Plug the appliance into a 220-240 Volt / 50-60 Hz power outlet.
5. Turn the rotary switch to select your desired speed: "Low" or "Hi".
6. For short bursts of power or auto-clean function, turn the rotary switch to the "Pulse" setting and release.

7. After blending, turn the rotary switch to "OFF" and unplug the appliance.
8. Wait for the blades to stop completely before removing the lid or jar.

5.2 Using the Grinder

1. Attach the grinder cup with ingredients to the grinder blade assembly, then secure the entire grinder unit onto the motor base. Ensure the safety lock engages.
2. Add dry ingredients suitable for grinding (e.g., coffee beans, spices) to the grinder cup. Do not overfill.
3. Plug the appliance into a 220-240 Volt / 50-60 Hz power outlet.
4. Turn the rotary switch to "Hi" or "Pulse" for grinding.
5. After grinding, turn the rotary switch to "OFF" and unplug the appliance.
6. Wait for the blades to stop completely before removing the grinder unit.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and hygiene of your appliance.

- **Always unplug the appliance before cleaning.**
- **Blender Jar and Grinder:** The transparent plastic jar and grinder attachment are detachable from their bases for easy cleaning. Wash them in warm, soapy water. For stubborn residue, use the "Pulse" function with water and a drop of dish soap for auto-cleaning. Rinse thoroughly and dry immediately.
- **Blades:** The stainless steel blades are sharp. Handle with extreme care during cleaning. Use a brush to clean around the blades if necessary.
- **Motor Unit:** Wipe the motor unit with a soft, damp cloth. Never immerse the motor unit in water or any other liquid.
- **Storage:** Store the appliance in a dry place, away from direct sunlight and out of reach of children.

7. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; Power outlet not working; Jar/grinder not properly seated; Safety lock not engaged.	Ensure plug is firmly in outlet; Check power outlet with another appliance; Re-seat the jar/grinder until it clicks into place.
Motor runs but blades do not spin.	Jar/grinder not properly assembled to the blade unit; Ingredients are too thick or jammed.	Check assembly of jar/grinder and blade unit; Add more liquid; Reduce amount of ingredients; Cut ingredients into smaller pieces.
Burning smell from motor.	Overloading; Continuous operation for too long.	Unplug immediately. Reduce ingredients. Allow motor to cool down for at least 15-20 minutes before re-using. Do not operate continuously for more than 1 minute.

8. Specifications

Model: FD5153

Power: 400 Watts

Voltage: 220-240 Volt / 50-60 Hz

Capacity: 1.5 Liters (Blender Jar)

Speeds: 2 (Low, Hi) + Pulse function

Jar Material: Transparent Plastic

Blades: Stainless Steel

Safety Features: 2 Safety locks

Approvals: GS/ CE/ CB/ RoHS

Dimensions (LxWxH): 15.2 x 15.2 x 30.5 Centimeters (approximate)

Weight: 2 kg 520 g (approximate)

9. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your purchase or contact your local Frigidaire authorized service center. Please note that this product is intended for overseas use and may not be covered by warranty in regions with different voltage standards (e.g., US).

© 2024 Frigidaire. All rights reserved.
Manual Version: 1.0

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00GAAZEVE

More documents and user manuals: **https://manuals.plus/**