Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kendal MX025

Kendal Handcrafted Wood Cuckoo Clock MX025 Instruction Manual

1. Introduction

Thank you for choosing the Kendal Handcrafted Wood Cuckoo Clock, Model MX025. This clock is designed to provide both aesthetic appeal and reliable timekeeping, featuring a traditional cuckoo bird call and handcrafted linden wood construction. This manual provides essential information for the proper setup, operation, and maintenance of your new cuckoo clock.





Image 1.1: Front view of the Kendal Handcrafted Wood Cuckoo Clock MX025, showcasing its detailed linden wood carvings and classic design.

2. Safety Information

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Avoid exposing the clock to extreme temperatures or direct sunlight.
- This product is for indoor use only.

3. Package Contents

Please ensure all items are present upon unpacking:

- Kendal Handcrafted Wood Cuckoo Clock (Main Unit)
- Decorative Pendulum

- Two Decorative Weights (chains attached)
- Instruction Manual (this document)

4. Setup

4.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert three (3) 'C' size batteries (not included), ensuring correct polarity (+/-).
3. Close the battery compartment cover securely.

4.2 Attaching Pendulum and Weights

1. Carefully unpack the pendulum and weights.
2. Hook the pendulum onto the small wire loop located at the bottom center of the clock mechanism.
3. Attach the two decorative weights to the chains hanging from the bottom of the clock. These weights are for decorative purposes and do not power the clock.

4.3 Mounting the Clock

The Kendal Cuckoo Clock is designed for wall mounting.

1. Select a suitable location on a wall, ensuring it is level and secure.
2. Use an appropriate wall anchor and screw (not included) to securely hang the clock from the hanging slot on the back.



Image 4.1: The cuckoo clock displayed on a textured wall, illustrating its appearance when mounted.

5. Operating Instructions

5.1 Setting the Time

1. Gently turn the minute hand (the longer hand) clockwise to set the correct time. Do not move the hour hand directly.
2. Allow the clock to chime at each hour as you pass it.

5.2 Cuckoo Function

The cuckoo bird will emerge and sing 'co-co' on the hour, corresponding to the number of hours displayed.

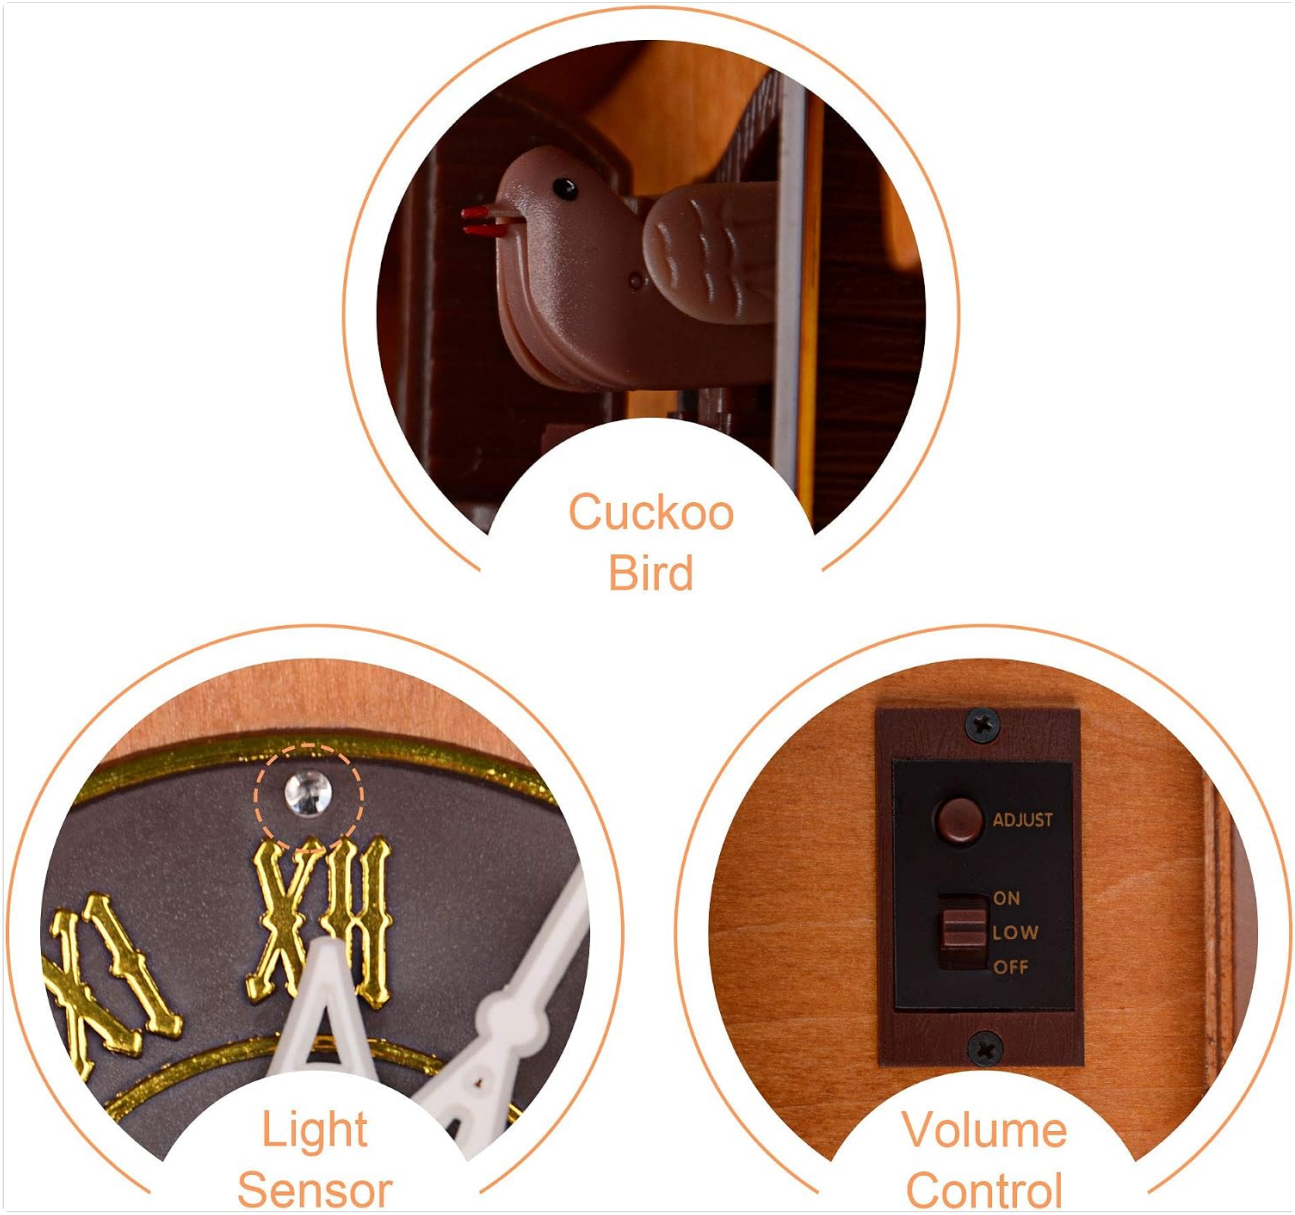

Image 5.1: Detailed view showing the cuckoo bird's compartment, the light sensor, and the volume control switch.

5.3 Automatic Night Shut-Off Sensor

The clock features an automatic night shut-off sensor. This sensor detects ambient light levels and silences the cuckoo call when the room is dark, typically from 9:00 PM to 6:00 AM. This ensures undisturbed sleep.

5.4 Volume Control

A volume control switch is located on the side or back of the clock. It offers three settings:

- **ON (High)**: Full volume cuckoo sound.
- **LOW**: Reduced volume cuckoo sound.
- **OFF**: Silences the cuckoo sound completely. The clock will continue to keep time.

6. Maintenance

6.1 Cleaning

To clean the clock, gently wipe the wooden surfaces with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the finish.

6.2 Battery Replacement

Replace all three 'C' batteries when the clock begins to lose time or the cuckoo function becomes weak or stops. Always replace all batteries at the same time with new ones.

7. Troubleshooting

Problem	Possible Cause	Solution
Clock not keeping accurate time	Low batteries; minute hand not set correctly.	Replace all batteries. Re-set the time by gently turning the minute hand clockwise.
Cuckoo bird not emerging or singing	Low batteries; volume set to OFF; room is dark (night sensor active).	Replace all batteries. Check volume switch setting. Ensure the room has sufficient light for the sensor to activate.
Pendulum not swinging	Pendulum not properly attached or obstructed.	Ensure the pendulum is securely hooked and swings freely without obstruction.

8. Specifications

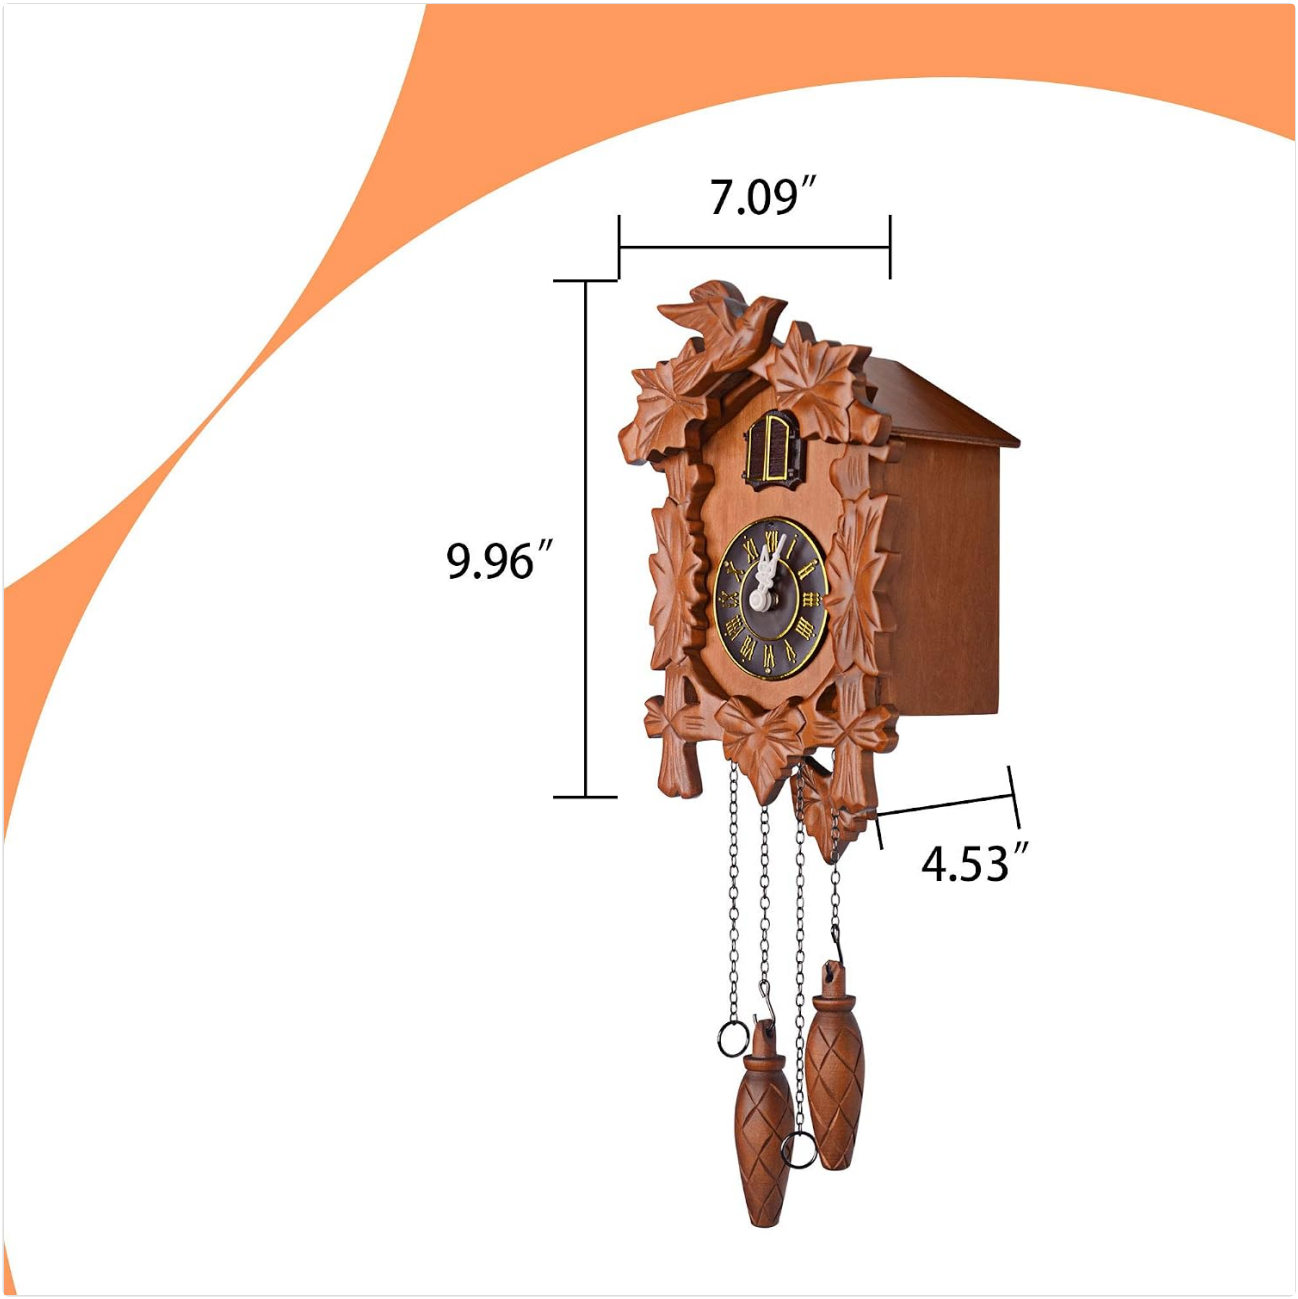

Image 8.1: Diagram illustrating the approximate dimensions of the cuckoo clock.

- **Brand:** Kendal
- **Model:** MX025 (SIMX025)
- **Material:** Linden Wood
- **Display Type:** Analog
- **Power Source:** 3 x 'C' Batteries (not included)
- **Special Features:** Automatic Night Shut-Off Sensor, Adjustable Volume
- **Product Dimensions:** Approximately 5.75" (W) x 11.5" (H) x 7" (D) (excluding pendulum and weights)
- **Item Weight:** Approximately 2 pounds
- **Mounting Type:** Wall Mount
- **UPC:** 737534199169

9. Warranty and Support

9.1 Warranty Information

This Kendal Cuckoo Clock comes with a one-year limited warranty from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please visit the official Kendal Store or contact customer service through your retailer. You can find more information at the Kendal Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00KEULBZO

More documents and user manuals: **https://manuals.plus/**