Manuals+
Q & A | Deep Search | Upload

V-ZUG GS60SLGdiBGRg

V-ZUG Adora 60 SL Dishwasher User Manual

Model: GS60SLGdiBGRg

1. Introduction

This user manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your V-ZUG Adora 60 SL Dishwasher, model GS60SLGdiBGRg. Please read this manual thoroughly before using the appliance for the first time and keep it for future reference.
The V-ZUG Adora 60 SL is a compact, built-in dishwasher designed for optimal cleaning performance with a low noise level of 42 dB. It features an LED display and offers multiple wash cycle options.

2. Safety Instructions

Always adhere to the following safety guidelines to prevent injury or damage to the appliance.

- Ensure the appliance is properly grounded before use.
- Do not allow children to operate or play with the dishwasher.
- Use only detergents and rinse aids specifically designed for automatic dishwashers.
- Avoid opening the door during operation, especially during the hot wash cycle.
- In case of malfunction, disconnect the appliance from the power supply and contact qualified service personnel.

3. Setup and Installation

The V-ZUG Adora 60 SL is designed for built-in installation. Proper installation is crucial for performance and safety.

3.1 Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any signs of transport damage. Report any damage immediately to your dealer.

3.2 Positioning and Leveling

Place the dishwasher in the desired location, ensuring it is level to prevent water leakage and ensure proper operation. Adjust the leveling feet as necessary.

3.3 Water and Electrical Connections

Connect the water inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Connect the power cord to a grounded electrical outlet. Refer to local regulations for electrical installation.

3.4 Dimensions

Refer to the diagram below for detailed installation dimensions.

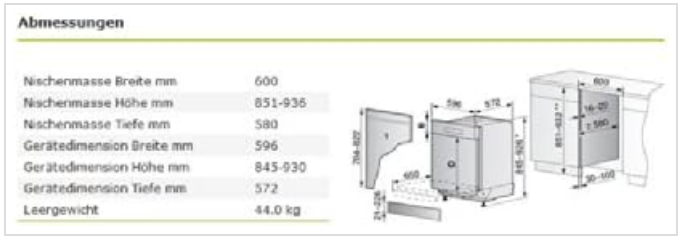

Abmessungen

Nischenmasse Breite mm	600
Nischenmasse Höhe mm	851-936
Nischenmasse Tiefe mm	580
Gerätedimension Breite mm	596
Gerätedimension Höhe mm	845-930
Gerätedimension Tiefe mm	572
Leergewicht	44.0 kg

Figure 3.4.1: Installation dimensions for the V-ZUG Adora 60 SL dishwasher. The diagram shows niche width (600 mm), niche height (851-936 mm), niche depth (580 mm), appliance width (596 mm), appliance height (845-930 mm), and appliance depth (572 mm). The empty weight is 44.0 kg.

4. Operating Instructions

This section guides you through the daily use of your V-ZUG Adora 60 SL dishwasher.

4.1 Control Panel Overview

The dishwasher features an LED display for easy program selection and status monitoring.

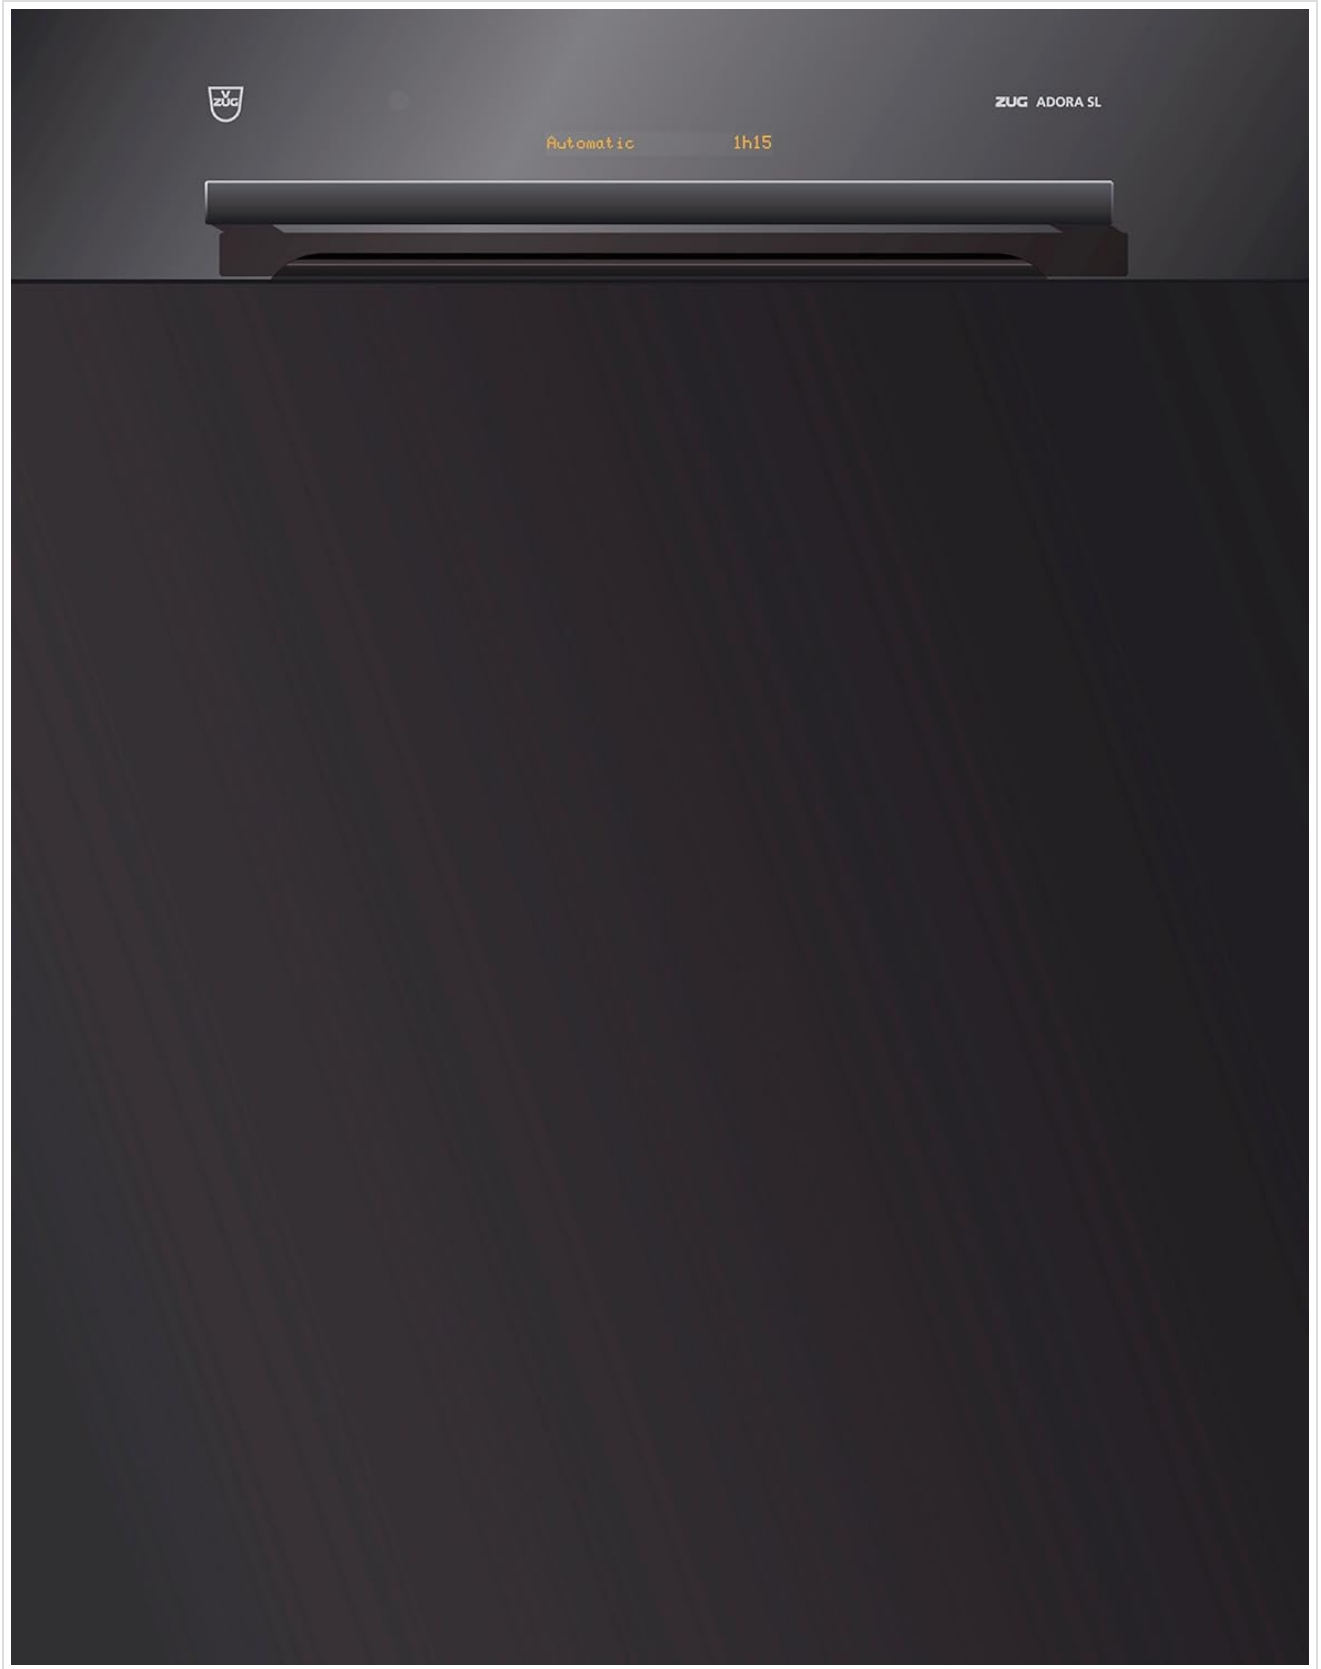

Figure 4.1.1: Front view of the V-ZUG Adora 60 SL dishwasher, showing the integrated LED display panel. The display shows "Automatic" and "1h15", indicating a selected program and remaining time. The V-ZUG logo is visible on the left, and "ZUG ADORA SL" on the right.

4.2 Loading the Dishwasher

Proper loading ensures optimal cleaning results. Place larger items in the lower basket and smaller items, including cutlery, in the upper basket or cutlery basket. The product includes a cutlery basket.

4.3 Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent. Check the rinse aid indicator and refill as needed to ensure streak-free drying.

4.4 Program Selection

The V-ZUG Adora 60 SL offers 6 cycle options, including:

- **Intensive Program:** For heavily soiled dishes.
- **Eco Program:** Energy-efficient cycle for normal loads.
- **Glass Program:** Gentle wash for delicate glassware.
- **Pre-rinse:** For rinsing dishes before a full wash cycle.
- Additional programs may be available via the LED display.

Select the desired program using the control panel. The LED display will show the selected program and estimated cycle time.

4.5 Starting a Wash Cycle

Close the dishwasher door firmly. Press the start button to begin the selected wash cycle.

5. Maintenance and Cleaning

Regular maintenance ensures the longevity and efficiency of your dishwasher.

5.1 Cleaning the Filters

The dishwasher's filter system should be cleaned regularly to prevent blockages and ensure effective cleaning. Remove the filters, rinse them under running water, and reassemble.

5.2 Cleaning the Spray Arms

Check the spray arm nozzles for any blockages. If necessary, remove the spray arms and clear any debris from the holes.

5.3 Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. For the interior, run a dishwasher cleaner cycle periodically to remove grease and limescale buildup.

6. Troubleshooting

This section provides solutions to common issues you might encounter.

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a program and press start.
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters.	Reload dishes correctly, clean spray arms, add more detergent, clean filters.
Water not draining	Clogged drain hose or filter, drain pump malfunction.	Clean filters, check drain hose for kinks or blockages. If problem persists, contact service.
Excessive noise	Improper loading, foreign object in pump, leveling issues.	Rearrange dishes, check for foreign objects, ensure dishwasher is level.

If the problem persists after attempting these solutions, please contact V-ZUG customer service.

7. Product Specifications

Detailed technical specifications for the V-ZUG Adora 60 SL Dishwasher (Model: GS60SLGdiBGRg).

Brand: V-ZUG

Model Name: GS60SLGdiBGRg

Model Number: GS60SLGdiBGRg (Article Number: 4104200302)

Installation Type: Built-in

Display Type: LED

Number of Settings: 4

Cycle Options: 6 (Intensive Program, Eco Program, Glass Program, Pre-rinse, etc.)

Noise Level: 42 dB

Color: Silver/Metallic

Material: Stainless Steel

Special Feature: Compact

Included Components: Cutlery basket

First Available Date: June 4, 2014

8. Warranty and Support

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official V-ZUG website. Ensure you have your model number (GS60SLGdiBGRg) and serial number ready when contacting support.

V-ZUG Official Website: www.vzug.com

© 2024 V-ZUG. All rights reserved.
This manual is for informational purposes only. V-ZUG reserves the right to make changes to products without prior notice.