Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Frigidaire 134625700

Frigidaire 134625700 Washing Machine Tube Unit

Installation and Care Manual

Introduction

This manual provides essential information for the proper installation and maintenance of the Frigidaire 134625700 Washing Machine Tube Unit. This component is a genuine replacement part designed to ensure the correct functioning of your washing machine's internal systems. Please read these instructions carefully before proceeding with installation or any maintenance.



Image 1: The Frigidaire 134625700 Washing Machine Tube Unit. This image displays the overall shape and connection points of the black plastic tube unit.

Installation

Safety First: Before beginning any installation or repair work, always disconnect the washing machine from its power source by unplugging it. Turn off the water supply to the washing machine. Failure to do so can result in electric shock, water damage, or personal injury.

1. **Access the Component:** Depending on your specific washing machine model, you may need to remove the back panel, top panel, or other access panels to reach the existing tube unit. Refer to your washing machine's service manual for precise access instructions.
2. **Drain Water:** Ensure all water is drained from the washing machine before removing any hoses or tubes.
3. **Disconnect Old Unit:** Carefully disconnect the old tube unit from its connections. Note the orientation and connection points to ensure the new unit is installed correctly. You may need basic tools such as screwdrivers or pliers.
4. **Install New Unit:** Position the new Frigidaire 134625700 tube unit in the same orientation as the old one. Secure

all connections firmly to prevent leaks. Ensure any clamps or fasteners are properly tightened.

5. **Reassemble:** Replace any panels or covers that were removed during the installation process.
6. **Test for Leaks:** Reconnect the water supply and power to the washing machine. Run a short cycle and carefully inspect all connections for any signs of leaks. Address any leaks immediately by tightening connections or re-seating the tube unit.

Operation

The Frigidaire 134625700 Washing Machine Tube Unit is a passive component that facilitates the flow of water within the washing machine's system. It does not require direct user operation. Its proper function is integral to the overall operation of the washing machine, ensuring efficient water management during wash and rinse cycles.

Maintenance

This tube unit is designed for durability and typically requires minimal maintenance. However, periodic inspection can help prevent future issues:

- **Visual Inspection:** During any other washing machine maintenance, visually inspect the tube unit for cracks, kinks, or signs of wear.
- **Leak Checks:** Regularly check around the tube unit and its connections for any signs of water leaks, especially after moving the appliance.
- **Cleaning:** If accessible and necessary, gently wipe down the exterior of the tube unit to remove any dust or debris. Avoid using harsh chemicals.

If any damage or persistent leaks are observed, the tube unit should be replaced to prevent further damage to the washing machine or surrounding area.

Troubleshooting

If you experience issues related to water flow or leaks after installing or while using your washing machine with this tube unit, consider the following:

- **Leaks at Connections:** Ensure all clamps and connections are securely tightened. The tube unit must be properly seated.
- **Kinked or Pinched Tube:** Verify that the tube unit is not kinked or pinched by other components or the washing machine casing, which could restrict water flow.
- **Incorrect Installation:** Double-check that the tube unit was installed in the correct orientation and position as the original part.
- **Damaged Unit:** Although unlikely for a new part, inspect the unit for any manufacturing defects or damage that may have occurred during shipping or installation.

If problems persist, it is recommended to consult a qualified appliance technician.

Specifications

- **Brand:** Frigidaire
- **Model Number:** 134625700
- **Part Type:** Washing Machine Tube Unit (Replacement Part)
- **Approximate Item Weight:** 6.4 ounces (181 grams)

- **Approximate Product Dimensions:** 1 x 8 x 9 inches (2.54 x 20.32 x 22.86 cm)

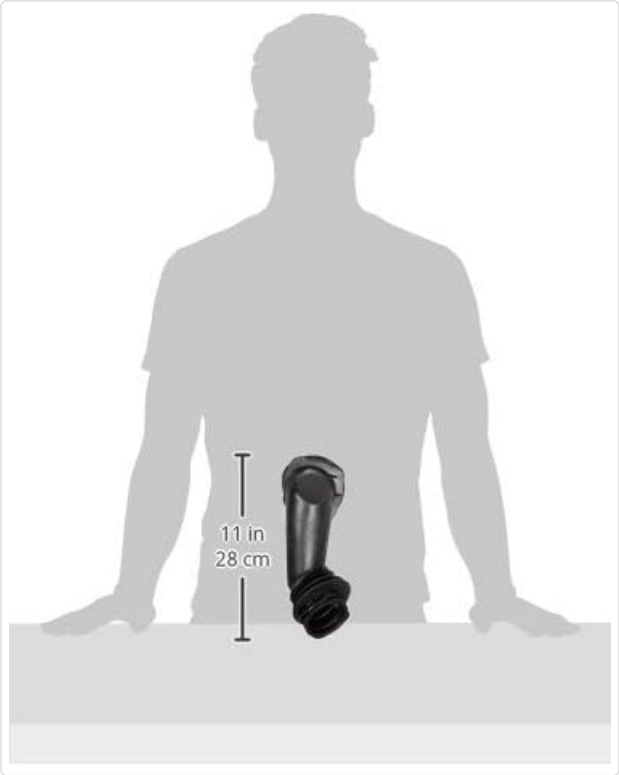

Image 2: The Frigidaire 134625700 Washing Machine Tube Unit shown with approximate dimensions for reference.

Warranty and Support

Specific warranty information for the Frigidaire 134625700 Washing Machine Tube Unit should be obtained from your original point of purchase or directly from Frigidaire. Please retain your purchase receipt for warranty claims. For technical support or further assistance, refer to the contact information provided by Frigidaire or your appliance service provider.

This manual is for informational purposes only. Always prioritize safety and consult a professional if unsure about any repair procedures.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B00PU17ATS

More documents and user manuals: **https://manuals.plus/**