TECLAST P80 android tablet 8 inch

TECLAST P80 Android Tablet User Manual

MODEL: P80 ANDROID TABLET 8 INCH

Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your TECLAST P80 Android Tablet. Please read this guide thoroughly before using your device to ensure optimal performance and longevity. The TECLAST P80 is an 8-inch Android tablet featuring a 1.6GHz Quad Core Processor, 2GB RAM, 32GB ROM, and a 1280x800 HD IPS Display, running on Android 10.

Setup

1. Initial Charging

Before first use, it is recommended to charge the tablet for at least 30 minutes. Connect the provided Type-C charging cable to the tablet's charging port and the other end to a compatible power adapter. The battery indicator on the screen will show charging status.

2. Powering On/Off

To power on, press and hold the Power button located on the side of the tablet until the TECLAST logo appears. To power off, press and hold the Power button until the power options menu appears, then select 'Power off'.

3. Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup wizard. Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account. If you encounter a "setup keeps stopping" message during Google account setup, you may skip this step and set up your account later from the tablet's settings.

4. Inserting a Micro SD Card (TF Expansion)

The tablet supports storage expansion via a Micro SD card. Locate the Micro SD card slot on the side of the tablet. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the card is oriented correctly to avoid damage.

Support Storage Expansion

The tablet comes with 2GB DDR4 RAM and 32GB eMMC5.1 storage,
which achieves higher performance while consuming less power.
It also has a MicroSD card slot for storage expansion.

2GB RAM   **32GB** ROM   **Micro SD** Expansion

This image illustrates the tablet's storage capabilities, including 2GB RAM, 32GB internal storage (ROM), and support for Micro SD card expansion.

Operating Instructions

1. Basic Navigation (Android 10)

Your tablet runs on Android 10, which supports gesture control. Swipe up from the bottom of the screen to go to the home screen, swipe up and hold for recent apps, and swipe from the left or right edge to go back. The operating system also includes a dark theme function for improved viewing comfort.
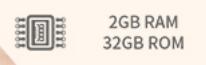
This image displays the Android 10 operating system interface, highlighting gesture control and dark theme capabilities across various applications.

2. Wi-Fi Connectivity

The tablet supports dual-band Wi-Fi (2.4G and 5G) for stable and fast internet connections. To connect, go to Settings > Network & internet > Wi-Fi, turn Wi-Fi on, and select your desired network from the list. Enter the password if prompted.
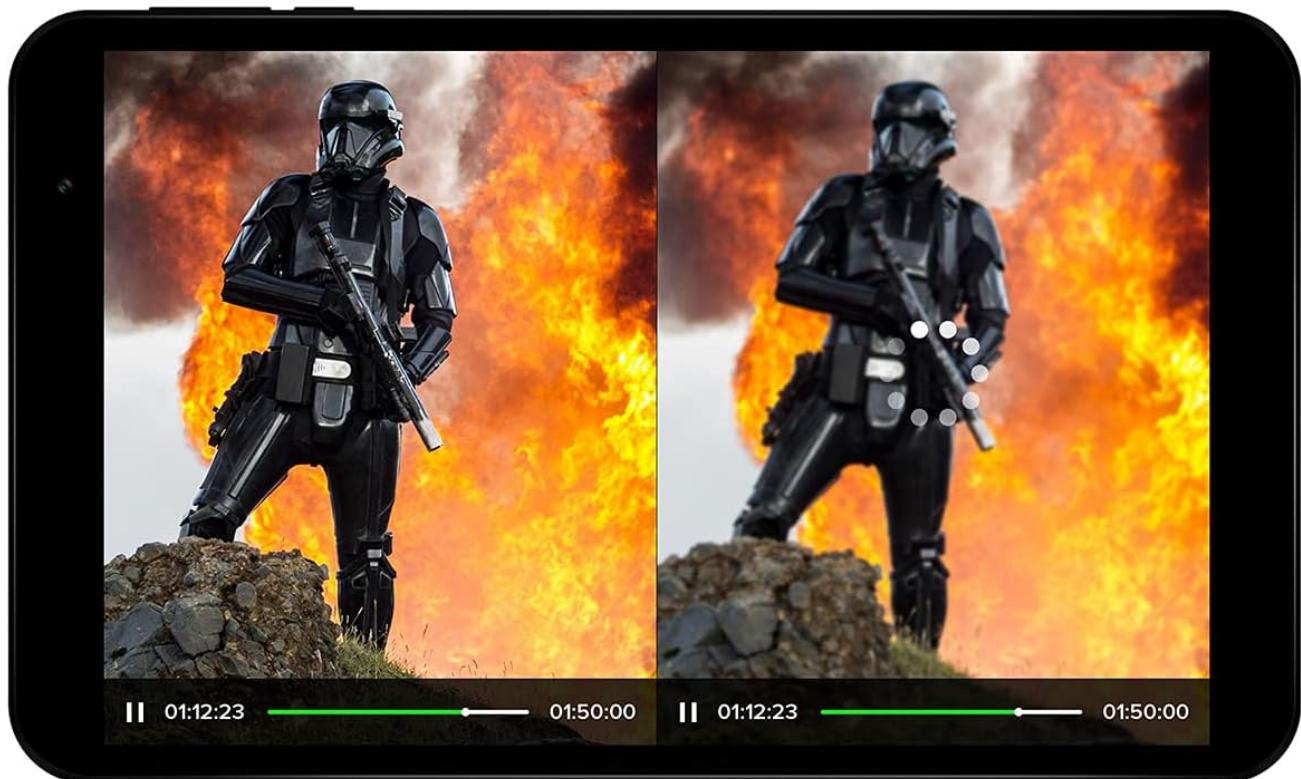
This image illustrates the tablet's support for both 2.4GHz and 5GHz Wi-Fi bands, emphasizing stable and fast connections for media consumption.

3. Bluetooth Pairing

To pair Bluetooth devices, navigate to Settings > Connected devices > Connection preferences > Bluetooth. Turn Bluetooth on, and the tablet will scan for available devices. Select the device you wish to pair and follow any on-screen instructions.

4. Display and Media

The 8-inch HD IPS display with 1280x800 resolution provides a wide viewing angle, enhancing your movie-watching and reading experience. Adjust brightness and display settings in the Display section of the Settings menu.

8-inch HD IPS Display Wide Viewing Angle

The tablet uses an 8-inch wide viewing angle IPS
screen with 1280×800 high-definition resolution and the 16:10 golden display ratio,
making your movie-watching experience better.

1280×800	8" IPS	Android 10
16:10	Wide Viewing Angle	OS

This image showcases the tablet's 8-inch HD IPS display, ideal for media consumption with its wide viewing angle and 1280x800 resolution.

5. Camera Usage

The tablet is equipped with a 2MP rear camera. To access the camera, tap the Camera icon on your home screen or app drawer. You can switch between photo and video modes and adjust basic settings within the camera application.

Maintenance

1. Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner. Avoid using harsh chemicals or abrasive materials.

2. Battery Care

To maximize battery life (approximately 8 hours on average), avoid exposing the tablet to extreme temperatures. It is recommended to keep the battery charge between 20% and 80% for optimal long-term health. Use only the

provided or certified charging accessories.

3. Software Updates

Regularly check for system updates to ensure your tablet has the latest features and security patches. Go to Settings > System > System update to check for and install available updates.

4. Storage Management

With 32GB of internal storage, you can manage your apps and files efficiently. Regularly clear cached data from apps and uninstall unused applications to free up space. Utilize the Micro SD card slot for additional storage of photos, videos, and documents.

Troubleshooting

- **Tablet not charging:** Ensure the charging cable is securely connected to both the tablet and the power adapter. Try a different power outlet or a different Type-C cable if available. If the issue persists, the charging port or battery may require service.

- **Tablet freezing or unresponsive:** Press and hold the Power button for about 10-15 seconds to force a restart. If the issue is frequent, consider uninstalling recently installed apps or performing a factory reset (see below).

- **Certain apps not available or crashing:** The tablet runs Android 10 Go Edition, which is optimized for devices with lower RAM. Some applications from the Google Play Store may not be compatible or may not run optimally on this version. Check the app's requirements or look for 'Go' versions of popular apps.

- **Wi-Fi connection issues:** Restart your tablet and your Wi-Fi router. Ensure you are within range of the Wi-Fi signal. Forget the network in Wi-Fi settings and reconnect.

- **Factory Reset:** If persistent issues occur, you may need to perform a factory reset.**Warning: This will erase all data on your tablet.** Go to Settings > System > Reset options > Erase all data (factory reset).

Specifications

Feature	Specification
Standing Screen Display Size	8 Inches
Max Screen Resolution	1280 x 800
Processor	1.3 GHz Allwinner A133 Quad Core
RAM	2 GB LPDDR3_SDRAM
Hard Drive / ROM	32 GB
Operating System	Android 10
Average Battery Life	8 Hours
Item Weight	1.54 pounds
Product Dimensions	8.2 x 4.7 x 0.35 inches
Rear Webcam Resolution	2 MP
Connectivity	2.4G+5G WiFi, Bluetooth 5.0, Type-C

A clear front view of the TECLAST P80 Android Tablet, showcasing its display.
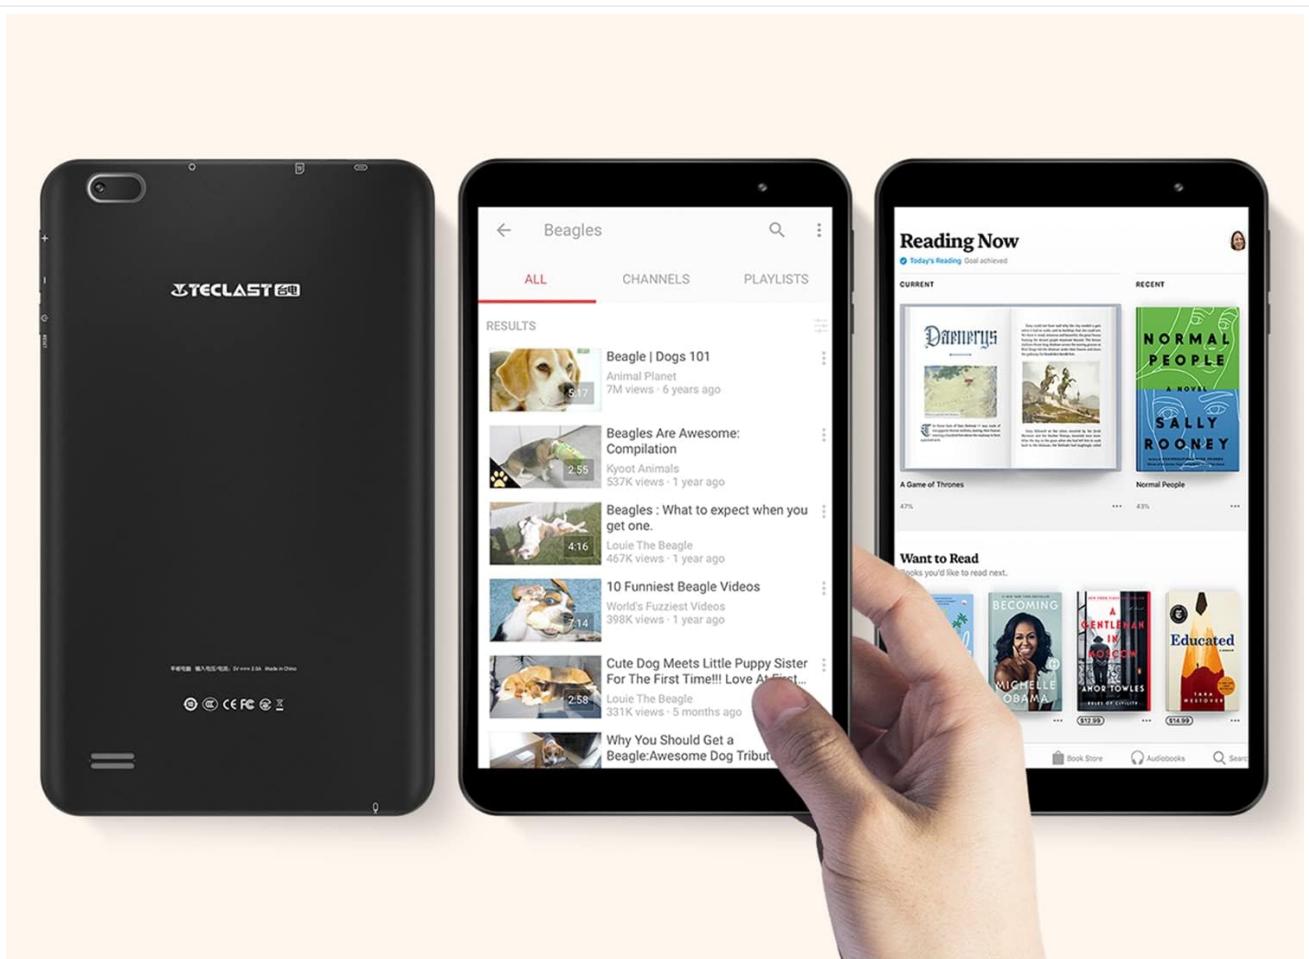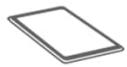
This image shows the rear design of the TECLAST P80 tablet and its versatility for different uses like video streaming and reading.

Warranty and Support

1. Warranty Information

Your TECLAST P80 Android Tablet comes with a 1-year warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims.

2. Customer Support

For technical assistance, warranty claims, or any other inquiries, please contact TECLAST customer support. You can typically find contact information on the official TECLAST website or through the retailer where you purchased the device. TECLAST aims to provide professional service and respond to inquiries within one working day.

Related Documents
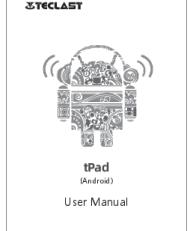
Tablet Teclast T60Plus 12" 8/256 GB Instrukcja obsługi TECLAST tPad (Android)	**Teclast T60Plus 12-inch Tablet User Manual and Specifications** Comprehensive user manual and specifications for the Teclast T60Plus 12-inch tablet, covering setup, features, connectivity, safety, and compliance.
tPad (Android) マニュアル	**Teclast tPad (Android) User Manual and Specifications** Comprehensive user manual and technical specifications for the Teclast tPad tablet running Android, covering setup, features, connectivity, and safety information.
User Manual TECLAST tPad (Android)	**TECLAST tPad Android User Manual & Setup Guide** Comprehensive user manual and setup guide for the TECLAST tPad Android tablet, covering initial setup, button functions, connectivity options, display and sound settings, and system management.
tPad (Android) User Manual	**TECLAST tPad (Android) User Manual: Setup, Features, and Specifications** Comprehensive user manual for the TECLAST tPad tablet running Android. Covers setup guide, button functions, connectivity options, display and sound settings, PC connection, application management, security, and charger specifications.