Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DURACELL 448696

Duracell 2430 3V Lithium Coin Battery Instruction Manual

Model: 448696

Product Overview

The Duracell 2430 3V Lithium Coin Battery (Model 448696) is designed to provide reliable, long-lasting power for a variety of specialty electronic devices. These batteries are suitable for use in items such as glucometers, calculators, car remotes, and other small electronic devices requiring a 3-volt coin cell battery.
This product features child-resistant packaging for enhanced safety. Each pack contains one Duracell DL2430/CR2430 lithium battery.

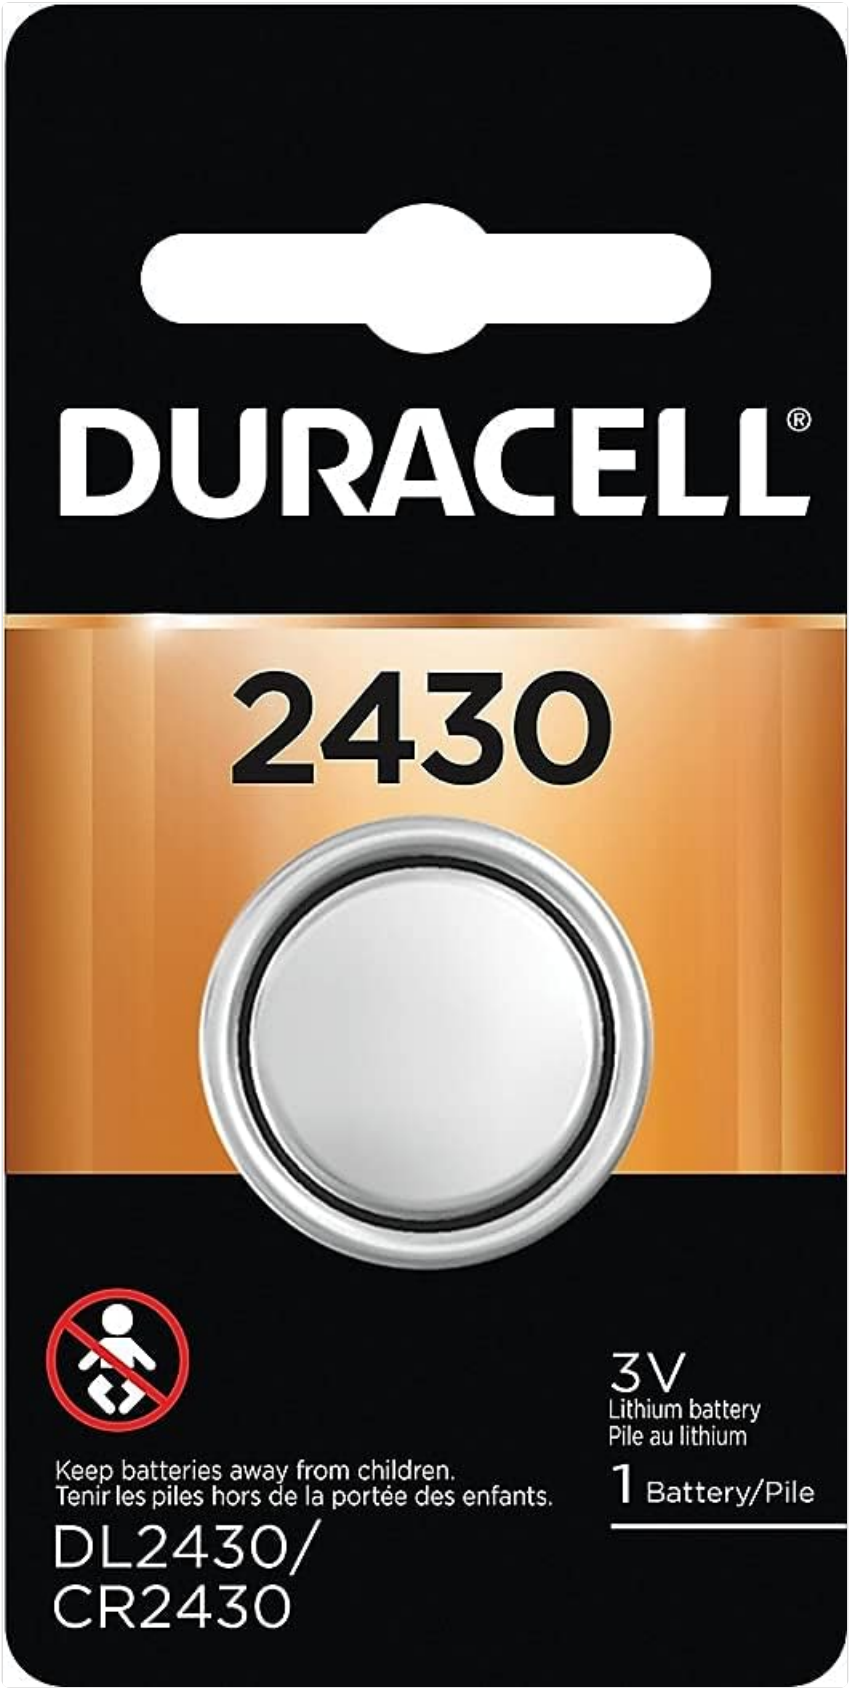

Image: Front view of the Duracell 2430 3V Lithium Coin Battery in its sealed, child-resistant packaging, showing the battery type and voltage.

Important Safety Information

WARNING: Keep batteries away from children. If swallowed, consult a physician at once. Ingestion may lead to serious injury or death.
For information on treatment, call **1-800-498-8668**.

- Battery can explode or leak if heated, disassembled, shorted, recharged, exposed to fire or high temperature, or

inserted incorrectly.

- Keep in original packaging until ready to use.
- Do not carry batteries loose in your pocket or purse to prevent short-circuiting.



Image: Rear view of the Duracell 2430 battery packaging, displaying detailed safety warnings, customer service contact information, and manufacturing details in multiple languages.

Perchlorate Material: Special handling may apply. For more information, please visit www.dtsc.ca.gov/hazardouswaste/perchlorate.

Setup and Installation

Duracell 2430 lithium coin batteries are designed for easy installation in compatible devices. Always refer to your device's instruction manual for specific battery replacement procedures.

1. **Identify Battery Compartment:** Locate the battery compartment on your device. This is often secured with a small screw or latch.
2. **Open Compartment:** Carefully open the battery compartment. Use appropriate tools if necessary (e.g., a small screwdriver for secured compartments).
3. **Remove Old Battery (if applicable):** If replacing an old battery, note its orientation (+/- terminals) before removal. Dispose of old batteries responsibly according to local regulations.
4. **Insert New Battery:** Insert the new Duracell 2430 battery, ensuring the positive (+) side aligns with the positive terminal in the device's compartment. The positive side is typically marked on the battery itself.
5. **Close Compartment:** Securely close the battery compartment. Ensure it is properly latched or screwed back into place to prevent accidental opening.

Note: The child-resistant packaging requires scissors to open. Cut along the dotted line on the back of the package to access the battery.

Operating Guidelines

Once installed, the Duracell 2430 battery will power your device. These batteries are commonly used in:

- Calculators
- Car remotes/key fobs
- Glucometers and other medical devices
- Small electronic toys
- Watches and fitness trackers
- Smart home devices (e.g., sensors)
- Flashlights



Image: An illustration showing various devices such as a security camera, smart home control panel, flashlight, and smartwatch, indicating common applications for Duracell batteries.

Ensure your device is compatible with a CR2430 or DL2430 3V lithium coin battery for optimal performance.

Maintenance and Storage

Proper handling and storage can extend the life and ensure the safety of your Duracell 2430 batteries.

- **Storage:** Store unused batteries in their original, sealed packaging in a cool, dry place at room temperature. Avoid extreme temperatures.
- **Shelf Life:** Duracell 2430 batteries are guaranteed to hold power for up to 10 years in storage.
- **Disposal:** Dispose of used batteries according to local regulations. Many communities have recycling programs for batteries. Do not dispose of batteries in household trash or by incineration.
- **Handling:** Avoid touching the battery terminals with bare hands, as oils and dirt can affect performance. Use clean, dry hands or gloves when handling.



Image: A graphic highlighting the Duracell guarantee of 10 years of power retention when stored properly.

Troubleshooting

If your device is not functioning after installing a new Duracell 2430 battery, consider the following:

- **Correct Orientation:** Double-check that the battery is inserted with the correct polarity (+ and - terminals aligned as indicated in the device).
- **Secure Connection:** Ensure the battery is seated firmly in its compartment and making proper contact with the device's terminals.
- **Device Issue:** Test the device with another known-good battery if possible, or test the battery in another compatible device, to determine if the issue is with the battery or the device itself.
- **Battery Life:** If the battery has been stored for an extended period or is nearing its shelf life, it may have reduced capacity.

If problems persist, consult your device's user manual or contact the device manufacturer for further assistance.

Specifications

Attribute	Detail
Model Number	448696 (DL2430bpk)
Battery Type	Lithium Coin Cell
Voltage	3 Volts
Battery Cell Composition	Lithium Manganese Dioxide
Unit Count	1 Count
Product Dimensions	3 x 3.5 x 3.5 inches (Packaging)
Item Weight	0.317 ounces
Manufacturer	DURACELL
Date First Available	July 15, 2015

Customer Support and Warranty

For product inquiries or assistance, please contact Duracell Customer Service:

Customer Service Number: 1-800-551-2355

Hours of Operation: 9:00 AM - 5:00 PM E.S.T.

Website: www.duracell.com

Duracell batteries are designed for long-lasting performance. The Duracell 2430 Lithium Coin Battery is guaranteed to hold power for up to 10 years in storage under normal conditions.

Manufacturer Address: DURACELL, Bethel, CT 06801, PO Box 37/B.P. 37, Station A/Succursale A, Etobicoke, Ontario, M9C4V2

This product contains batteries from foreign countries as marked on the battery itself.

© 2018 DURACELL

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B011NB1YTK

More documents and user manuals: **https://manuals.plus/**