Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BG5010

Braun BG5010 Wet/Dry Body Groomer User Manual

Model: BG5010

1. Introduction

This manual provides comprehensive instructions for the safe and effective use of your Braun BG5010 Wet/Dry Body Groomer. Please read all instructions carefully before using the appliance and retain this manual for future reference.



Figure 1: Braun BG5010 Wet/Dry Body Groomer. This image displays the main unit of the body groomer, featuring its ergonomic black design with a blue accent button and a Gillette Fusion razor cartridge attached at the top.

2. Important Safety Information

- This appliance is suitable for use in a bath or shower.
- Do not use the appliance with a damaged foil or comb, as this may result in injury.
- Keep the appliance dry when charging.
- Do not open the appliance.
- This appliance contains batteries that are non-replaceable.
- The appliance is equipped with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without

supervision.

3. Product Components

The Braun BG5010 Body Groomer comes with several components designed for versatile grooming.



Figure 2: All components included with the Braun BG5010 Body Groomer. This image shows the main groomer unit, a charging stand, a protective cap, a cleaning brush, and three trimming combs (long, medium, and sensitive).

Included Items:

- Braun BG5010 Body Groomer Unit
- Charging Stand
- Protective Cap
- Cleaning Brush
- Trimming Comb (Long - 8mm)
- Trimming Comb (Medium - 3mm)

- Trimming Comb (Sensitive - 0.6mm)
- Gillette Fusion Razor Cartridge (integrated)

4. Setup and Charging

4.1 Initial Charge

Before first use, fully charge your body groomer. Connect the special cord set to the charging stand and plug it into an electrical outlet (100-240V). Place the groomer in the charging stand. A full charge typically takes approximately 14 hours and provides up to 50 minutes of cordless operation.

4.2 Attaching Trimming Combs

To attach a trimming comb, align the comb with the groomer head and press it down until it clicks into place. To remove, gently pull the comb upwards from the groomer head.

- **Long Comb:** For trimming longer hair (8mm).
- **Medium Comb:** For general trimming (3mm).
- **Sensitive Comb:** Specifically designed for delicate areas like the armpit or groin (0.6mm).

5. Operating Instructions

5.1 Powering On/Off

Press the power button located on the handle to turn the groomer on or off.

5.2 Trimming

Attach the desired trimming comb. Hold the groomer against your skin and move it slowly against the direction of hair growth. The three trimming combs allow for different lengths: 0.6mm (sensitive), 3mm (medium), and 8mm (long).



Figure 3: Application of the groomer for armpit hair. This image shows a man using the Braun BG5010 Body Groomer to trim hair in his armpit area, demonstrating its use for sensitive regions.



Figure 4: Application of the groomer for torso hair. This image shows a man using the Braun BG5010 Body Groomer on his torso, illustrating its use for larger body areas.

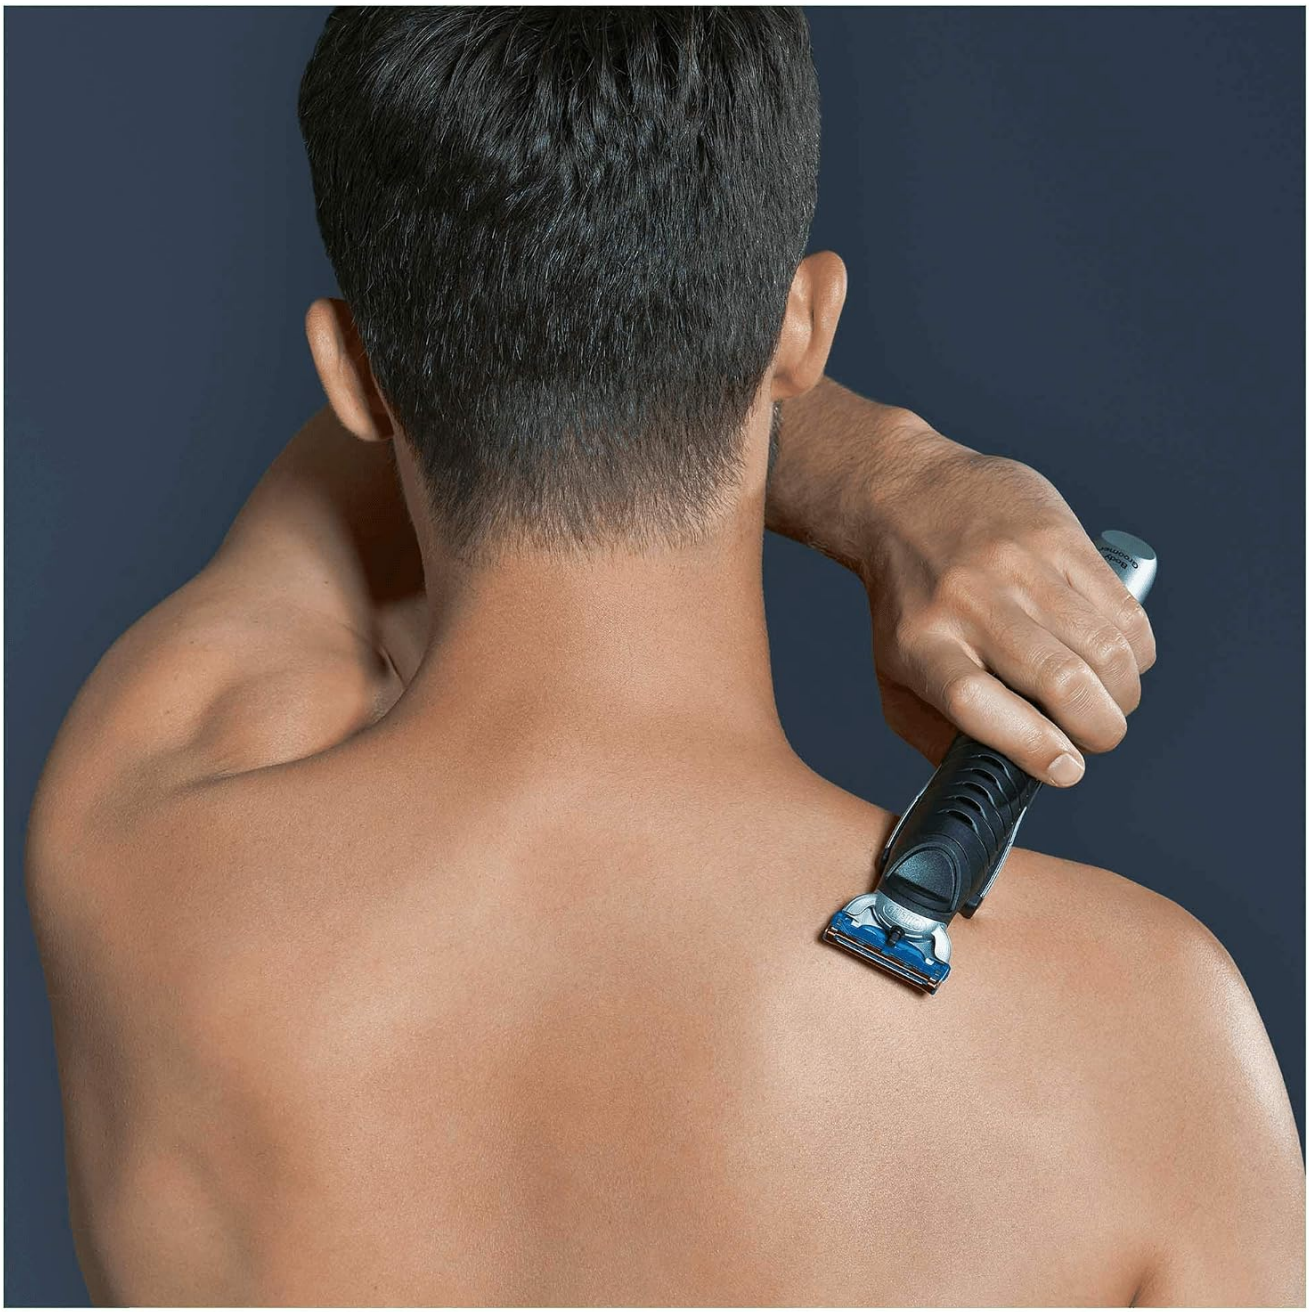

Figure 5: Application of the groomer for back hair. This image shows a man using the Braun BG5010 Body Groomer on his back, demonstrating its reach and versatility for various body parts.

5.3 Shaving (Gillette Fusion)

The integrated Gillette Fusion wetshaving technology allows for a close shave. For best results, use with shaving foam or gel on wet skin. Move the razor gently over the skin in the direction of hair growth.

5.4 Combi Mode (Trim and Shave)

The Combi mode allows you to trim and shave in one stroke for fast and convenient results. This is achieved by the design that combines the powered trimmer with the Gillette Fusion razor.

5.5 Wet & Dry Use

The Braun BG5010 is designed for both wet and dry use. It can be safely used in the shower or bath for added convenience.



Figure 6: Braun BG5010 Body Groomer being used under running water. This image demonstrates the groomer's wet and dry capability, showing it being rinsed or used in a shower environment.

6. Maintenance and Cleaning

6.1 Cleaning the Groomer Head

After each use, turn off the groomer and remove any attached comb. Rinse the groomer head and the comb under warm running water. You can also use the provided cleaning brush to remove stubborn hair particles from the trimmer blades.

6.2 Cleaning the Gillette Fusion Cartridge

Rinse the Gillette Fusion cartridge thoroughly under running water. Do not tap the cartridge against a hard surface, as this may damage the blades.

6.3 Storage

Ensure the groomer is dry before storing. Store the appliance in a cool, dry place, preferably with the protective cap attached to the groomer head.

7. Troubleshooting

Problem	Possible Cause	Solution
Groomer does not turn on.	Battery is discharged.	Charge the groomer for at least 14 hours.
Reduced trimming performance.	Hair accumulation in the trimmer head or dull blades.	Clean the trimmer head thoroughly. If performance does not improve, the trimmer blades may need replacement (contact customer support for availability).
Gillette Fusion cartridge feels dull.	Worn out razor blades.	Replace the Gillette Fusion cartridge.
Groomer makes unusual noise.	Foreign object in the trimmer head or internal issue.	Turn off and clean the trimmer head. If the noise persists, discontinue use and contact customer support.

8. Specifications

Model: BG5010

Manufacturer: Braun

Power Source: Battery Powered (Cordless)

Battery Type: Lithium Polymer (non-replaceable)

Charging Time: Approximately 14 hours

Operating Time: Up to 50 minutes (cordless)

Input Voltage: 100-240 V

Color: Black

Blade Material: Stainless Steel

Head Type: Foil (Trimmer) / Cartridge (Razor)

Product Dimensions: 6.2 x 15.5 x 22.2 cm

Item Weight: 510 g

Recommended Uses: Armpit, Body

Special Feature: Wet & Dry use

9. Warranty and Support

The Braun BG5010 Wet/Dry Body Groomer comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.
For technical support, service, or warranty inquiries, please refer to the contact information provided in your product packaging or visit the official Braun website. Do not attempt to repair the appliance yourself.
Manufacturer: Braun

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B019FELD48

More documents and user manuals: **https://manuals.plus/**