Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Dupad story MX3 Pro

Dupad story MX3 Pro Voice Mini Keyboard Instruction Manual

Model: MX3 Pro

1. Introduction and Overview

The Dupad story MX3 Pro is a versatile 2.4G RF wireless remote control that combines an air mouse, a mini keyboard, and IR learning functions. It is designed to enhance your control experience across various devices.

Key Features:

- **2.4G RF Wireless Technology:** Provides stable and powerful connection up to 10 meters (394 inches), though actual range may vary with environment.
- **6-Axis Gyration Motion System:** Incorporates 3-Gyro + 3-G Sensor for accurate motion sensing control, ideal for air mouse functionality and motion-sensing games.
- **Mini QWERTY Keyboard:** Features 38 keys, allowing input of all characters. Press the "Alt" key to switch between punctuation and letter characters.
- **Voice Input:** Built-in microphone for voice input. Note that this function works for built-in voice input search boxes or compatible applications and does not operate like an Alexa Voice Remote across all apps.
- **LED Backlight:** Double-faced design with LED backlight for easy typing and visibility in dark environments.
- **IR Learning Function:** Five programmable IR learning keys allow you to learn and control common functions of your TV.
- **Wide Compatibility:** Supports Windows, Android, Mac OS, and Linux systems. Applicable to Android TV Box, Mini PC, Smart TV, Projector, HTPC, and All-in-one PC/TV.

Important Note: This device is not compatible with most Samsung, Sony, LG, TCL, and Roku Smart TVs.

2. Setup

2.1 Package Contents

- 1 x 2.4G Keyboard with IR Remote (MX3 Pro)

- 1 x USB Wireless Receiver
- 1 x User Manual


Note: The product does not include 2x AAA batteries.

2.2 Battery Installation

1. Locate the battery compartment on the back of the remote.
2. Open the battery cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.

2.3 Connecting the USB Receiver

The MX3 Pro operates on a plug-and-play basis. Simply insert the USB wireless receiver into an available USB port on your compatible device (e.g., Android TV Box, PC, Projector). The device will automatically install the necessary drivers.

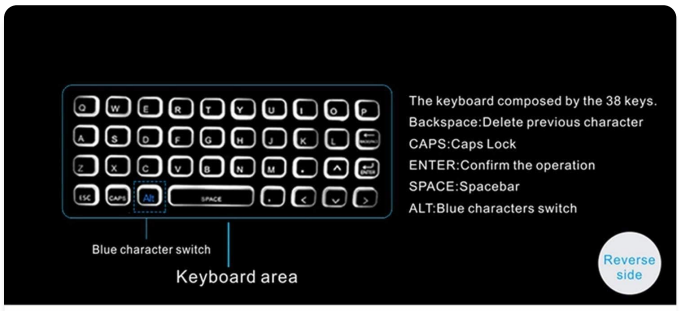

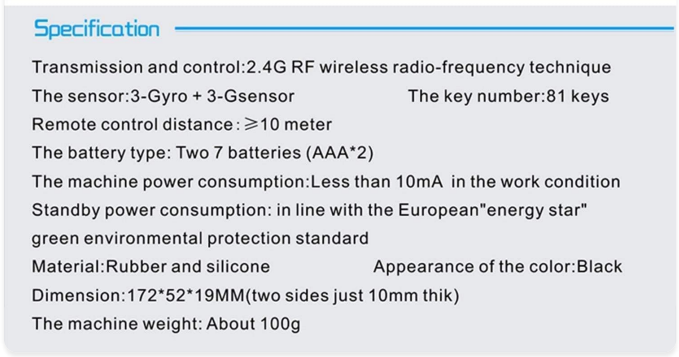


Image: The MX3 Pro remote control shown alongside its compact USB wireless receiver.

2.4 IR Learning Function

The MX3 Pro allows you to program five keys to learn infrared signals from your existing TV remote control.

1. Long press the **TV** button on the MX3 Pro. The LED light will change from fast flashing to slow flashing, indicating the remote has entered IR learning mode.
2. Align the infrared transmitters of the MX3 Pro and your TV remote control.
3. Press the **POWER** button (or the desired function button) on your TV remote control. The LED on the MX3 Pro will light up, confirming it has received the infrared code.
4. While the LED is lit, click the specific key on the MX3 Pro that you wish to program. The LED light will then become slow flashing, signifying that the MX3 Pro has successfully learned the code value for that key.
5. After successful learning, press the **TV** button again to exit the IR learning mode. The LED will stop lighting.



Image: The MX3 Pro remote control being used to interact with a television, illustrating its IR learning capability.

3. Operating Instructions

3.1 Air Mouse Functionality

The MX3 Pro features an air mouse function, allowing you to control the cursor on your screen by moving the remote in the air.

- To activate the air mouse, simply pick up the remote and move it. The cursor will appear on your screen.
- To stop the air mouse movement and lock the cursor, press the dedicated mouse toggle button (often indicated by a mouse icon). Press it again to reactivate the air mouse.
- The 6-axis gyration system provides precise control for navigation and selection.

3.2 Mini Keyboard Usage

The reverse side of the MX3 Pro houses a full QWERTY mini keyboard for convenient text input.

- Flip the remote to access the keyboard. The backlight will illuminate the keys for visibility.
- Type as you would on a standard keyboard.
- Use the **Alt** key to access blue-colored characters or symbols.
- The **Backspace** key deletes the previous character.
- The **CAPS** key toggles Caps Lock.
- The **ENTER** key confirms operations.
- The **SPACE** key inserts a space.



Image: The MX3 Pro remote displaying its QWERTY keyboard on one side, with icons indicating compatibility with various operating systems and devices.

3.3 Voice Input

The built-in microphone allows for voice commands and text input in supported applications.

- Press the dedicated voice input button (often indicated by a microphone icon) to activate the microphone.
- Speak clearly into the remote.
- The voice input function is designed for built-in search boxes or specific applications that support this feature. It may not function as a universal voice assistant across all applications or operating systems.



Image: The MX3 Pro remote control, highlighting its built-in microphone for voice input capabilities.

4. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or the LED indicator suggests low power. Always use new AAA batteries and dispose of old batteries responsibly.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. Troubleshooting

- **Remote Not Responding:**
  - Ensure batteries are correctly installed and not depleted. Replace if necessary.
  - Verify the USB receiver is securely plugged into the device.
  - Try plugging the USB receiver into a different USB port.
  - Ensure the remote is within the 10-meter operating range of the USB receiver.
- **Air Mouse Cursor Freezes or is Unresponsive:**
  - Press the mouse toggle button to ensure the air mouse is active.
  - For Android 6.0 TV boxes, enable the "Always Awake" setting in Developer Options to prevent the device from powering down the USB receiver during inactivity.
  - If the issue persists after restarting the TV box, try unplugging and re-plugging the USB receiver.
- **Voice Input Not Working:**
  - Confirm that the application you are using supports voice input from external devices.
  - The voice search function is not designed to work like an Alexa Voice Remote across all applications; it primarily functions within built-in search boxes or compatible apps.
- **IR Learning Fails:**
  - Ensure the infrared transmitters of both remotes are closely aligned during the learning process.
  - Repeat the IR learning steps carefully.
- **Some Keys Not Functioning:**
  - As a universal controller, some keys may be assigned for other systems and devices and might not be functional on all compatible devices.
  - Check your device's settings for any remote control customization options.

6. Specifications

Feature	Detail
Brand	Dupad story
Model Name	MX3 Pro
Model Number	MX3
Transmission & Control	2.4G RF Wireless Radio-Frequency Technique
Sensor	3-Gyro + 3-Gsensor

Number of Keys	81 keys
Control Distance	Up to 10m
Battery Type	2 x AAA batteries (not included)
Working Power	Less than 10mA
Material	Plastic and Silicone
Dimensions	172 x 52 x 19mm
Weight	Approximately 100g (0.22 Pounds)
Connectivity Technology	Infrared, USB
Special Features	Backlit, Voice Search, IR Learning
Compatible Devices	Television, Android TV Box, Mini PC, Smart TV, Projector, HTPC, All-in-one PC/TV (Windows/Android/Mac OS/Linux)

7. Warranty and Support

The Dupad story MX3 Pro comes with an unconditional 30-day money-back guarantee and lifetime after-sales service. If you encounter any issues or are not satisfied with your air mouse remote control, please do not hesitate to contact Dupad story customer support for assistance. Your purchasing experience is important to us.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01DA0Y7SW

More documents and user manuals: **https://manuals.plus/**