Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Briggs & Stratton 6337

Briggs & Stratton 14 Inch Rotating Jet Surface Cleaner

Model: 6337

Introduction

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Briggs & Stratton 14 Inch Rotating Jet Surface Cleaner. Please read this manual thoroughly before initial use and retain it for future reference.

Safety Information

Always observe basic safety precautions when using this product to reduce the risk of injury or damage. This surface cleaner is designed for use with electric pressure washers up to 2200 PSI. Exceeding this pressure may cause damage to the unit or personal injury.

- Always wear appropriate personal protective equipment, including eye protection.
- Ensure all connections are secure before operating.
- Do not direct the spray at people, pets, or electrical devices.
- Keep children and bystanders away from the operating area.
- Disconnect the surface cleaner from the pressure washer when not in use or before performing maintenance.

Components Overview

The Briggs & Stratton 14 Inch Rotating Jet Surface Cleaner is designed for efficient cleaning of large flat surfaces. Key components include:

- **Surface Cleaner Housing:** The dome-shaped cover that contains the rotating jets and controls overspray.
- **Rotating Spray Bar:** Equipped with two 15-degree spray tips for powerful, streak-free cleaning.
- **Quick Connect Inlet:** For easy attachment to quick connect wands.
- **Integrated Detergent Tank:** Allows for direct application of cleaning solutions.



Figure 1: Main view of the Briggs & Stratton 14 Inch Rotating Jet Surface Cleaner.

This image displays the complete surface cleaner unit, highlighting its compact, dome-shaped design and the quick-connect fitting at the top.

Setup

1. **Connect to Pressure Washer:** Attach the surface cleaner's quick connect inlet to your pressure washer's quick connect wand. Ensure it clicks securely into place.
2. **Fill Detergent Tank (Optional):** If using detergent, unscrew the cap on the integrated detergent tank and fill with an appropriate pressure washer detergent. Do not overfill. Securely replace the cap.
3. **Connect Water Supply:** Connect your pressure washer to a suitable water source and turn on the water.
4. **Start Pressure Washer:** Follow your pressure washer's instructions to start the unit and build pressure.



Figure 2: Surface cleaner attached to a pressure washer wand, ready for use.

This image shows the surface cleaner connected to a pressure washer wand, demonstrating the ease of attachment for immediate operation.

Operating Instructions

The Briggs & Stratton Surface Cleaner is designed to clean large areas efficiently and without streaking.

1. **Initial Spray:** Before placing the unit on the surface, briefly squeeze the pressure washer trigger to ensure water flow and proper function of the rotating jets.
2. **Positioning:** Place the surface cleaner flat on the area to be cleaned. The dome design helps contain overspray.
3. **Cleaning Motion:** Move the surface cleaner slowly and steadily across the surface in overlapping passes. Avoid lifting the unit off the surface during operation to maintain consistent cleaning and prevent streaking. The rotating jets clean up to 4 times faster than a standard nozzle.
4. **Detergent Application:** If using the integrated detergent tank, the detergent will be automatically applied during operation.
5. **Rinsing:** For best results, after cleaning an area with detergent, remove the surface cleaner and rinse the area thoroughly with a standard pressure washer nozzle to remove loosened dirt and detergent residue.

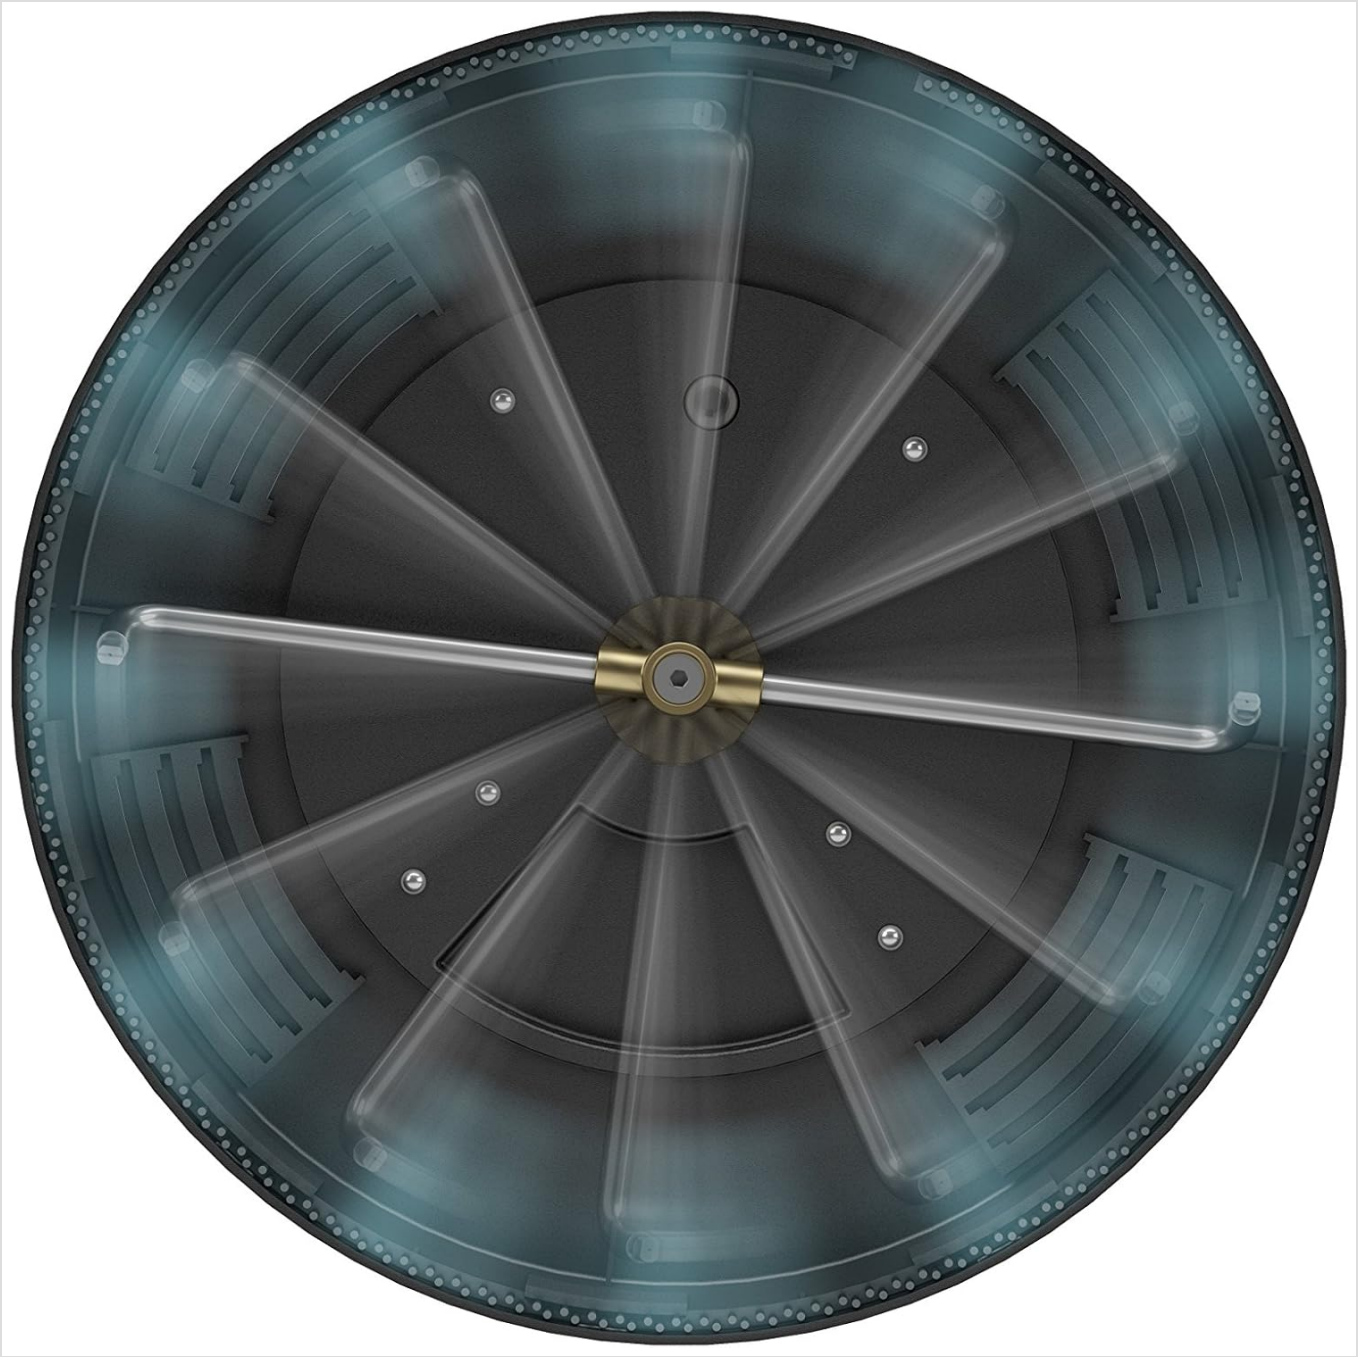


Figure 3: Surface cleaner actively cleaning a concrete pathway.

This image illustrates the surface cleaner in operation, effectively cleaning a concrete path and demonstrating its ability to cover wide areas.



Figure 4: Underside view of the surface cleaner, showing the rotating spray bar.

This image provides a view of the underside of the surface cleaner, clearly showing the rotating spray bar with its two high-pressure nozzles, which are responsible for the efficient cleaning action.

Maintenance

Regular maintenance ensures optimal performance and extends the life of your surface cleaner.

- **After Each Use:** Rinse the surface cleaner thoroughly with clean water to remove any dirt, debris, or detergent residue.
- **Nozzle Cleaning:** Periodically check the spray tips for clogs. Use a small wire or nozzle cleaning tool (often supplied with pressure washers) to clear any obstructions.
- **Storage:** Store the unit in a clean, dry, and frost-free environment. Do not store with detergent in the tank for extended periods.

Troubleshooting

Problem	Possible Cause	Solution
Reduced cleaning power or no rotation	Clogged spray tips or low pressure washer output.	Clean spray tips. Ensure pressure washer is operating at optimal pressure (up to 2200 PSI). Check water supply.
Streaking on surface	Moving too fast or uneven passes.	Slow down movement and ensure consistent, overlapping passes.
Detergent not dispensing	Detergent tank empty or clogged.	Refill detergent tank. Check for clogs in the detergent line or nozzle.

Specifications

Brand: Briggs & Stratton

Model Number: 6337

Product Dimensions: 18.3"L x 5.9"W x 18.3"H

Item Weight: 2.9 Pounds

Maximum Pressure: 2200 PSI (Pound per Square Inch)

Color: Black

Warranty and Support

For detailed warranty information, product registration, or technical support, please refer to the official Briggs & Stratton website or contact their customer service directly. Keep your purchase receipt as proof of purchase for warranty claims.
Online Support: Visit the official Briggs & Stratton website for FAQs, product manuals, and service center locators.
Customer Service: Refer to your product packaging or the Briggs & Stratton website for current contact information.

© 2024 Briggs & Stratton. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01F51BUOI

More documents and user manuals: **https://manuals.plus/**