Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Outsunny 84A-011

Outsunny Outdoor Glider Bench User Manual

Model: 84A-011

1. Introduction

Thank you for choosing the Outsunny Outdoor Glider Bench with Center Table. This two-person loveseat is designed for comfortable outdoor relaxation, featuring a smooth gliding mechanism and a convenient integrated table. Constructed with a durable metal frame and breathable mesh fabric, it is suitable for various outdoor settings such as patios, gardens, and porches.

This manual provides essential information for the safe assembly, operation, and maintenance of your glider bench. Please read it thoroughly before assembly and retain it for future reference.

2. Safety Guidelines

- Always follow assembly instructions carefully to avoid injury.
- Ensure all bolts and nuts are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the maximum weight capacity of 363 lbs per seat (726 lbs total).
- Place the glider bench on a flat, stable, and level surface to prevent tipping.
- Keep the product out of snow to extend its service life.
- Avoid placing hot items directly on the tempered glass table without protection.
- This product may expose you to chemicals known to the State of California to cause cancer or birth defects or other reproductive harm. For more information, visit www.P65Warnings.ca.gov.

3. Package Contents

Please verify that all parts listed below are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support immediately.

Component List

Item	Description	Quantity
A	Left Seat Frame	1
B	Right Seat Frame	1
C	Center Table Frame with Glass Top	1
D	Main Base Frame	1
E	Hardware Pack (Bolts, Washers, Nuts, Allen Wrench)	1

4. Assembly Instructions

Assembly typically requires two adults. Please refer to the detailed diagrams and instructions provided in the official User Guide PDF for precise steps and hardware identification. A link to the PDF is provided in the Warranty & Support section.

General Assembly Steps:

1. Unpack all components and lay them out on a soft, clean surface to prevent scratches. Verify all parts are present against the component list.
2. Assemble the main base frame (D) according to the instructions, ensuring all connections are secure but not fully tightened yet.
3. Attach the left (A) and right (B) seat frames to the main base frame (D). Pay close attention to the orientation of the seat frames and armrests.
4. Integrate the center table frame (C) between the two seat frames. Ensure the tempered glass top is securely seated.
5. Once all major components are connected, gradually tighten all bolts and nuts using the provided Allen wrench. Do not overtighten.
6. Test the gliding mechanism to ensure smooth operation.



Figure 4.1: Fully assembled Outsunny Outdoor Glider Bench.



Figure 4.2: Detailed dimensions of the glider bench.

5. Initial Setup and Placement

After assembly, choose an appropriate location for your glider bench. Consider the following:

- **Level Surface:** Always place the glider on a firm, level surface to ensure stability and proper gliding motion.
- **Clearance:** Ensure there is sufficient space around the bench for the gliding motion, both front and back, to avoid hitting walls or other objects.
- **Weather Protection:** While designed for outdoor use, prolonged exposure to extreme weather conditions (heavy rain, snow, strong winds) can reduce its lifespan. Consider placing it under a covered patio or using a furniture cover when not in use.



Figure 5.1: The glider bench positioned in an outdoor patio setting.

6. Operation

Using the Glider Function:

The Outsunny Glider Bench features a smooth gliding system for comfortable back-and-forth motion. To operate, simply sit on the bench and gently push off the ground with your feet to initiate the gliding movement. The robust gliding arms ensure a stable and consistent motion.



Figure 6.1: A user demonstrating the smooth gliding motion of the bench.

Using the Center Table:

The integrated tempered glass center table provides a convenient surface for drinks, snacks, books, or small personal items. Its smooth surface is easy to clean. Avoid placing excessively hot or heavy objects on the table to prevent damage.



Figure 6.2: The tempered glass center table, ideal for holding beverages.

Product Overview Video:

▶ **Watch video online**
Outsunny Outdoor Glider Bench with Center Table, Metal Frame Patio Loveseat

Video 6.1: An overview of the Outsunny Outdoor Glider Bench, showcasing its features and design.

7. Care and Maintenance

- **Cleaning:** Wipe clean with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners that could damage the finish or fabric.
- **Fabric Care:** The breathable Textilene mesh fabric is quick-drying and easy to maintain. For deeper cleaning, a

soft brush and mild detergent can be used, followed by rinsing with water. Ensure the fabric is completely dry before storage.

- **Frame Care:** The powder-coated steel frame is designed to withstand outdoor conditions. Inspect the frame periodically for any signs of rust or damage. Touch up any scratches with appropriate outdoor paint to prevent rust.
- **Winter Storage:** During winter months or periods of prolonged non-use, it is recommended to store the glider bench indoors or cover it with a weather-resistant furniture cover to protect it from harsh elements.
- **Hardware Check:** Regularly check all nuts and bolts to ensure they remain tight. Re-tighten as needed to maintain stability and safety.



Figure 7.1: The breathable Textilene fabric, designed for quick drying and easy maintenance.

8. Troubleshooting

Common Issues and Solutions:

- **Difficulty during Assembly / Parts Not Aligning:**
  Ensure you are following the assembly instructions precisely. Do not fully tighten all bolts until the entire structure is loosely assembled. This allows for minor adjustments to align holes. If parts are bent or severely misaligned, contact customer support for assistance.
- **Missing or Damaged Parts:**
  If any components or hardware are missing or damaged upon arrival, do not proceed with assembly. Contact Outsunny customer support immediately with your product model number and a description of the issue. Refer to the "Warranty & Customer Support" section for contact information.
- **Gliding Mechanism is Not Smooth:**
  Check that the glider bench is placed on a perfectly level surface. Ensure all assembly bolts are tightened appropriately; overtightening or undertightening can affect the glide. Inspect the gliding arms for any obstructions or damage.
- **Bench Feels Unstable or Wobbly:**
  Verify that all bolts and nuts are securely tightened. Ensure the bench is on a flat and stable surface. The protective foot pads should be making full contact with the ground.

9. Product Specifications

Feature	Detail
Model Number	84A-011
Overall Dimensions (L x W x H)	57.75" x 30.75" x 40" (146.7 cm x 78.1 cm x 101.6 cm)
Material	Alloy Steel Frame, Textilene Mesh Fabric, Tempered Glass (Tabletop)
Color	Grey
Item Weight	46.2 lbs (20.95 kg)
Weight Capacity (per seat)	363 lbs (164.6 kg)
Special Features	Arm Rests, Middle Table, Gliding Function, 2-Seater Design
Product Care Instructions	Wipe Clean



Figure 9.1: Illustration of the reliable metal support and protective foot pads.

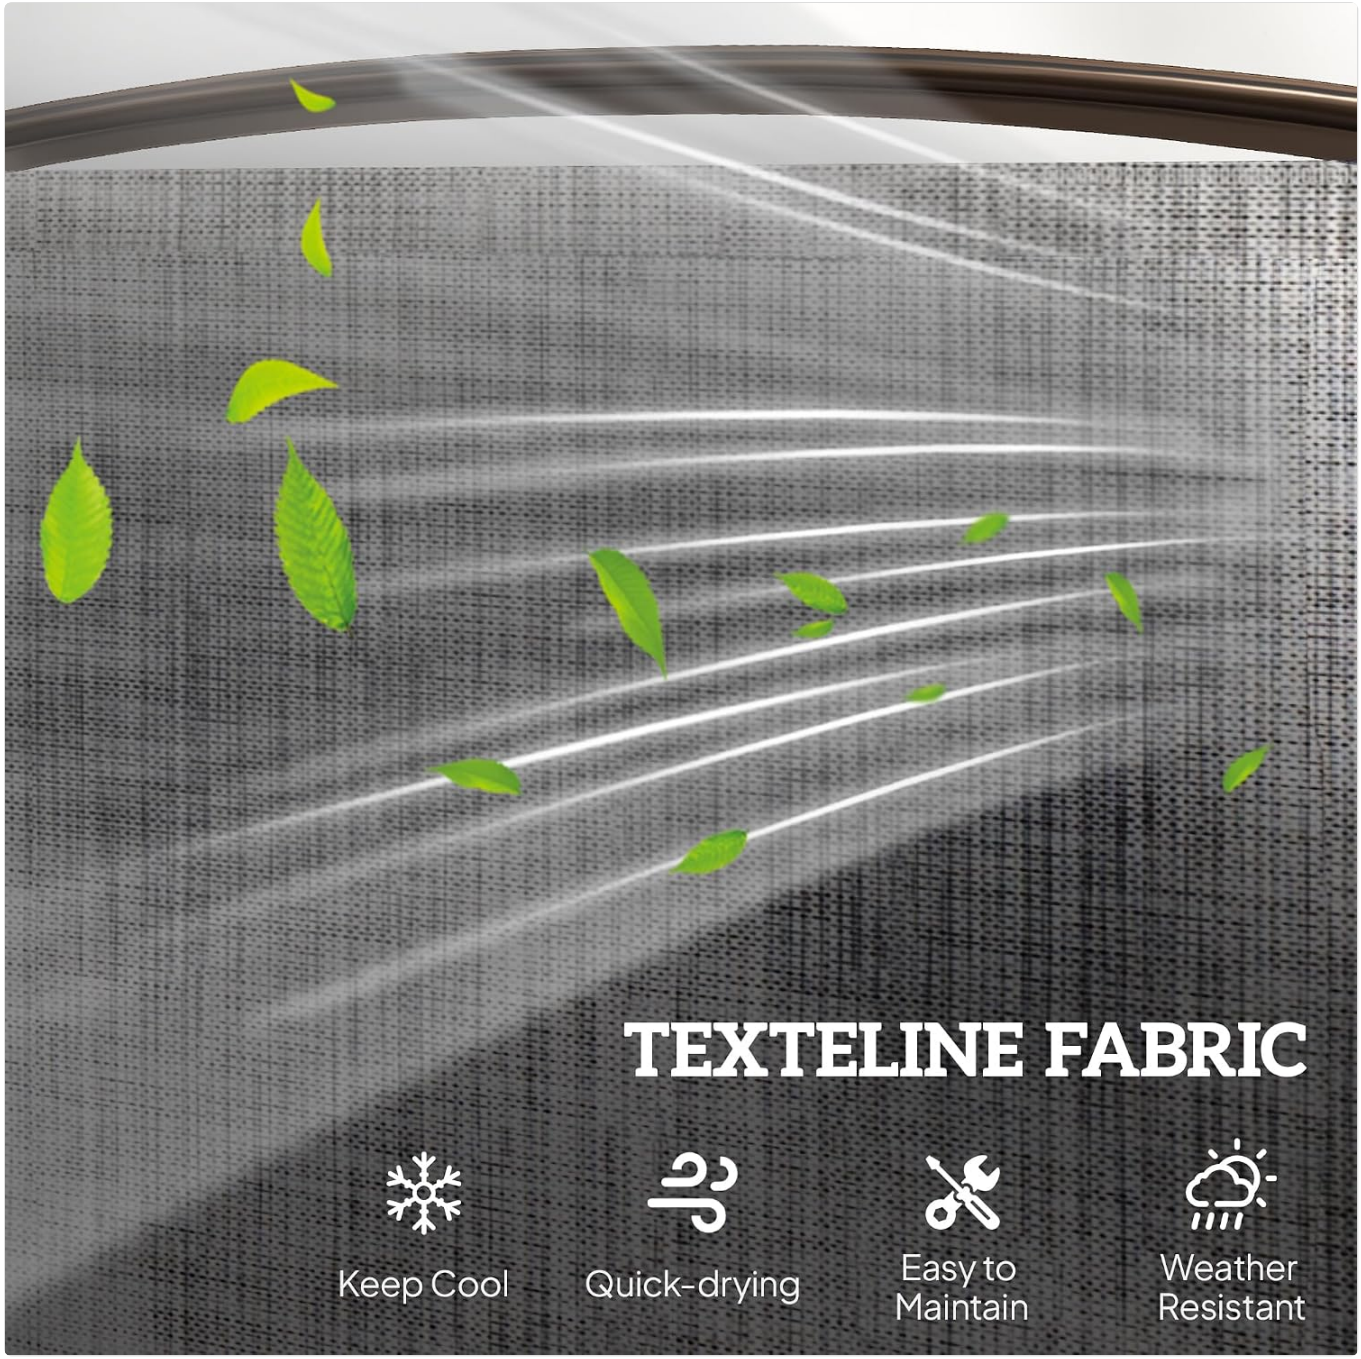


Figure 9.2: Ergonomic design elements for enhanced comfort.

10. Warranty and Customer Support

Outsunny products are designed for quality and durability. For specific warranty information regarding your glider bench, please refer to the documentation included with your purchase or contact the seller directly.

Official User Guides:

- User Guide (PDF)
- User Manual (PDF)

Customer Service:

For assistance with missing parts, damaged components, or any questions regarding your Outsunny Outdoor Glider

Bench, please contact Aosom Direct, the seller, through your purchase platform or their official website. Please have your model number (84A-011) and purchase details ready when contacting support.

Additional protection plans may be available for purchase. Please check your original product listing or contact the seller for details on 2-Year or 3-Year Protection Plans.

© 2024 Outsunny. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01GINMN34

More documents and user manuals: **https://manuals.plus/**