Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Hangsun HT1000

Hangsun HT1000 Sonic Electric Toothbrush User Manual

Model: HT1000 | Brand: Hangsun

Introduction

The Hangsun HT1000 Sonic Electric Toothbrush is designed to provide a gentle yet dynamic cleaning action, utilizing sonic technology to effectively clean teeth and gums. This manual provides essential information for the proper setup, operation, and maintenance of your new toothbrush, ensuring optimal oral hygiene.

Key Features

- **Sonic Cleaning Technology:** Up to 40,000 sonic vibrations per minute for superior plaque removal.
- **Four Brushing Modes:** Clean, Soft, Whiten, and Massage to suit various oral care needs.
- **Smart Timers:** Built-in 2-minute brushing cycle with 30-second quadrant reminders.
- **Long-Life Rechargeable Battery:** Provides up to 30 days of use on an 8-hour charge.
- **IPX7 Waterproof Level:** Ensures safe use in wet environments.
- **Hidden Panel Design:** Easy-to-read display with a modern aesthetic.
- **Non-Slip Handle:** Ergonomically designed for a comfortable and secure grip.

What's in the Box

Upon opening your Hangsun HT1000 package, you should find the following items:

- 1 x Hangsun HT1000 Sonic Toothbrush Handle
- 1 x Charging Base
- 3 x Replacement Brush Heads
- 1 x User Manual



Image: The Hangsun HT1000 Sonic Electric Toothbrush with its charging base and three brush heads.

Setup

1. **Charge the Toothbrush:**

   Place the toothbrush handle onto the charging base. Connect the charging base to a power outlet. The charge indicator light on the handle will illuminate to show that it is charging. A full charge takes approximately 8 hours and provides up to 30 days of regular use.

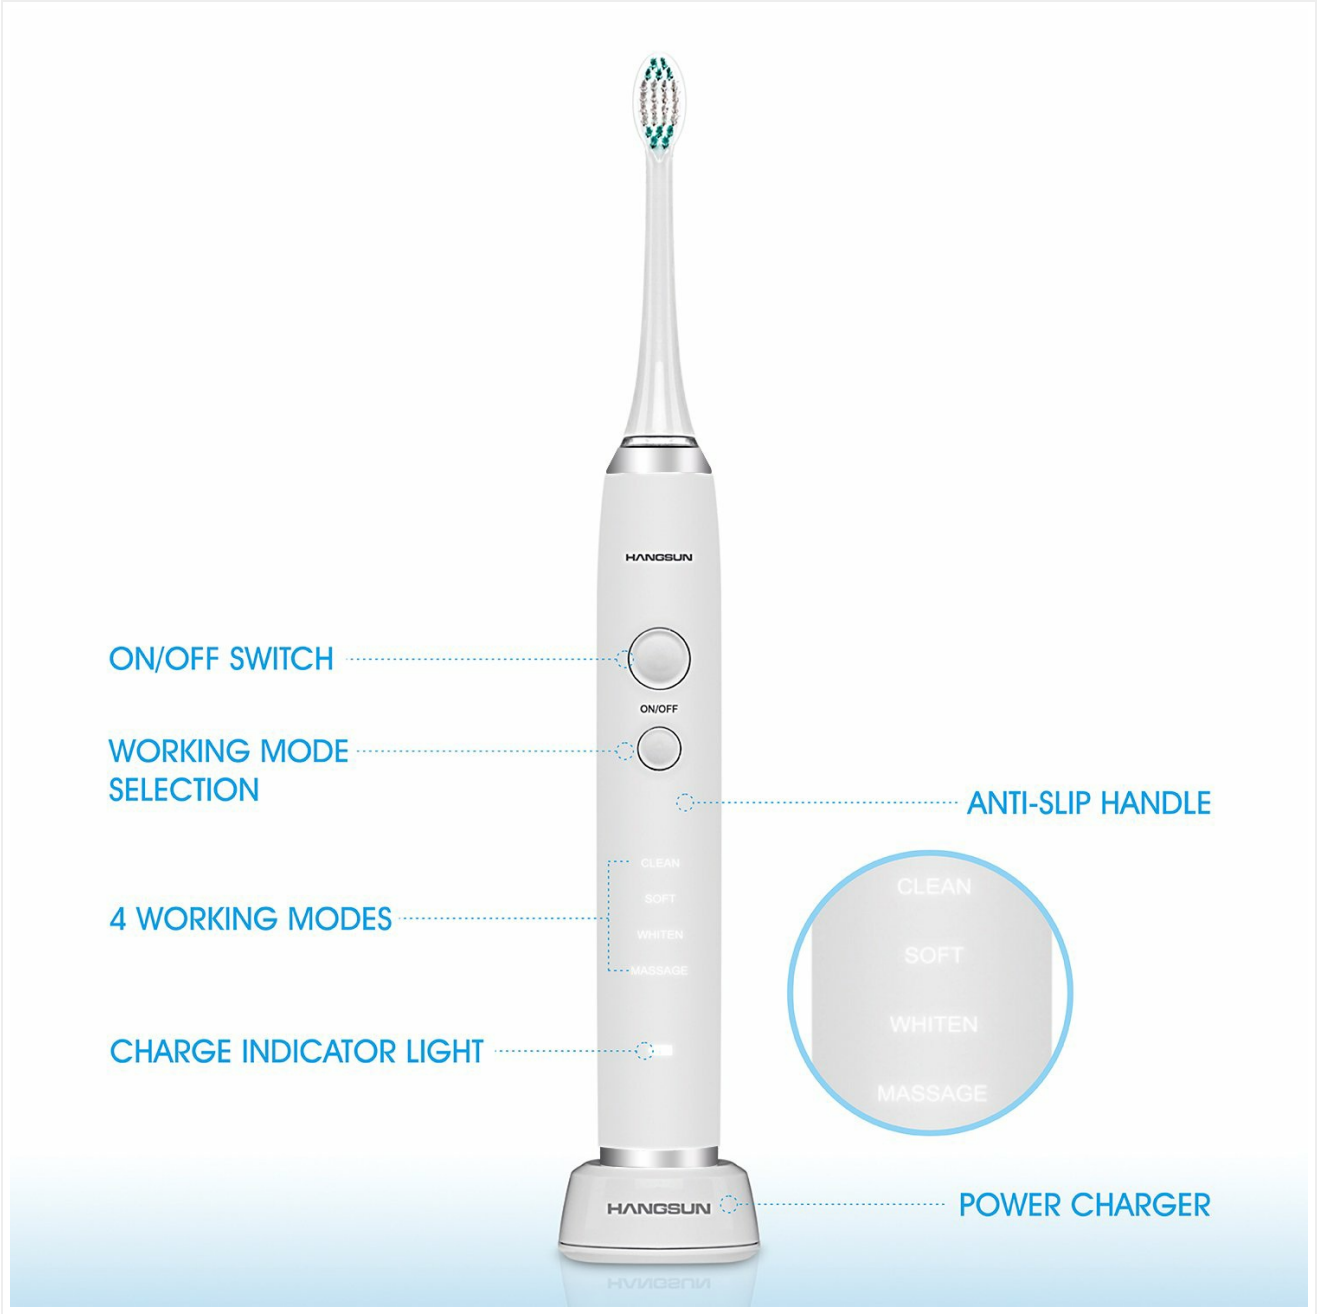


Image: The toothbrush handle placed on its charging base, showing the charge indicator light and various controls.

2. **Attach a Brush Head:**

   Align the brush head with the metal shaft on the toothbrush handle and push it down firmly until it clicks into place. Ensure it is securely attached before use.

Your browser does not support the video tag.

Video: A demonstration of attaching a brush head to the Hangsun HT1000 Sonic Electric Toothbrush handle.

Operating Instructions

1. **Power On/Off:**

   Press the ON/OFF button to turn the toothbrush on or off.

2. **Select a Brushing Mode:**

   After turning on, press the mode selection button to cycle through the four available modes:

   - **Clean:** Standard mode for daily plaque removal.
   - **Soft:** Gentle mode for sensitive teeth and gums.
   - **Whiten:** Designed to remove surface stains.

- **Massage:** Combines the Clean mode with gentle gum stimulation.

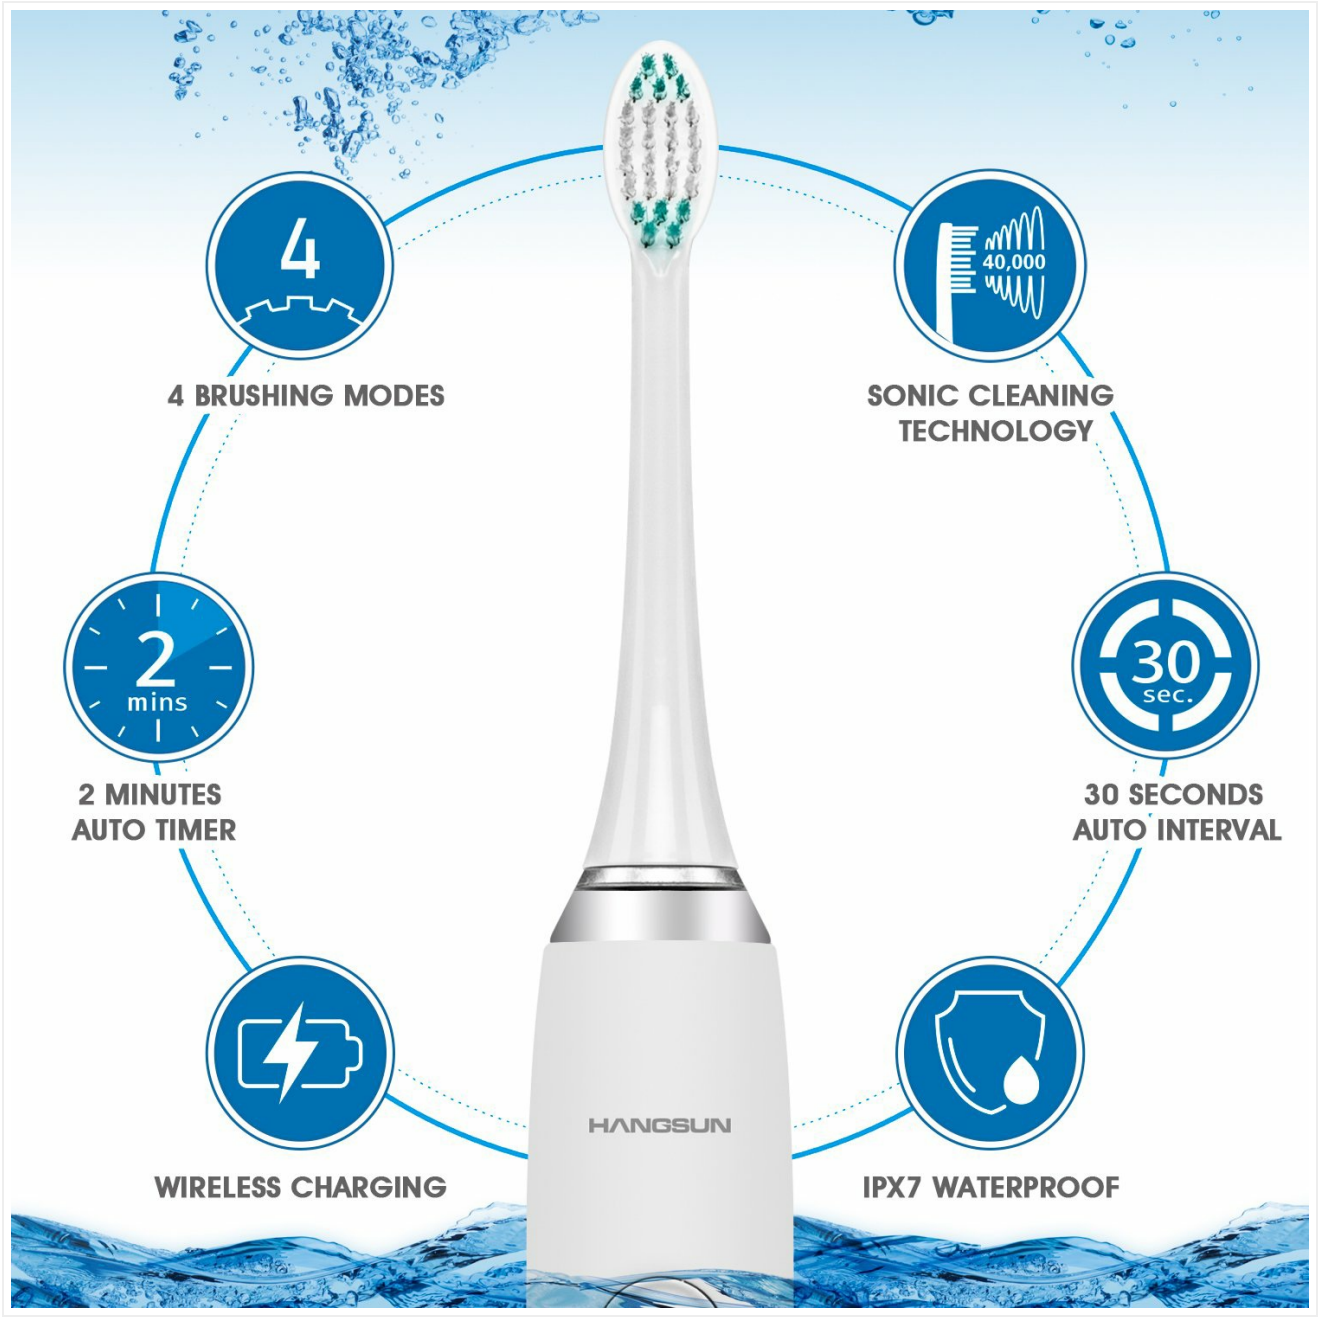


Image: An illustration detailing the four brushing modes, 2-minute auto timer, and 30-second auto interval features.

3. **Brushing Technique:**

   Apply a small amount of toothpaste to the brush head. Place the brush at a 45-degree angle to your gums. Move the brush slowly across your teeth, allowing the sonic vibrations to do the work. The built-in timer will pause briefly every 30 seconds to indicate when to move to a different quadrant of your mouth, ensuring a thorough 2-minute clean.



Image: A user demonstrating proper brushing technique with the Hangsun HT1000, showcasing its comfortable, anti-slip handle.

Maintenance

1. **Cleaning the Toothbrush:**

   After each use, rinse the brush head thoroughly under running water. Wipe the handle with a damp cloth. The toothbrush is IPX7 waterproof, allowing for easy cleaning without concern for water damage.



Image: The Hangsun HT1000 toothbrush submerged in water, demonstrating its IPX7 waterproof capability.

2. **Replacing Brush Heads:**

   Dentists recommend replacing brush heads every 3 months, or sooner if the bristles become frayed. Replacement brush heads can be purchased separately.

Troubleshooting

If you encounter any issues with your Hangsun HT1000 Sonic Electric Toothbrush, please refer to the following common solutions:

- **Toothbrush not turning on:** Ensure the toothbrush is fully charged. Place it on the charging base for at least 8 hours.
- **Weak vibrations:** This may indicate a low battery. Recharge the toothbrush.
- **Brush head loose:** Ensure the brush head is firmly pushed onto the metal shaft until it clicks into place.
- **Unusual noise:** Check if the brush head is correctly attached. If the noise persists, contact customer support.

For further assistance, please contact Hangsun customer support.

Specifications

Model Number	HT1000
Power Source	Battery Powered (1 Lithium Ion battery, included)
Operation Mode	Automatic
Number of Settings	4 (Clean, Soft, Whiten, Massage)
Item Firmness Description	Soft
Material	Plastic
Item Weight	0.26 Pounds (approx. 118g)
Product Dimensions	11.81 x 98.43 x 11.81 inches (handle dimensions, approx. 30 x 250 x 30 mm)
Special Features	Brushing Timer, IPX7 Waterproof

Warranty and Support

For warranty information or technical support regarding your Hangsun HT1000 Sonic Electric Toothbrush, please refer to the contact details provided in the product packaging or visit the official Hangsun website. Keep your purchase receipt for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01H70RCOM

More documents and user manuals: **https://manuals.plus/**