Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun KF 7020

Braun PurAroma 7 KF7020BK Filter Coffee Machine User Manual

Model: KF 7020

1. Introduction

Welcome to the user manual for your Braun PurAroma 7 KF7020BK Filter Coffee Machine. This appliance is designed to provide an optimal coffee experience with its advanced features, including the OptiBrew system for perfect aroma and the AromaCarafe to keep your coffee warm and flavorful. Please read these instructions carefully before first use to ensure safe operation and optimal performance.

2. Important Safety Instructions

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Use the appliance only for its intended household purpose.
- Avoid contact with hot surfaces. Use handles or knobs.
- Ensure the lid of the water tank and carafe are properly closed during operation.

3. Product Overview

Familiarize yourself with the components of your Braun PurAroma 7 KF7020BK coffee machine.



Image 1: Angled view of the Braun PurAroma 7 KF7020BK coffee machine, showcasing its sleek black design, digital display, and control buttons. The glass AromaCarafe is visible at the base.



Image 2: Front view of the Braun PurAroma 7 KF7020BK coffee machine, providing a clear look at the digital clock display, the row of function buttons, and the glass carafe with its handle and measurement markings.

3.1 Control Panel

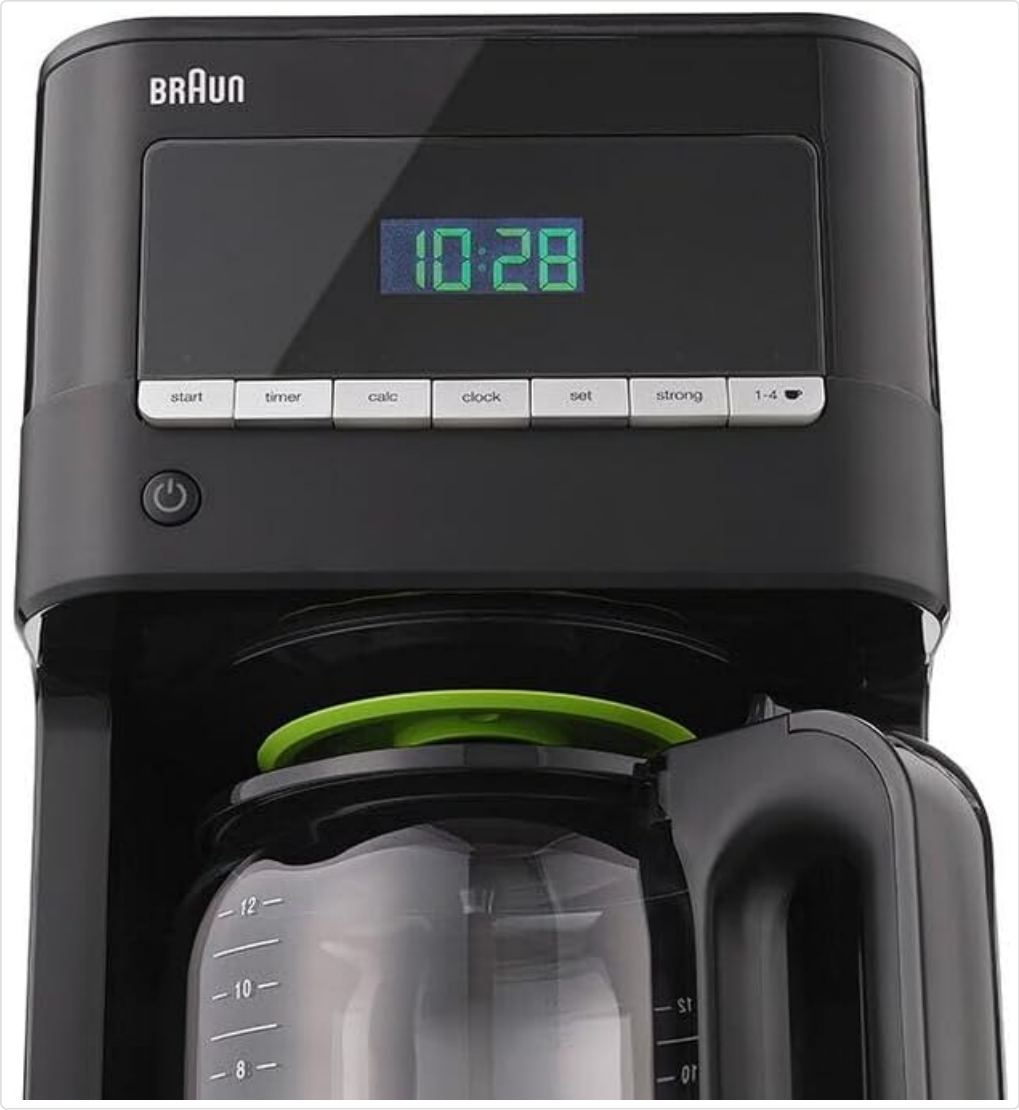


Image 3: A detailed close-up of the control panel on the Braun PurAroma 7 KF7020BK. The digital display shows '10:28', and the buttons are clearly labeled: 'start', 'timer', 'calc', 'clock', 'set', 'strong', and '1-4'. A power button is also visible below the main display.

- **Digital Display:** Shows current time, timer settings, and descaling alerts.
- **Power Button:** Turns the appliance on/off.
- **Start Button:** Initiates the brewing process.
- **Timer Button:** Sets the programmable brewing time.
- **Calc Button:** Indicates when descaling is needed and initiates the descaling program.
- **Clock Button:** Used to set the current time.
- **Set Button:** Confirms settings for timer and clock.
- **Strong Button:** Selects a stronger coffee aroma.
- **1-4 Cups Button:** Optimizes brewing for smaller quantities (1-4 cups).

4. Initial Setup

4.1 Unpacking and First Use

1. Remove all packaging materials and labels from the coffee machine.
2. Clean the AromaCarafe, filter basket, and lid with warm soapy water. Rinse thoroughly and dry.
3. Before brewing coffee for the first time, run two full cycles with only water to clean the internal components.

4.2 Setting the Clock

1. Plug the coffee machine into a power outlet.
2. Press the **Clock** button. The hour digits will flash.
3. Use the **Timer** button (up/down arrows) to adjust the hour.
4. Press the **Clock** button again. The minute digits will flash.
5. Use the **Timer** button to adjust the minutes.
6. Press the **Set** button to confirm the time.

5. Operating Instructions

5.1 Brewing Coffee

1. Open the lid of the water tank.
2. Fill the water tank with fresh, cold water up to the desired number of cups indicated on the water level indicator.
3. Place a paper filter (size 4) into the filter basket.
4. Add the desired amount of ground coffee into the filter. A general guideline is one level tablespoon of coffee per cup.
5. Close the lid securely.
6. Ensure the AromaCarafe is placed correctly on the warming plate.
7. Press the **Start** button to begin brewing. The indicator light will illuminate.
8. The coffee machine will automatically turn off after approximately 40 minutes to save energy.



Image 4: A hand lifting the top lid of the Braun PurAroma 7 KF7020BK coffee machine, revealing the access point for filling water and placing the coffee filter and grounds.

5.2 Aroma Settings

- **Strong:** For a more intense coffee flavor, press the **Strong** button before brewing. The indicator light will turn on.
- **1-4 Cups:** When brewing smaller quantities (1 to 4 cups), press the **1-4 Cups** button. This optimizes the brewing process for smaller volumes, ensuring full flavor. The indicator light will turn on.

5.3 Programmable Timer

The 24-hour programmable timer allows you to set a specific time for your coffee to start brewing automatically.

1. Prepare the coffee machine as described in section 5.1 (fill water, add filter and coffee).
2. Press the **Timer** button. The display will show 'TIMER' and the hour digits will flash.
3. Use the **Timer** button (up/down arrows) to set the desired hour for brewing.
4. Press the **Timer** button again. The minute digits will flash.
5. Use the **Timer** button to set the desired minutes.
6. Press the **Set** button to confirm the timer setting. The 'TIMER' indicator will remain lit.
7. The coffee machine will start brewing at the programmed time.

6. Care and Maintenance

6.1 Cleaning

- Always unplug the appliance and allow it to cool before cleaning.
- The AromaCarafe, its lid, and the filter basket are dishwasher-safe.
- Wipe the exterior of the coffee machine with a damp cloth. Do not use abrasive cleaners or scouring pads.
- Do not immerse the main unit in water.

6.2 Descaling

Regular descaling is essential to maintain optimal performance and extend the lifespan of your coffee machine. The 'CALC' indicator on the display will illuminate when descaling is required.

1. Fill the water tank with a descaling solution according to the descaler manufacturer's instructions.
2. Place an empty AromaCarafe with its lid on the warming plate.
3. Press the **Calc** button. The 'CALC' indicator will flash, and the descaling process will begin.
4. Once the descaling cycle is complete, the 'CALC' indicator will turn off.
5. Run two full cycles with fresh water only to rinse the machine thoroughly.

7. Troubleshooting

Problem	Possible Cause	Solution
Coffee does not brew.	No water in the tank, appliance not plugged in, or power outage.	Fill water tank, check power connection, ensure power is on.
Coffee is too weak.	Insufficient coffee grounds, coarse grind, or 'Strong' function not activated.	Add more coffee, use a finer grind, or press the **Strong** button.
Coffee overflows from filter.	Too much coffee grounds, filter clogged, or carafe not placed correctly.	Reduce coffee grounds, ensure filter is not clogged, correctly position carafe.
'CALC' indicator is lit.	Appliance requires descaling.	Perform a descaling cycle as described in section 6.2.

8. Technical Specifications

- **Model:** KF 7020
- **Brand:** Braun
- **Capacity:** 12 Cups (1.5 Liters)
- **Power:** 1000 Watts
- **Voltage:** 240 Volts
- **Material:** Plastic
- **Dimensions (L x W x H):** 22.86 x 22.86 x 38.1 cm
- **Weight:** 1.96 Kilograms
- **Special Features:** Programmable, OptiBrew System, AromaCarafe, Anti-drip system, Descaling warning, LCD display.

9. Warranty and Support

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Braun website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01KPT875A

More documents and user manuals: **https://manuals.plus/**