Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Howard Miller 625623

Howard Miller Thatcher Wall Clock 625-623 User Manual

Model: 625-623

1. Introduction

Thank you for choosing the Howard Miller Thatcher Wall Clock. This oversized wall clock features a distinctive design with a rustic wood and metal frame, wooden Roman numerals, and a quiet quartz movement. This manual provides essential information for the safe setup, operation, and maintenance of your clock.



Image 1.1: Front view of the Howard Miller Thatcher Wall Clock 625-623, showcasing its large wooden and metal design with Roman numerals.

2. Safety Information

- Always handle the clock with care to prevent damage to the frame or internal mechanism.
- Ensure the clock is securely mounted to a sturdy wall surface to prevent it from falling. Use appropriate wall anchors for your wall type.
- Keep batteries out of reach of children and pets. Dispose of used batteries responsibly.
- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity, as this may affect its accuracy and material integrity.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified service personnel if issues arise.

3. Package Contents

Please check the package to ensure all components are present:

- Howard Miller Thatcher Wall Clock (Model 625-623)
- Instruction Manual (this document)

Note: One AA battery is required for operation and is not included in the package.

4. Setup

4.1. Unpacking

1. Carefully remove the clock from its packaging.
2. Inspect the clock for any signs of damage during transit. If damaged, contact customer support immediately.
3. Retain packaging materials for future transport or returns.

4.2. Battery Installation

1. Locate the battery compartment on the back of the clock mechanism.
2. Insert one fresh AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings in the compartment.
3. The clock hands may begin to move immediately.





Image 4.1: Rear view of the clock, illustrating the location of the quartz movement and battery compartment.

4.3. Setting the Time

1. Once the battery is installed, locate the time-setting knob on the back of the clock mechanism.
2. Gently turn the knob in either direction to move the clock hands to the correct time.
3. Avoid moving the hands directly, as this can damage the movement.

4.4. Mounting the Clock

1. Choose a suitable location on a sturdy wall, away from direct heat sources or excessive moisture.
2. Measure the desired height and mark the spot for the mounting screw or hook.
3. Install a wall anchor and screw appropriate for the clock's weight (approximately 5.58 kg or 12.3 lbs) and your wall material.
4. Carefully hang the clock onto the installed screw or hook, ensuring it is level and secure.

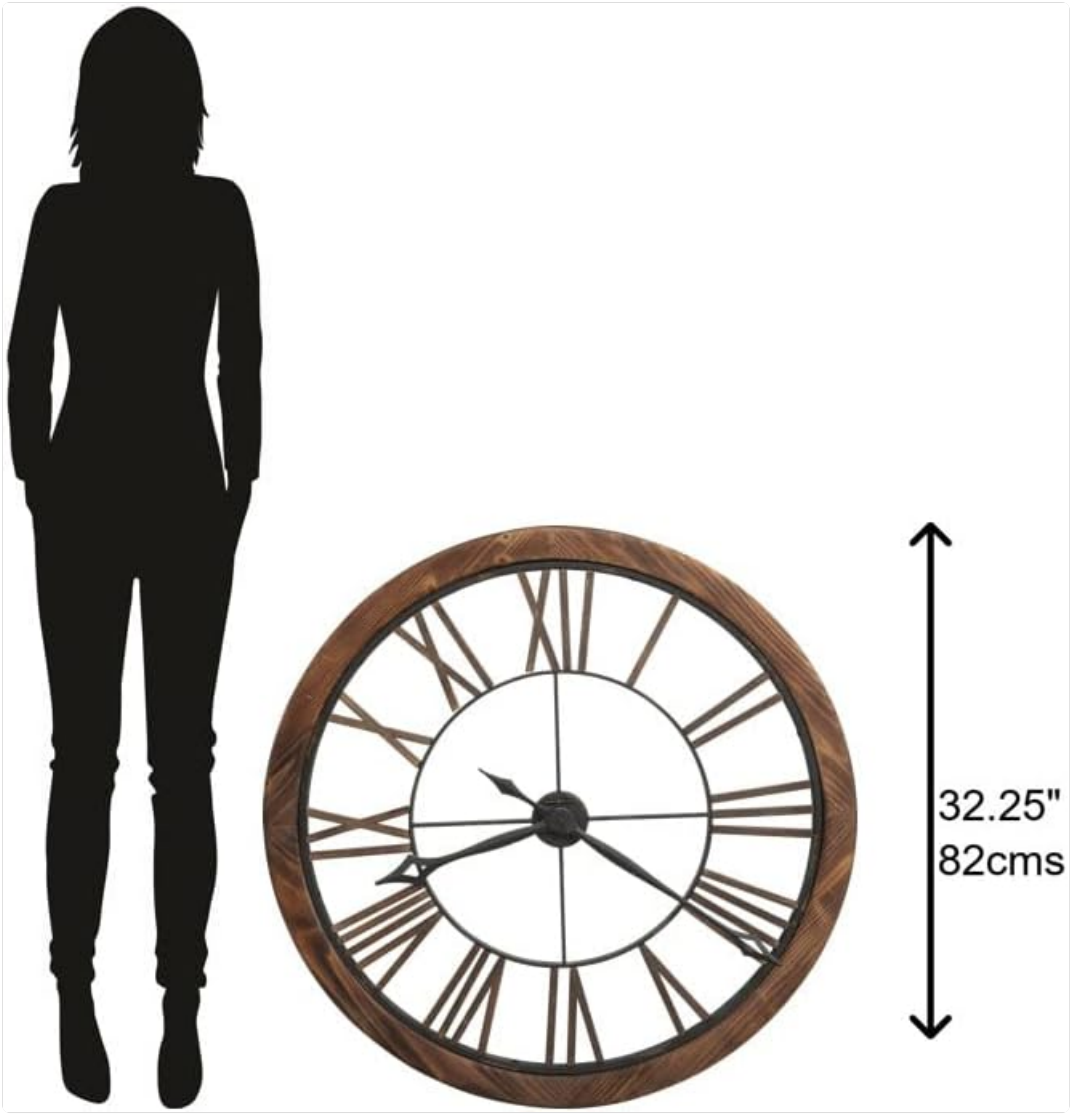


Image 4.2: The Thatcher Wall Clock displayed next to a person, illustrating its significant size (32.25 inches / 82 cm diameter) for proper placement consideration.

5. Operating the Clock

The Howard Miller Thatcher Wall Clock operates continuously once the battery is installed and the time is set. It features a silent quartz movement, meaning it produces a soft ticking sound without chimes, ideal for quiet environments.

- **Timekeeping:** The clock will accurately keep time as long as the battery has sufficient power.
- **Adjusting Time:** If time adjustments are needed (e.g., for daylight saving), use the time-setting knob on the back of the mechanism as described in Section 4.3.

6. Maintenance

6.1. Cleaning

- Dust the clock regularly with a soft, dry cloth.
- For stubborn marks on the metal or wood, use a slightly damp cloth and immediately dry with a clean, soft cloth.
- Avoid using abrasive cleaners, solvents, or chemical sprays, as these can damage the finish.

6.2. Battery Replacement

Replace the AA battery annually or when the clock begins to lose time or stops running. Refer to Section 4.2 for battery installation instructions.

7. Troubleshooting

Problem	Possible Cause	Solution
Clock is not running	Dead or incorrectly installed battery	Replace with a fresh AA battery, ensuring correct polarity.
Clock hands are stuck or not moving smoothly	Hands are bent or obstructed; internal mechanism issue	Gently check if hands are touching each other or the clock face. If bent, carefully straighten. If the issue persists, contact customer support.
Clock is losing or gaining time	Weak battery; extreme temperature changes; faulty movement	Replace the battery. Ensure the clock is not in an area with significant temperature fluctuations. If the problem continues, the movement may need servicing.

8. Specifications

Feature	Detail
Model Number	625-623
Brand	Howard Miller
Dimensions (Diameter x Depth)	32.25 inches (82 cm) x 2 inches (5 cm)
Weight	5.58 kg (12.3 lbs)
Material	Wood, Metal
Movement Type	Quartz
Power Source	1 x AA Battery (not included)
Display Type	Analog
Special Feature	Silent Clock
Indoor/Outdoor Usage	Indoor







Image 8.1: Side profile of the clock, showing the thickness of the wooden frame and metal elements.

9. Warranty and Support

9.1. Warranty Information

This Howard Miller Thatcher Wall Clock comes with a Limited Warranty. Please refer to the warranty documentation included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

9.2. Customer Support

For further assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact Howard Miller customer support. Visit the official Howard Miller website for contact details and additional resources.

Howard Miller Official Website: www.howardmiller.com

© 2023 Howard Miller. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B01LBDKQDU

More documents and user manuals: **https://manuals.plus/**