Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PKPOWER MT316

PKPower AC/DC Adapter User Manual

Model: MT316

1. Introduction

This user manual provides essential information for the safe and effective use of your PKPower AC/DC Adapter, specifically designed for the Musitrend MT316 Vinyl Record Player and similar compatible 3-speed turntable stereo systems. Please read this manual thoroughly before using the product to ensure proper operation and longevity.

2. Safety Information

Always observe the following safety precautions to prevent injury or damage to the product and connected devices:

- Use the adapter only with compatible devices as specified.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to severe impact.
- Do not attempt to open, modify, or repair the adapter. Refer all servicing to qualified personnel.
- Ensure the power outlet is easily accessible and unplug the adapter during lightning storms or when unused for long periods.
- Keep out of reach of children.

Proposition 65 Warning:
This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

3. Product Overview

The PKPower AC/DC Adapter is a reliable power supply unit designed to provide stable power to your Musitrend MT316 Vinyl Record Player. It features a standard US plug and a DC barrel connector for easy integration with your device.



Front view of the PKPower AC/DC Adapter with its power cord coiled, showing the main unit and the two-prong plug.



An angled view of the PKPower AC/DC Adapter, highlighting the power prongs and the cable connection point.

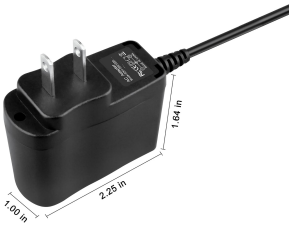

Image showing the dimensions of the PKPower AC/DC Adapter: 1.00 inch, 2.25 inches, and 1.64 inches.



The PKPower AC/DC Adapter with its power cord extended, showing the full length of the cable.

4. Specifications

Feature	Detail
Brand	PKPOWER
Input Voltage	100-240V 50-60Hz
Connectivity Technology	DC Barrel
Connector Type	Barrel Connector
Included Components	2 x Power Cords (as per product listing, though adapter is one unit with integrated cord)
Special Feature	Portable
Mounting Type	Wall Mount
Certifications	CE, FCC, RoHS Certified
Protection Features	OVP (Over Voltage Protection), OCP (Over Current Protection), SCP (Short Circuit Protection)

5. Setup

Follow these simple steps to set up your PKPower AC/DC Adapter:

1. **Identify the Power Input:** Locate the power input port on your Musitrend MT316 Vinyl Record Player or other compatible device. This is typically a circular port.
2. **Connect the Adapter:** Insert the DC barrel connector of the PKPower adapter firmly into the power input port of your device.
3. **Plug into Power Outlet:** Insert the two-prong plug of the adapter into a standard wall power outlet (100-240V AC).
4. **Verify Connection:** Ensure all connections are secure. Your device should now be receiving power.

6. Operating

Once connected, the PKPower AC/DC Adapter operates automatically to provide continuous power to your compatible device. There are no user-adjustable settings on the adapter itself. Simply ensure it is plugged into a live power outlet and securely connected to your device.

7. Maintenance

To ensure the longevity and optimal performance of your adapter, follow these maintenance guidelines:

- **Cleaning:** Disconnect the adapter from the power outlet and device before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or aerosols.
- **Storage:** When not in use, store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling the cable to prevent damage.
- **Cable Care:** Do not bend, twist, or pinch the power cord excessively. Avoid placing heavy objects on the cord.

8. Troubleshooting

If you encounter issues with your PKPower AC/DC Adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device not powering on.	Adapter not properly connected to device or outlet.	Ensure the DC barrel connector is fully inserted into the device and the adapter plug is securely in a working wall outlet. Try a different outlet.
Device powers on but functions intermittently.	Loose connection or incompatible device.	Check all connections for looseness. Verify that your device is compatible with the adapter's voltage and current specifications.
Adapter feels unusually hot.	Overload or poor ventilation.	Disconnect the adapter immediately. Ensure it is used with a compatible device and in a well-ventilated area. If overheating persists, discontinue use and contact customer support.

9. Compatibility

This PKPower AC/DC Adapter is specifically designed for the **Musitrend MT316 Vinyl Record Player Classic Portable Suitcase 3 Speed Turntable Stereo System**. It is also compatible with other devices requiring similar power specifications (Input: 100-240V 50-60Hz) and a DC barrel connector. Always verify the power requirements of your device before connecting this adapter.

10. Warranty and Support

PKPower products are CE / FCC / RoHS certified and tested by the manufacturer to match and/or exceed OEM specifications, ensuring quality and reliability. The adapter includes OVP (Over Voltage Protection), OCP (Over Current Protection), and SCP (Short Circuit Protection) for enhanced safety.

For any questions, concerns, or support needs, our friendly and reliable customer service team is available to assist you. We aim to respond to all inquiries within 24 hours.

Please refer to your purchase documentation for specific warranty terms and contact information, or visit the official PKPOWER store on Amazon: PKPOWER Store.

© 2024 PKPOWER. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B06XQ2M8VL

More documents and user manuals: **https://manuals.plus/**