Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Home-X Pickle Container with Strainer

Home-X Pickle Container with Strainer Instruction Manual

Introduction

The Home-X Pickle Container with Strainer is designed for convenient and mess-free storage of various foods, including pickles, olives, and other marinated items. This BPA-free container features an integrated strainer for easy lifting and draining, ensuring your hands stay clean and your food remains fresh.



Image: The Home-X Pickle Container with its integrated strainer lifting pickles from the liquid.



Image: The container's versatility for storing different types of food.

Setup

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash:** Before first use, wash the container, lid, and strainer insert with warm, soapy water. Rinse thoroughly.
3. **Dry:** Ensure all parts are completely dry before assembly or storage.



Image: The disassembled Home-X Pickle Container showing its main parts.

Operating Instructions

1. **Fill the Container:** Place the strainer insert into the main container. Pour your desired food items (e.g., pickles, olives, jalapeños) and their liquid into the container, ensuring the liquid covers the food.
2. **Secure the Lid:** Place the lid firmly onto the container to create a secure seal.
3. **Store:** Store the container in your refrigerator. Its compact design allows for efficient space utilization.
4. **Accessing Food:** To retrieve food, remove the lid. Use the handle on the strainer insert to lift the food out of the liquid. This allows the liquid to drain back into the container, providing mess-free access.
5. **Serving:** Once drained, remove the desired amount of food. Lower the strainer back into the liquid for continued storage.



Image: Demonstrating the lift and drain function of the strainer for easy access to food.



Image: The easy-open lid design for quick and hassle-free access.



Image: The container's compact design allows for organized refrigerator storage.

Maintenance

- **Cleaning:** The Home-X Pickle Container, including the lid and strainer, is dishwasher safe. For best results, place on the top rack.
- **Hand Washing:** If hand washing, use warm water and mild dish soap. Avoid abrasive cleaners or scrubbers that could scratch the plastic.
- **Drying:** Allow all parts to air dry completely or dry with a soft cloth before reassembly or storage to prevent moisture buildup.

Troubleshooting

Issue	Possible Cause	Solution

Issue	Possible Cause	Solution
Lid does not seal properly.	Lid or container rim is dirty, or lid is not aligned correctly.	Ensure lid and container rim are clean and free of food debris. Align the lid carefully and press down firmly on all sides until sealed.
Strainer is difficult to lift.	Food items are jammed, or strainer is not aligned.	Gently wiggle the strainer to free any jammed items. Ensure the strainer is centered within the container.
Container retains odors.	Strong food odors absorbed by plastic.	Wash thoroughly with baking soda and water, then rinse. Air dry in sunlight if possible.

Specifications

- **Brand:** Home-X
- **Model:** Pickle Container with Strainer
- **Material:** Plastic, Polypropylene
- **Material Features:** BPA Free, Food Grade
- **Color:** Translucent (with green lid and strainer)
- **Capacity:** 4.25 Liters
- **Item Dimensions (L x W x H):** 4.25" x 4.25" x 7.5"
- **Product Care:** Dishwasher Safe (top rack recommended)
- **Microwave Safe:** No
- **Closure Type:** Snap
- **UPC:** 713012692094
- **ASIN:** B073BX1VYB

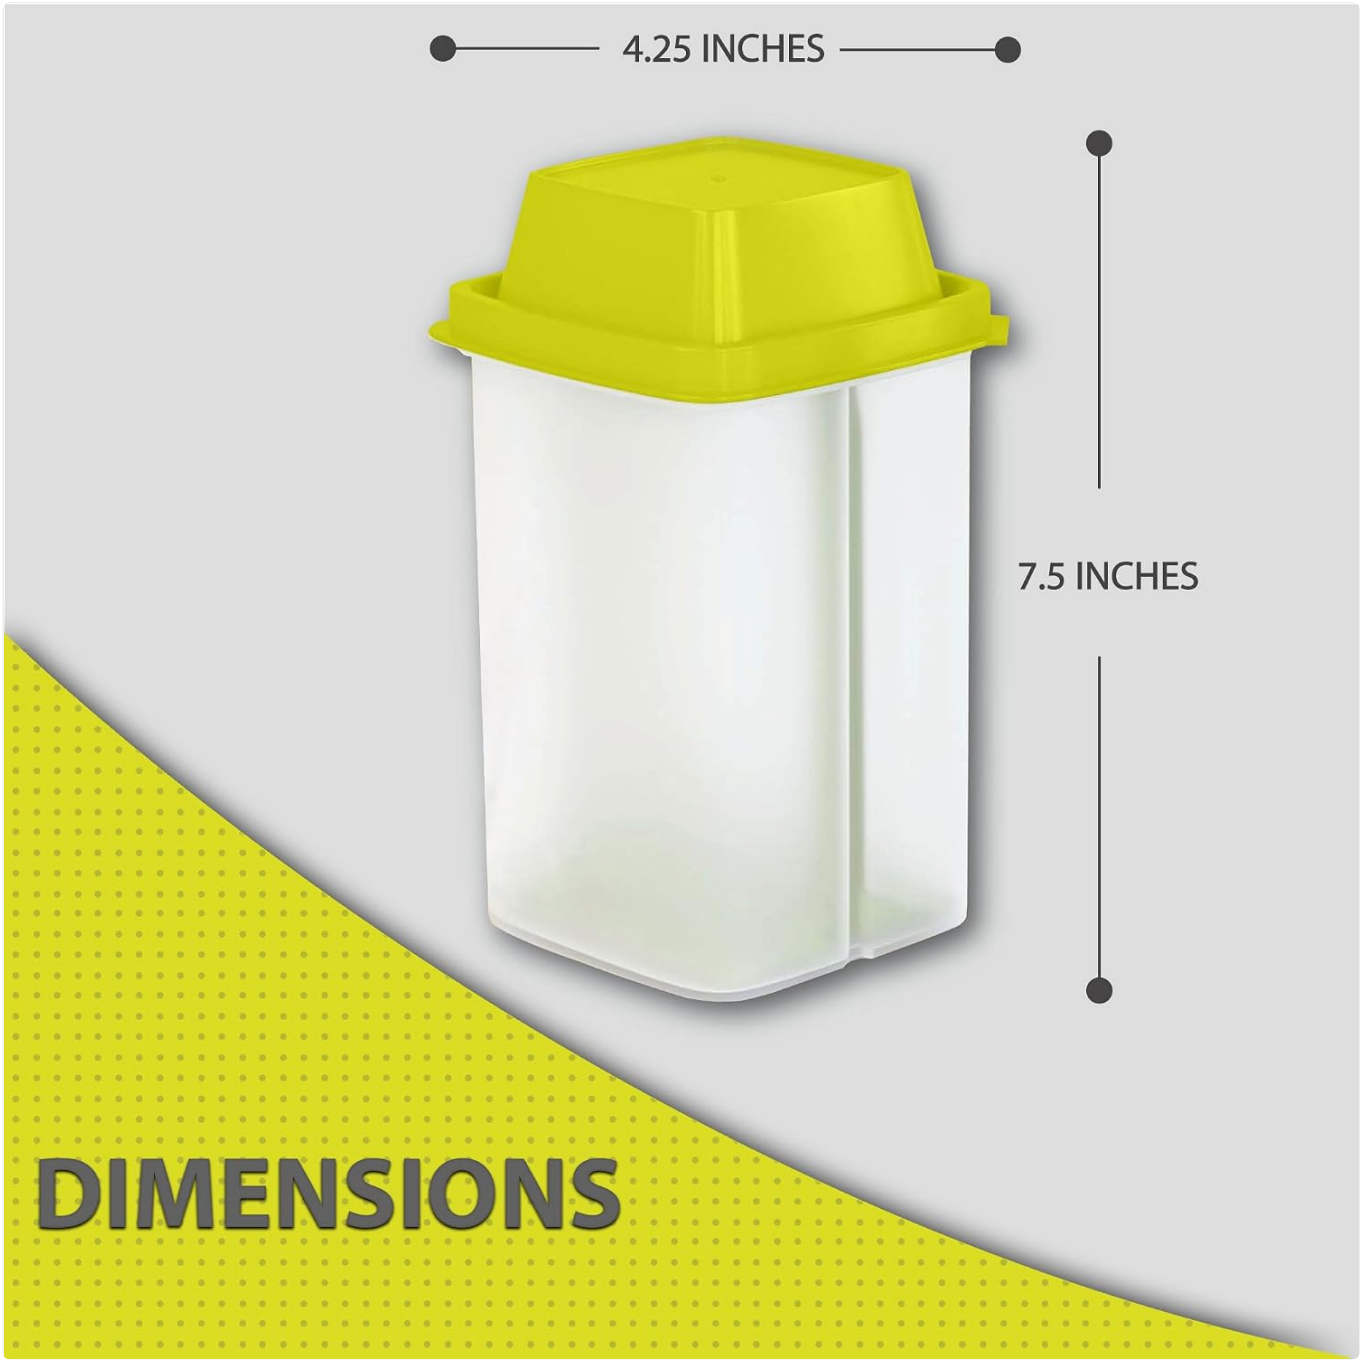

Image: Dimensions of the Home-X Pickle Container.

Warranty and Support

Specific warranty information is not provided with this product. For support or inquiries, please refer to the retailer's return policy or contact Home-X customer service through their official channels.
The retailer's return policy typically allows for returns or replacements within 30 days of purchase.

© 2024 Home-X. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the

question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B073BX1VYB

More documents and user manuals: **https://manuals.plus/**