Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

unho 600

unho Floor TV Stand (Model 600) Instruction Manual

For models compatible with 32-65 inch televisions

Introduction

Thank you for choosing the unho Floor TV Stand, Model 600. This free-standing TV mount is designed to securely hold most 32-65 inch flat screen televisions, offering height adjustment and a tilting bracket for optimal viewing. It also includes two AV shelves for media devices. Please read this manual thoroughly before assembly and use to ensure safe and correct operation.

Safety Information

Adhering to these safety guidelines is crucial for preventing injury and damage to your product and property.

- **Read All Instructions:** Before assembly and use, carefully read and understand all instructions.
- **Weight Capacity:** Do not exceed the maximum load bearing capacity of 30 kg (66 lbs). Ensure your TV's weight is within this limit.
- **TV Size:** This stand is designed for televisions between 32 and 65 inches.
- **Child Safety:** Keep children away from the stand during assembly and ensure the TV is securely mounted to prevent tipping.
- **Anchoring:** For enhanced stability, especially with larger televisions or in households with children or pets, consider anchoring the stand to a wall using appropriate hardware (not included).
- **Stable Surface:** Place the stand on a flat, level, and stable surface.
- **Professional Assistance:** If you are unsure about any part of the assembly or installation, consult a qualified professional.



Figure 1: Safety considerations and base anchoring detail. The 'L' plate helps fix the base for stability.

Package Contents

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.



Figure 2: All components included in the package.

- Base Plate
- Main Support Column
- TV Mounting Bracket Assembly
- AV Shelves (x2)
- Hardware Kit (screws, washers, spacers, L-plate, tools)
- Cable Management Clips

Setup and Assembly

Assembly typically takes approximately 45 minutes. Follow these steps carefully:

1. **Attach Main Support Column to Base:** Secure the main support column to the base plate using the provided screws and tools. Ensure the 'L' plate is used to reinforce the connection if desired, as shown in Figure 1.
2. **Install AV Shelves:** Attach the two AV shelves to the main support column at your desired heights. Ensure they are level and securely fastened.
3. **Assemble TV Mounting Bracket:** Attach the vertical TV mounting arms to the horizontal bracket.
4. **Attach Bracket to TV:** Secure the assembled TV mounting bracket to the back of your television using the appropriate VESA screws, washers, and spacers from the hardware kit. Ensure the screws are not too long or too short for your TV's mounting holes.
5. **Mount TV to Stand:** Carefully lift the television with the attached bracket and hook it onto the main support column's

mounting points. Secure the TV in place with the safety screws or clips provided.

6. **Cable Management:** Route all cables through the designated cable management holes in the main support column and secure them with clips for a tidy appearance.



Figure 3: Assembled TV stand with a television and media devices.

Operating Instructions

Height Adjustment

The TV mounting bracket offers multiple height adjustment options to position your television at the ideal viewing level. To adjust the height:

- Carefully lift the TV slightly to disengage it from its current height setting.
- Move the TV up or down to one of the available height positions on the main support column.
- Ensure the TV is securely seated in the new position before releasing it.

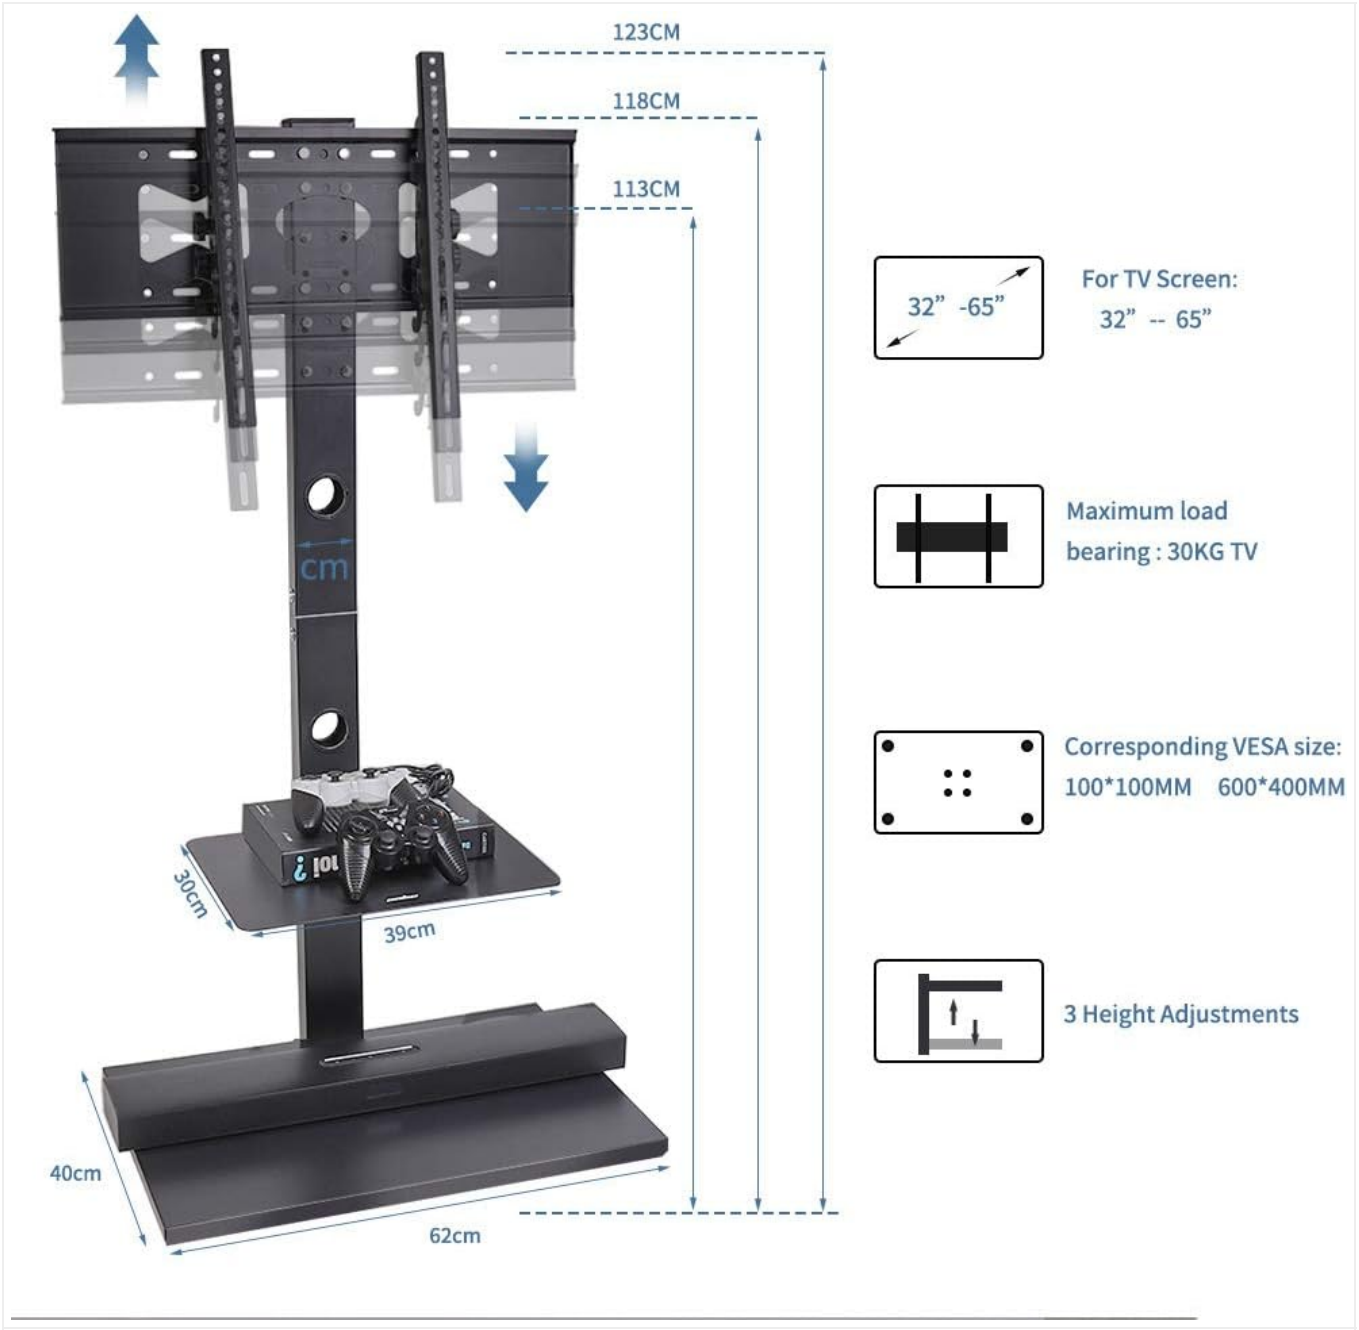

Figure 4: Height adjustment points and key specifications.

Tilt Adjustment

The TV mounting bracket allows for a tilt adjustment of up to 15 degrees, enabling you to reduce glare and optimize your viewing angle.

- Locate the tilt adjustment knobs or levers on the TV mounting bracket behind your television.
- Loosen the knobs/levers to allow the TV to tilt.
- Adjust the TV to your desired upward or downward tilt angle (up to 15 degrees).
- Tighten the knobs/levers firmly to secure the TV in the chosen tilt position.



Figure 5: TV tilt adjustment up to 15 degrees.

Cable Management

Integrated cable management helps keep your setup neat and organized.

- Feed your TV and device cables through the cable collection inlet holes located on the main support column.
- Guide the cables down the column and out through the cable collection outlet holes near the base.
- Use the provided cable clips to secure any loose cables along the column or behind the stand.

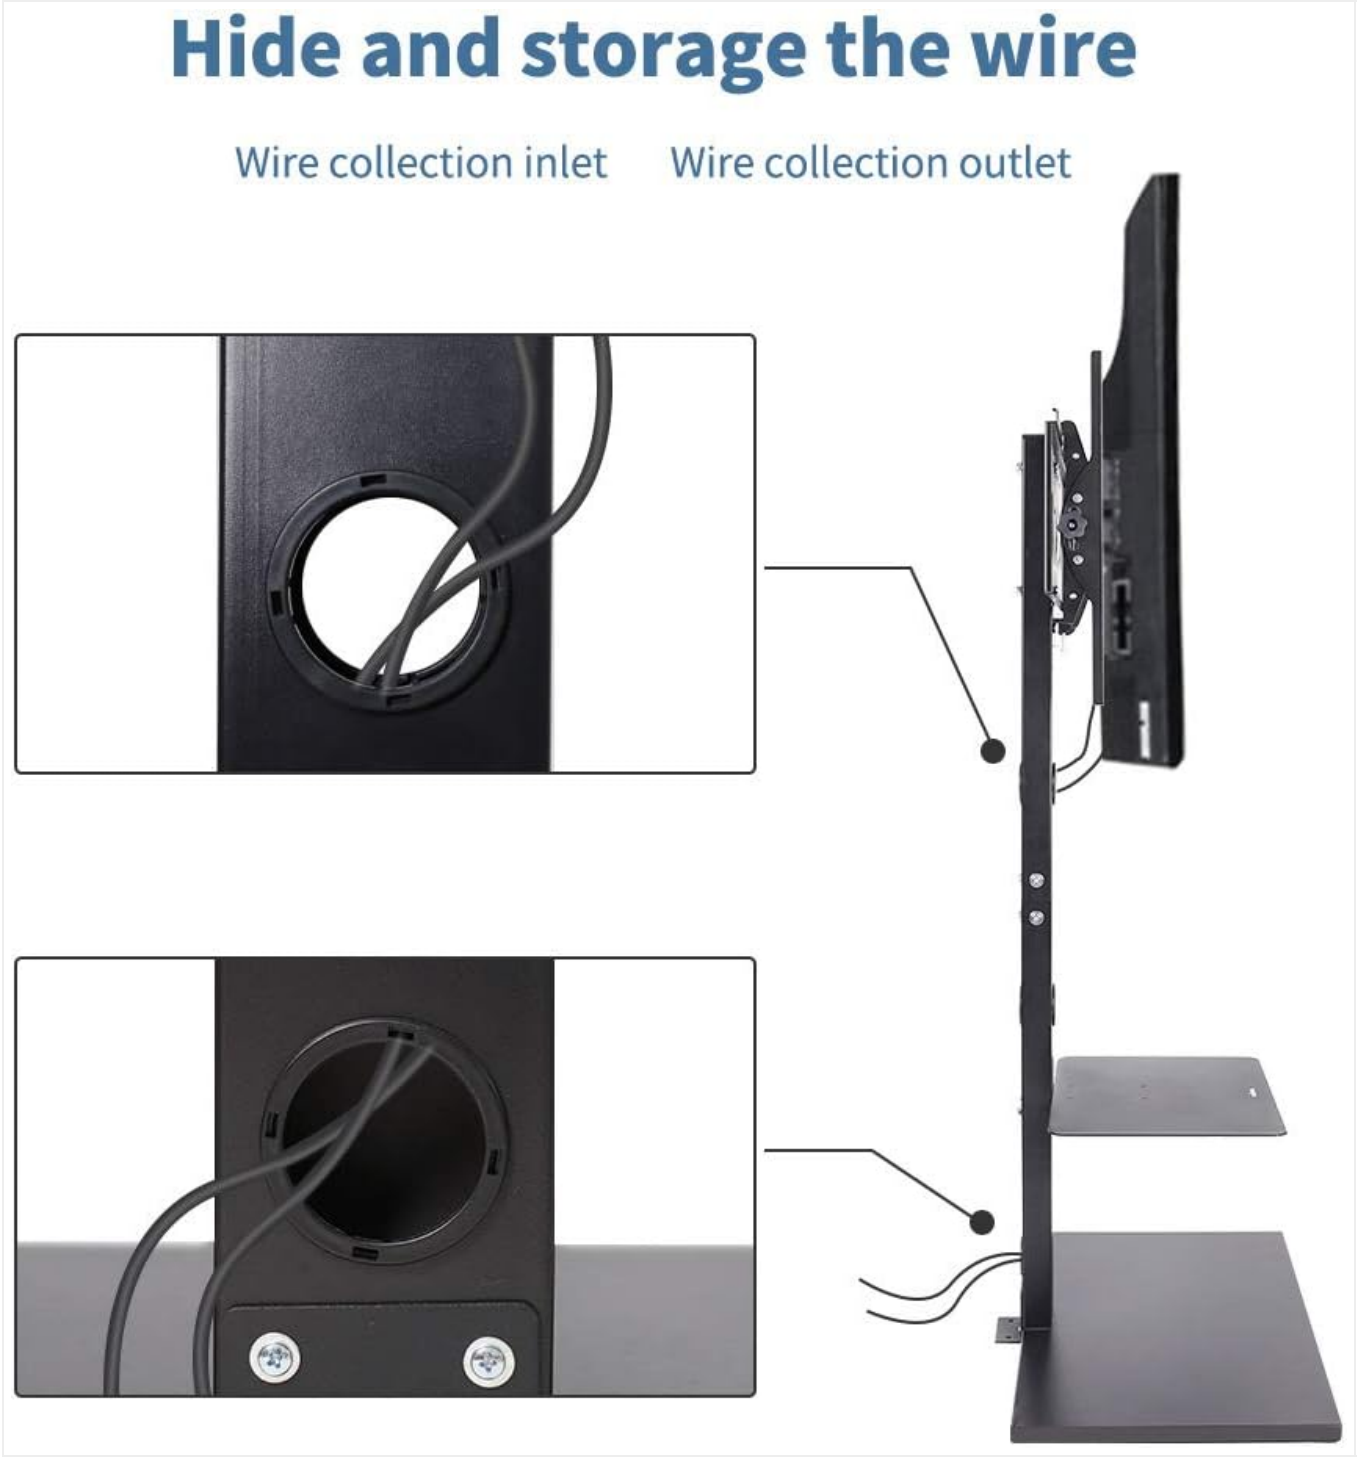

Figure 6: Cable management system details.

Maintenance

Regular maintenance ensures the longevity and safe operation of your TV stand.

- **Cleaning:** Wipe the stand with a soft, dry cloth. Avoid abrasive cleaners or solvents that may damage the finish.
- **Check Connections:** Periodically check all screws and bolts to ensure they remain tight. Re-tighten if necessary.
- **Inspect for Damage:** Regularly inspect the stand for any signs of wear, damage, or instability. Do not use the stand if it appears damaged.

Troubleshooting

Issue	Possible Cause	Solution
Stand leans forward or is unstable.	Improper assembly; uneven floor; heavy TV.	Ensure all connections are tight. Place on a level surface. Consider anchoring the stand to a wall for added stability.
Missing or incorrect hardware.	Packaging error; incorrect bolts for TV.	Verify package contents against the list. Contact customer support for replacement parts. Purchase appropriate VESA bolts if needed for your specific TV model.
Holes do not align during assembly.	Components not perfectly aligned; manufacturing tolerance.	Loosen adjacent screws slightly, align the component, then re-tighten all screws firmly. Do not force parts.
TV does not tilt.	Tilt adjustment knobs are too tight.	Loosen the tilt adjustment knobs/levers on the TV mounting bracket. Adjust the tilt, then re-tighten.

Specifications

Feature	Detail
Product Dimensions (L x W x H)	24.4 x 15.75 x 51.97 inches (62 x 40 x 132 cm)
Item Weight	27.5 pounds (12.5 kg)
Material	Alloy Steel
Mounting Type	Floor Mount
Movement Type	Tilt
Maximum Tilt Angle	15 Degrees
Compatible Devices	Monitor, Television
Supported TV Screen Size	32 - 65 inches
Maximum Load Bearing	30 kg (66 lbs)
VESA Compatibility	100x100mm to 600x400mm
Height Adjustments	3 levels

Warranty and Support

For warranty information, technical support, or to inquire about replacement parts, please contact unho customer service directly. Refer to your purchase documentation or the unho official website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B073D1TGN1

More documents and user manuals: **https://manuals.plus/**