Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Muskoka Lifestyle Products MUS1522

Muskoka Lifestyle Products SunWave 3000W Infrared Patio Heater

Model: MUS1522

Instruction Manual

1. Introduction

Thank you for choosing the Muskoka Lifestyle Products SunWave 3000W Infrared Patio Heater. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new heater. Please read this manual thoroughly before use and retain it for future reference.
The SunWave 3000W Infrared Patio Heater is designed to provide efficient and targeted warmth for outdoor environments. Key features include:

- **Wireless Remote Control:** Easily control the heater from a distance.
- **Three Heat Levels:** Adjustable heat settings to customize your comfort.
- **Enhanced Ambient Heating:** Advanced design improves ambient heating by up to 80%.
- **Versatile Mounting Options:** Includes mounting bracket for wall, ceiling or stand use.
- **IP65 Rated:** Suitable for use in harsh outdoor environments and all-weather conditions.

2. Important Safety Information

Please read and understand all safety warnings and instructions before using this heater. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the heater is connected to a 220-240V, 15 Amp dedicated circuit. Professional installation may be required.
- Do not operate the heater with a damaged cord or plug.
- Keep combustible materials at least 3 feet (0.9 meters) away from the front, sides, and rear of the heater.

- Do not use in areas where gasoline, paint, or flammable liquids are used or stored.
- Always unplug the heater when not in use.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Close supervision is necessary when any heater is used by or near children or invalids.

3. Package Contents

Verify that all items are present and in good condition upon unpacking:

- SunWave 3000W Infrared Patio Heater (Model MUS1522)
- Wireless Remote Control
- Mounting Bracket(s) and Hardware
- Instruction Manual

4. Setup and Installation

The SunWave 3000W heater offers versatile mounting options for optimal heat distribution. It can be mounted on a wall, ceiling, or used with a compatible stand (stand sold separately).

4.1 Mounting Options

The heater includes mounting hardware suitable for various installations. Ensure the mounting surface is sturdy enough to support the heater's weight (approximately 10.6 pounds).



Image 1: Included mounting bracket. Styles may vary.

Description: This image displays a black metal L-shaped mounting bracket with multiple screw holes, designed to securely attach the heater to a wall or ceiling. The bracket is shown against a white background, highlighting its robust construction.



Image 2: Close-up of the 240V power plug.

Description: A close-up shot of the heater's black, three-prong power plug, indicating its 240V requirement. This detail is crucial for ensuring proper electrical connection.

4.2 Electrical Connection

This 3000W heater requires a 220-240V electrical supply with a 15 Amp circuit. Consult a qualified electrician for proper installation if you do not have a suitable outlet or need to hardwire the unit.

4.3 Recommended Angle

For optimal heat distribution and safety, it is recommended to install the heater at a 45-degree angle, directing heat downwards towards the desired area. Avoid installing it straight upwards towards the ceiling to prevent overheating of the mounting surface.



Image 3: Manual angle adjustment for optimal heat direction.

Description: A graphic illustrating the heater's manual angle adjustment capability. Blue arrows indicate the ability to tilt the heater up or down, with a recommended 45-degree angle for effective heating.

5. Operating Instructions

Your SunWave heater can be operated using the included wireless remote control or the manual controls on the unit.

5.1 Remote Control Operation

The remote control allows you to power the unit on/off, adjust heat levels, and set a timer.



Image 4: Wireless remote control.

Description: A white remote control with clearly labeled buttons for power (on/off), heat level adjustment (up/down, max), and timer settings. The Muskoka logo is visible at the bottom.

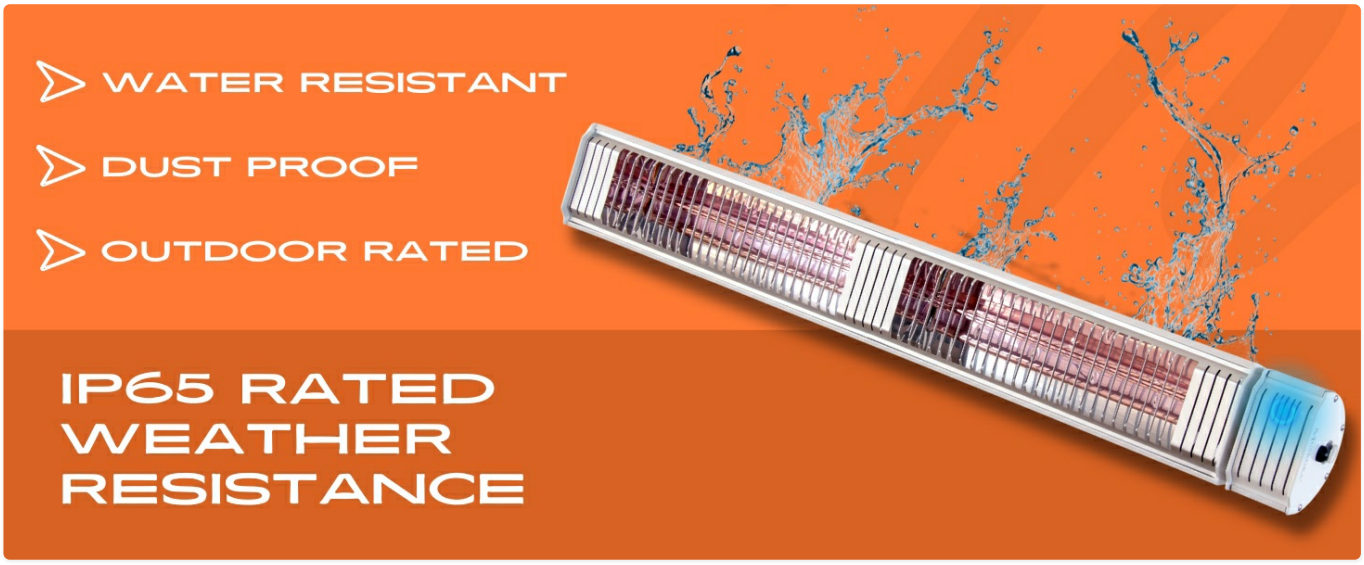

Image 5: Remote control features: On/Off + Max, 3 Heat Levels, 2 AAA Batteries (not included).

Description: A graphic detailing the functions of the wireless remote control, including power on/off, maximum heat setting, and three distinct heat levels. It also notes that 2 AAA batteries are required.

5.2 Heat Levels

The heater features three adjustable heat levels. Use the remote control's '+' and '-' buttons to cycle through the settings. A 'MAX' button is also available for immediate maximum output.

5.3 Timer Function

Set the heater to operate for a specific duration using the timer function on the remote control. Refer to the remote control diagram for the timer button location.

5.4 Product Videos

Watch these official product videos for visual guidance on setup and operation:

▶ **Watch video online**
MUS1522 3000 Watt Commercial Outdoor Infrared Heater

Video 1: MUS1522 3000 Watt Commercial Outdoor Infrared Heater. This video provides an overview of the heater's features and operation.

▶ **Watch video online**
Sunwave 1500 Watt Infrared Patio Heater

Video 2: Sunwave 1500 Watt Infrared Patio Heater. A short preview demonstrating the heater's functionality.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your heater.

- **Cleaning:** Ensure the heater is unplugged and completely cool before cleaning. Use a soft, damp cloth to wipe down the exterior. Do not use abrasive cleaners or solvents.
- **Element Inspection:** Periodically inspect the heating elements for any signs of damage or wear. If damage is

observed, contact customer support for replacement parts.

- **Storage:** If storing the heater for an extended period, ensure it is clean, dry, and stored in a cool, dry place.

7. Troubleshooting

If your heater is not operating correctly, refer to the following common issues and solutions:

- **Heater does not turn on:** Check if the power cord is securely plugged into a 220-240V outlet. Ensure the circuit breaker has not tripped. Verify remote control batteries are functional.
- **No heat output:** Confirm the heater is set to an active heat level (P1, P2, P3, or MAX). Allow a few moments for the elements to heat up.
- **Remote control not working:** Replace batteries in the remote control. Ensure there are no obstructions between the remote and the heater's receiver.
- **Reduced heat:** Ensure the heater is positioned correctly and not obstructed. Clean any dust or debris from the heating elements and reflectors.

For issues not listed here, please contact Muskoka Lifestyle Products customer support.

8. Specifications

Feature	Detail
Brand	Muskoka Lifestyle Products
Model Number	MUS1522
Color	Black
Product Dimensions	39"D x 6"W x 8"H
Item Weight	10.6 pounds
Voltage	220 Volts
Amperage	15 Amps
Heat Output	10236 British Thermal Units (BTU)
Heating Coverage	200 sq.ft.
Number of Speeds	3

Feature	Detail
Special Feature	High Output Quartz Halogen with gold coating Heating elements, IP65 weather Proof for all Elements, Low/ Medium/ High, Remote Control
Indoor/Outdoor Usage	Outdoor
Mounting Type	Wall/ Ceiling
Fuel Type	Electric
UPC	722589487194

9. Warranty and Support

For warranty information, technical support, or to inquire about replacement parts, please refer to the documentation included with your product or visit the official Muskoka Lifestyle Products website. You can also visit the Muskoka Lifestyle Products Store on Amazon.

© 2023 Muskoka Lifestyle Products. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B076MMP7RV

More documents and user manuals: **https://manuals.plus/**