Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

MINISO D-82B

MINISO D-82B Multi-functional Portable Wireless Speaker User Manual

Model: D-82B

1. Introduction

Thank you for purchasing the MINISO D-82B Multi-functional Portable Wireless Speaker. This manual provides important information on how to set up, operate, and maintain your speaker. Please read this manual carefully before using the product and keep it for future reference.

2. Safety Information

To ensure safe and proper operation, please observe the following precautions:

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the speaker yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids.
- Use only the specified charging cable and power adapter.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

3. Package Contents

Please check the box for the following items:

- MINISO D-82B Portable Wireless Speaker
- USB Charging Cable
- AUX Audio Cable
- User Manual

4. Product Overview

Familiarize yourself with the different parts and controls of your MINISO D-82B speaker.

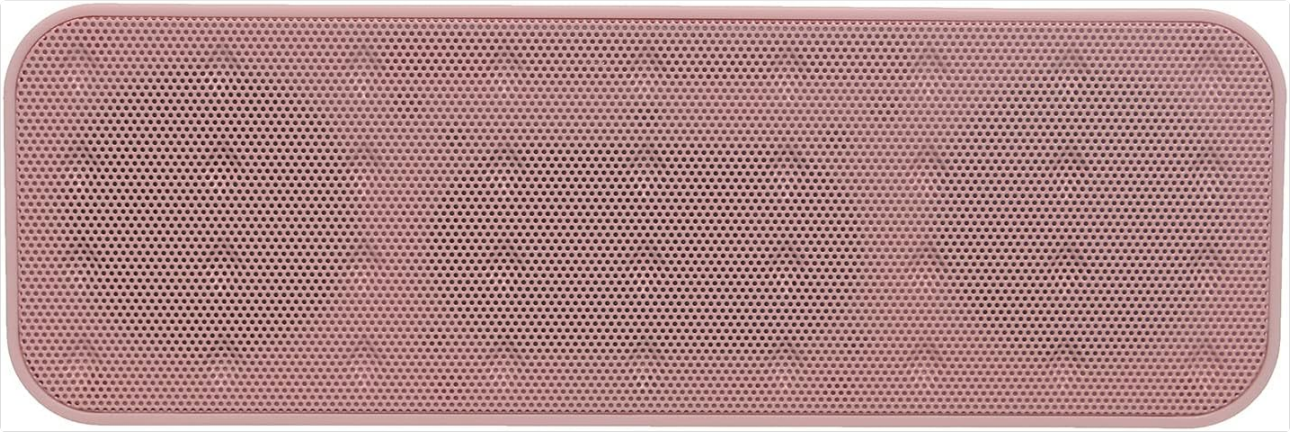

Figure 4.1: Front View of the Speaker. This image displays the speaker's front, featuring a pink, perforated grille that covers the audio drivers.



Figure 4.2: Rear Panel. The back of the speaker features an AUX input port, a Micro USB charging port, and a TF (MicroSD) card slot for direct media playback.



Figure 4.3: Top Controls. The top surface includes four control buttons: Previous Track/Volume Down, Mode selection, Play/Pause/Call management, and Next Track/Volume Up. The MINISO logo is also visible.

Controls and Ports:

- **Power Button:** (Integrated with Play/Pause button, typically long press) Turns the speaker on/off.
- **Mode Button:** Switches between Bluetooth, AUX, and TF card modes.
- **Play/Pause Button:** Plays or pauses audio. Also answers/ends phone calls.
- **Previous Track / Volume Down Button:** Short press for previous track, long press to decrease volume.

- **Next Track / Volume Up Button:** Short press for next track, long press to increase volume.
- **Micro USB Port:** For charging the speaker.
- **AUX Input:** For wired audio connection using a 3.5mm audio cable.
- **TF Card Slot:** For playing music directly from a MicroSD card.

5. Setup

5.1 Charging the Speaker

1. Connect the Micro USB end of the charging cable to the speaker's Micro USB port.
2. Connect the USB-A end of the charging cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate (color may vary) while charging and turn off or change color when fully charged.
4. A full charge typically takes 2-3 hours.

5.2 Bluetooth Pairing

1. Ensure the speaker is fully charged.
2. Long press the Power button to turn on the speaker. It will enter Bluetooth pairing mode automatically, indicated by a flashing LED light and an audible prompt.
3. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
4. Search for Bluetooth devices and select "MINISO D-82B" from the list.
5. Once paired, the LED light will stop flashing, and you will hear a confirmation sound.
6. The speaker will automatically reconnect to the last paired device when turned on, if the device's Bluetooth is active and within range.

5.3 AUX Connection

1. Connect one end of the 3.5mm AUX audio cable to the speaker's AUX input port.
2. Connect the other end of the AUX cable to the audio output jack of your device (e.g., smartphone, computer, MP3 player).
3. The speaker will automatically switch to AUX mode, or you may need to press the Mode button to select AUX mode.

5.4 TF Card Playback

1. Insert a TF (MicroSD) card with pre-loaded MP3 audio files into the TF card slot on the back of the speaker.
2. The speaker will automatically detect the card and begin playing music, or you may need to press the Mode button to select TF card mode.

6. Operating Instructions

6.1 Power On/Off

- **Power On:** Long press the Power button (often integrated with Play/Pause) until the indicator light turns on and you hear a sound.
- **Power Off:** Long press the Power button again until the indicator light turns off and you hear a sound.

6.2 Volume Control

- **Increase Volume:** Long press the "Next Track / Volume Up" button.
- **Decrease Volume:** Long press the "Previous Track / Volume Down" button.

6.3 Music Playback

- **Play/Pause:** Short press the Play/Pause button.
- **Next Track:** Short press the "Next Track / Volume Up" button.
- **Previous Track:** Short press the "Previous Track / Volume Down" button.

6.4 Mode Switching

- Short press the Mode button to cycle through available modes: Bluetooth, AUX, and TF Card.

6.5 Answering/Ending Calls (Bluetooth Mode)

- **Answer Call:** Short press the Play/Pause button when an incoming call rings.
- **End Call:** Short press the Play/Pause button during a call.
- **Reject Call:** Long press the Play/Pause button when an incoming call rings.

7. Maintenance

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the speaker. Do not use liquid cleaners or aerosols.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, charge the speaker fully before first use and at least once every three months if not used regularly. Avoid completely draining the battery.

8. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or dead.	Charge the speaker fully.
No sound.	Volume is too low; Incorrect mode selected; Device not connected properly.	Increase volume on speaker and connected device; Press Mode button to select correct input; Re-pair Bluetooth or re-connect AUX cable.

Problem	Possible Cause	Solution
Bluetooth pairing fails.	Speaker is not in pairing mode; Device Bluetooth is off; Speaker is too far from device.	Ensure speaker is in pairing mode (flashing LED); Turn on Bluetooth on your device; Move speaker closer to device (within 10 meters).
Sound distortion.	Volume too high; Low battery; Interference.	Decrease volume; Charge speaker; Move speaker away from other electronic devices.

9. Specifications

Brand Name	MINISO
Model Name	D-82B (Item Model Number: 4506745084313)
Product Dimensions	5 x 5 x 5 cm
Item Weight	1 kg
Connectivity Technology	Wired/Wireless (Bluetooth)
Audio Output Mode	Stereo
Mounting Type	Tabletop Mount
Speaker Type	Bluetooth Speakers
Special Features	Wireless, Bluetooth
Recommended Uses	For Gaming Consoles, For Televisions, For Computers, For Smartphones or Tablets, For Music Players
Compatible Devices	Multi-device compatibility
Color	Pink
First Available Date	June 6, 2021

10. Warranty and Support

MINISO products are designed to meet high quality standards. This product comes with a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions.
For technical support, troubleshooting assistance, or warranty claims, please contact MINISO customer service through their official website or the contact information provided on your product packaging.

© 2023 MINISO. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B077P48LCK

More documents and user manuals: **https://manuals.plus/**