Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kushies Zolo Original Stroker (B07887BK3X)

Kushies Zolo Original Stroker Instruction Manual

Model: Zolo Original Stroker (B07887BK3X)

1. Overview

The Kushies Zolo Original Stroker is a squeezable personal device designed for pleasure. It features an ultrarealistic textured sleeve and includes a 7-function vibrating bullet for varied sensations. The sleeve is made from a soft, natural, phthalate-free material, ensuring comfort and safety. It is designed for easy cleaning and washing.

2. Safety Guidelines

- Read all instructions carefully before first use.
- This product is intended for adult use only.
- Not intended for medical use. Consult a healthcare professional if you experience any discomfort or adverse reactions.
- Keep out of reach of children.
- Store the device in a clean, dry, and safe place away from direct sunlight and extreme temperatures.
- Use only water-based lubricants with this product to prevent material degradation.

3. Package Contents

Please check the package to ensure all items are present:

- 1 x Zolo Original Stroker Unit
- 1 x 7-Function Vibrating Bullet

4. Getting Started

4.1 Battery Installation for Vibrating Bullet

The vibrating bullet requires batteries for operation. Batteries are typically not included.

1. Locate the battery compartment on the vibrating bullet. This is usually a twist-off cap at one end.

2. Carefully open the compartment.
3. Insert the appropriate batteries (e.g., AAA or button cell, refer to bullet for specific type) according to the polarity indicators (+/-).
4. Securely close the battery compartment, ensuring it is sealed to prevent moisture ingress.

4.2 First Use Preparation

1. Before initial use, thoroughly clean the Zolo Original Stroker unit and the vibrating bullet as described in the "Maintenance and Cleaning" section.
2. Ensure both components are completely dry.
3. Apply a generous amount of water-based lubricant to the entrance and interior of the stroker for comfortable use.

5. Operating Instructions

5.1 Powering On/Off the Vibrating Bullet

To activate the vibrating bullet, press and hold the power button (usually located on the bullet itself) for a few seconds until it turns on. To turn it off, press and hold the power button again.

5.2 Function Selection

Once the vibrating bullet is on, short presses of the power button will cycle through the 7 different vibration functions. Experiment to find your preferred setting.

5.3 Usage

Insert the vibrating bullet into the designated area of the Zolo Original Stroker. Hold the stroker and apply gentle pressure as desired. The squeezable design allows for customizable sensation. Adjust the vibration settings as preferred during use.

6. Maintenance and Cleaning

6.1 Cleaning After Each Use

Proper cleaning is essential for hygiene and product longevity. The Zolo Original Stroker is designed to be easy to clean and wash.

1. Remove the vibrating bullet from the stroker unit.
2. Wash both the stroker unit and the vibrating bullet (if waterproof) with warm water and a mild, toy-safe soap. Avoid harsh detergents or alcohol-based cleaners.
3. Rinse both components thoroughly under running water to remove all soap residue.
4. Allow both parts to air dry completely before storage. Ensure no moisture remains, especially in the battery compartment of the bullet.

6.2 Storage

Store the Zolo Original Stroker and its vibrating bullet in a clean, dry, and dust-free environment. Keep them away from direct sunlight, extreme temperatures, and other personal devices made of different materials to prevent potential reactions.

7. Troubleshooting

- **Vibrating bullet not turning on or vibrating weakly:**
  Check the batteries. Ensure they are inserted correctly with the correct polarity. Replace with fresh batteries if necessary.
- **Difficulty cleaning:**
  Ensure you are using warm water and a mild soap. For thorough cleaning, you may gently invert the sleeve if its design allows, then rinse thoroughly.
- **Product feels sticky or degraded:**
  Ensure you are only using water-based lubricants. Oil-based lubricants can damage the material over time. Clean and store the product properly as per instructions.

8. Product Specifications

Attribute	Detail
Brand	Kushies
Model Name	Zolo Original Stroker
ASIN	B07887BK3X
UPC	848416002863
Color	Green
Dimensions (L x W x H)	15.2 x 5.1 x 10.2 centimeters
Material	Phthalate-Free

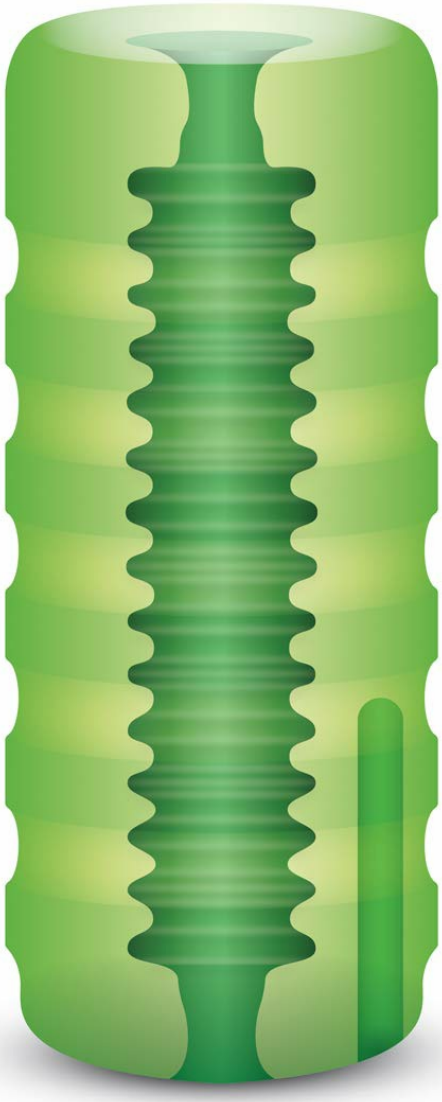

Image: The Zolo Original Stroker in green, illustrating its approximate dimensions of 5.3 inches (13 cm) in height.

9. Warranty and Customer Support

Specific warranty information for the Kushies Zolo Original Stroker is not provided in this manual. For details regarding warranty coverage, returns, or any product-related inquiries, please refer to the retailer's return policy or contact Kushies customer support directly through their official website or the point of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07887BK3X

More documents and user manuals: **https://manuals.plus/**