Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

InSinkErator STS-OOSN

InSinkErator STS-OOSN Garbage Disposal Air Switch Kit User Manual

Model: STS-OOSN | Brand: InSinkErator

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your InSinkErator STS-OOSN Garbage Disposal Air Switch Kit. This kit offers a convenient and stylish alternative to a traditional wall switch for your garbage disposal, especially suitable for kitchen island installations.

What's Included

The InSinkErator STS-OOSN Garbage Disposal Air Switch Kit includes the following components:

- 1.25-inch diameter sink top switch
- UL-Listed dual outlet power module with 33-inch power cord
- 6-foot air tube
- Mounting hardware
- Satin nickel-finish push button
- Installation instructions



Figure 1: Components included in the kit.

Setup and Installation

The air switch is designed for easy DIY installation. Ensure you have access to the area under your sink and follow all local electrical codes.

1. **Mounting Location:** The air switch button mounts easily to the sink top or countertop. It requires a standard 1.375-inch hole.
2. **Countertop Thickness:** The maximum countertop thickness supported is 3 inches. The required sink hole diameter is between 1-1/4 inches and 1-1/2 inches.
3. **Power Module Placement:** The UL-Listed dual outlet power module should be placed in an accessible location under the sink, compatible with any AC-powered InSinkErator food waste disposer model.
4. **Air Tube Connection:** Connect the 6-foot air tube from the push button to the power module.
5. **Disposer Connection:** Plug your InSinkErator garbage disposer into the designated outlet on the power module.
6. **Secondary Appliance Connection (Optional):** The second outlet can be used for other kitchen appliances, such as an instant hot water dispenser. Note that power to the second plug is cut off momentarily when the disposal is turned on to prevent overload.



Figure 2: Air switch button mounting dimensions.

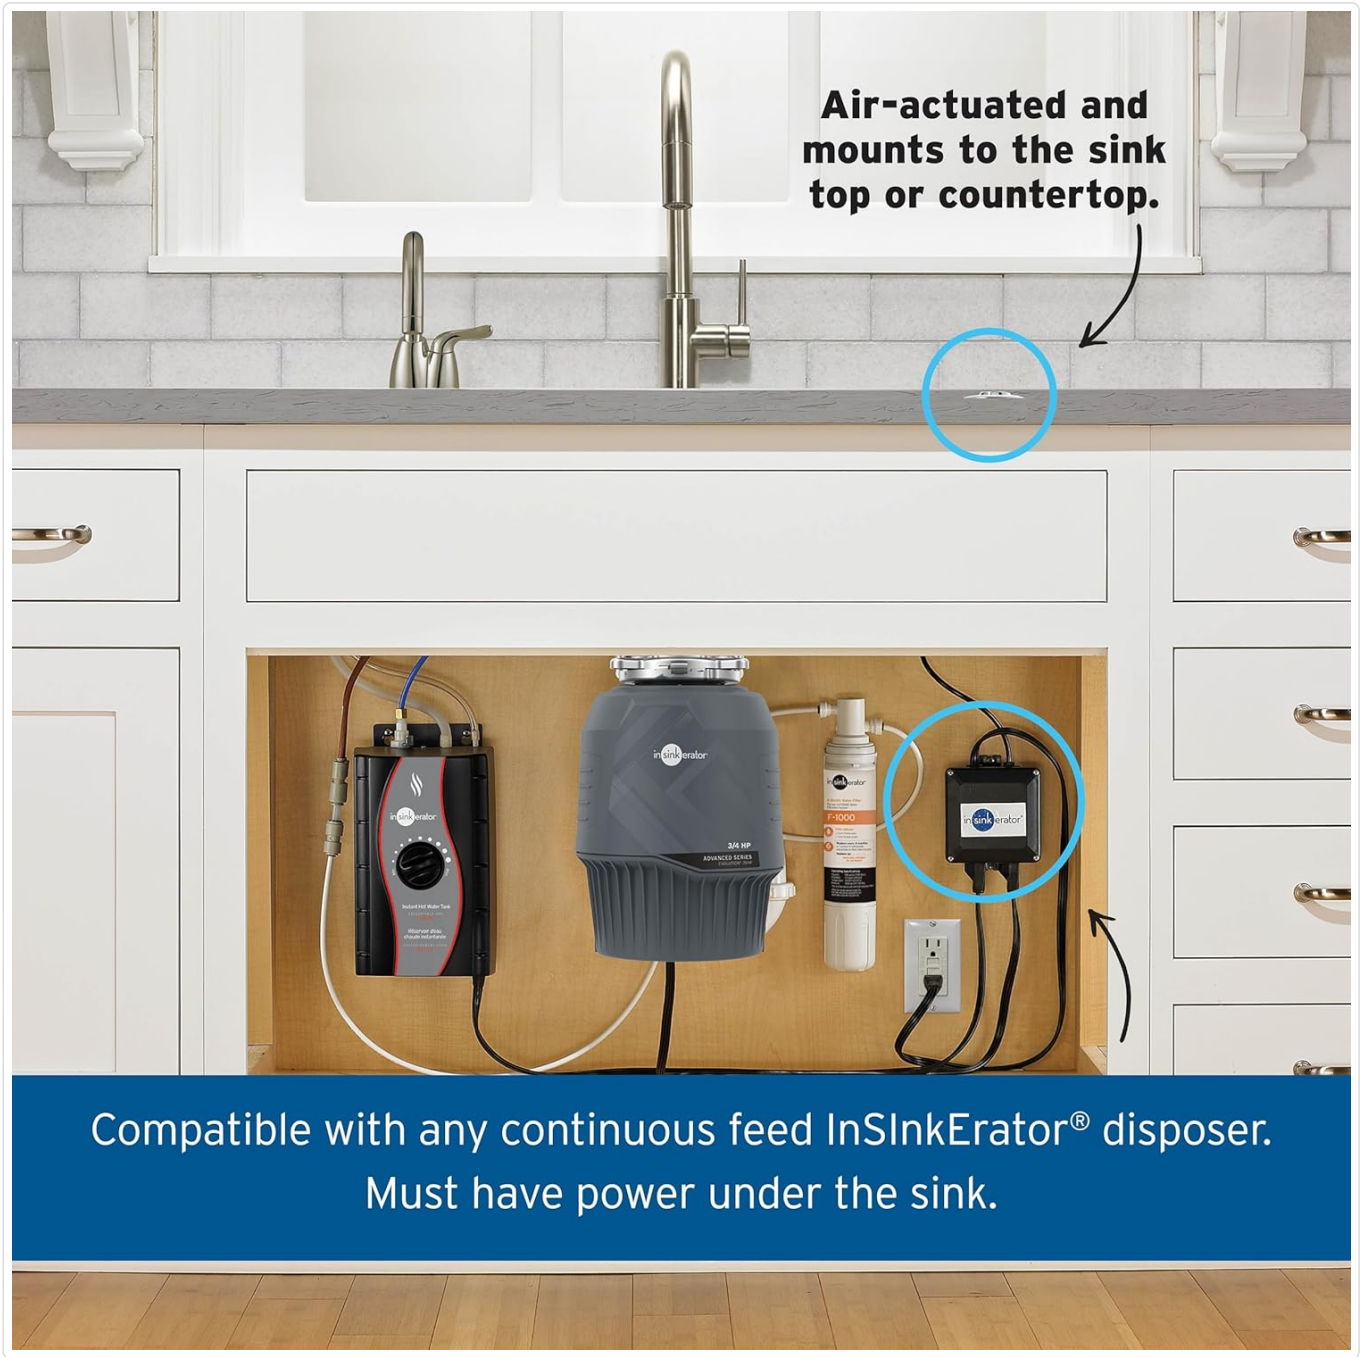

Figure 3: Example installation under a sink.



Figure 4: Dual outlet power module functionality.

Operating Instructions

The InSinkErator Air Switch provides simple, touch-based control for your garbage disposal.

1. **Activating the Disposal:** Press the satin nickel push button located on your sink top or countertop to turn the garbage disposal ON.
2. **Deactivating the Disposal:** Press the push button again to turn the garbage disposal OFF.
3. **Dual Outlet Functionality:** If a secondary appliance is plugged into the second outlet, it will operate normally. When the garbage disposal is activated, power to the second outlet will temporarily cease to prevent electrical overload.

▶ **Watch video online**

Product Demonstration Video

Video 1: Product Demonstration. This video shows the InSinkErator air switch being used to operate a garbage disposal, demonstrating its simple on/off functionality.

Maintenance

The InSinkErator Air Switch Kit requires minimal maintenance. Keep the push button and surrounding countertop clean with a mild, non-abrasive cleaner. Ensure the air tube remains free of kinks or obstructions to maintain proper operation.

Troubleshooting

- **Disposal Not Turning On:**
  - Check if the power module is securely plugged into a working electrical outlet.
  - Ensure the garbage disposal is properly plugged into the power module.
  - Verify that the air tube is securely connected at both ends and is not kinked or damaged.
  - If your disposal has a reset button, check if it needs to be pressed.
- **Secondary Appliance Not Receiving Power:**
  - Confirm the secondary appliance is correctly plugged into the second outlet.
  - Remember that power to the second outlet is temporarily interrupted when the disposal is running.
  - Test the appliance in a different outlet to ensure it is functional.
- **Button Not Responding:**
  - Inspect the air tube for any disconnections or damage.
  - Ensure the button is fully depressed when pressed.

For persistent issues, contact InSinkErator customer support.

Specifications

Feature	Detail
Model	STS-OOSN
Brand	InSinkErator
Operation Mode	ON-OFF
Current Rating	2 A
Operating Voltage	120 volts
Wattage	1200 watts
Switch Type	Push Button
Mounting Type	Surface Mount
Material	Plastic (Contact Material: Nickel)
Color	Satin Nickel
Item Dimensions (L x W x H)	2.5 x 4 x 4 inches

Item Weight	15.52 ounces
Compatible Devices	All AC-powered InSinkErator food waste disposer models
International Protection Rating	IP67

Warranty Information

The InSinkErator STS-OOSN Garbage Disposal Air Switch Kit is backed by a**1-Year Over-the-Counter Replacement Limited Warranty**. This warranty covers defects in material and workmanship under normal use. Please refer to the official InSinkErator warranty documentation for complete terms and conditions.



Figure 5: Warranty details.

Customer Support

For further assistance, technical support, or warranty claims, please visit the official InSinkErator website or contact

their customer service department. You can find contact information on the InSinkErator website or within the included instruction manual.

Online Resources: www.insinkerator.com

© 2023 InSinkErator. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B078YC6245

More documents and user manuals: **https://manuals.plus/**