Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Uniflasy 720-0830H

Uniflasy 17" x 26.4" Stainless Steel Cooking Grates Instruction Manual

Brand: Uniflasy | Model: 720-0830H and Compatible Models

Introduction

This instruction manual provides essential information for the safe and effective use and maintenance of your Uniflasy 17" x 26.4" Stainless Steel Cooking Grates. Please read this manual thoroughly before installation and use, and retain it for future reference. These grates are designed as replacement parts for various Nexgrill models, ensuring a precise fit and enhanced grilling experience.

Product Overview

The Uniflasy Stainless Steel Cooking Grates are engineered for durability and superior cooking performance. Each grate measures 17" x 13.2", combining to a total cooking surface of 17" x 26.4".

- **Material:** Constructed from non-magnetic, heavy-duty 7mm solid stainless steel, offering excellent corrosion resistance and heat retention.
- **Design:** Features narrow gaps between rods to prevent small food items from falling through. Designed to provide distinct sear marks.
- **Compatibility:** Specifically designed to fit Home Depot Nexgrill 4-burner models including 720-0830H, 720-0783E, 720-0830X, 720-0783C, 720-0341, 720-0549, 720-0670A, 720-0670C, 720-0697E. Also compatible with Nexgrill 5-burner models 720-0888N, 720-0888, 720-0888S, and Cuisinart CGG-7400 Gas Grill.

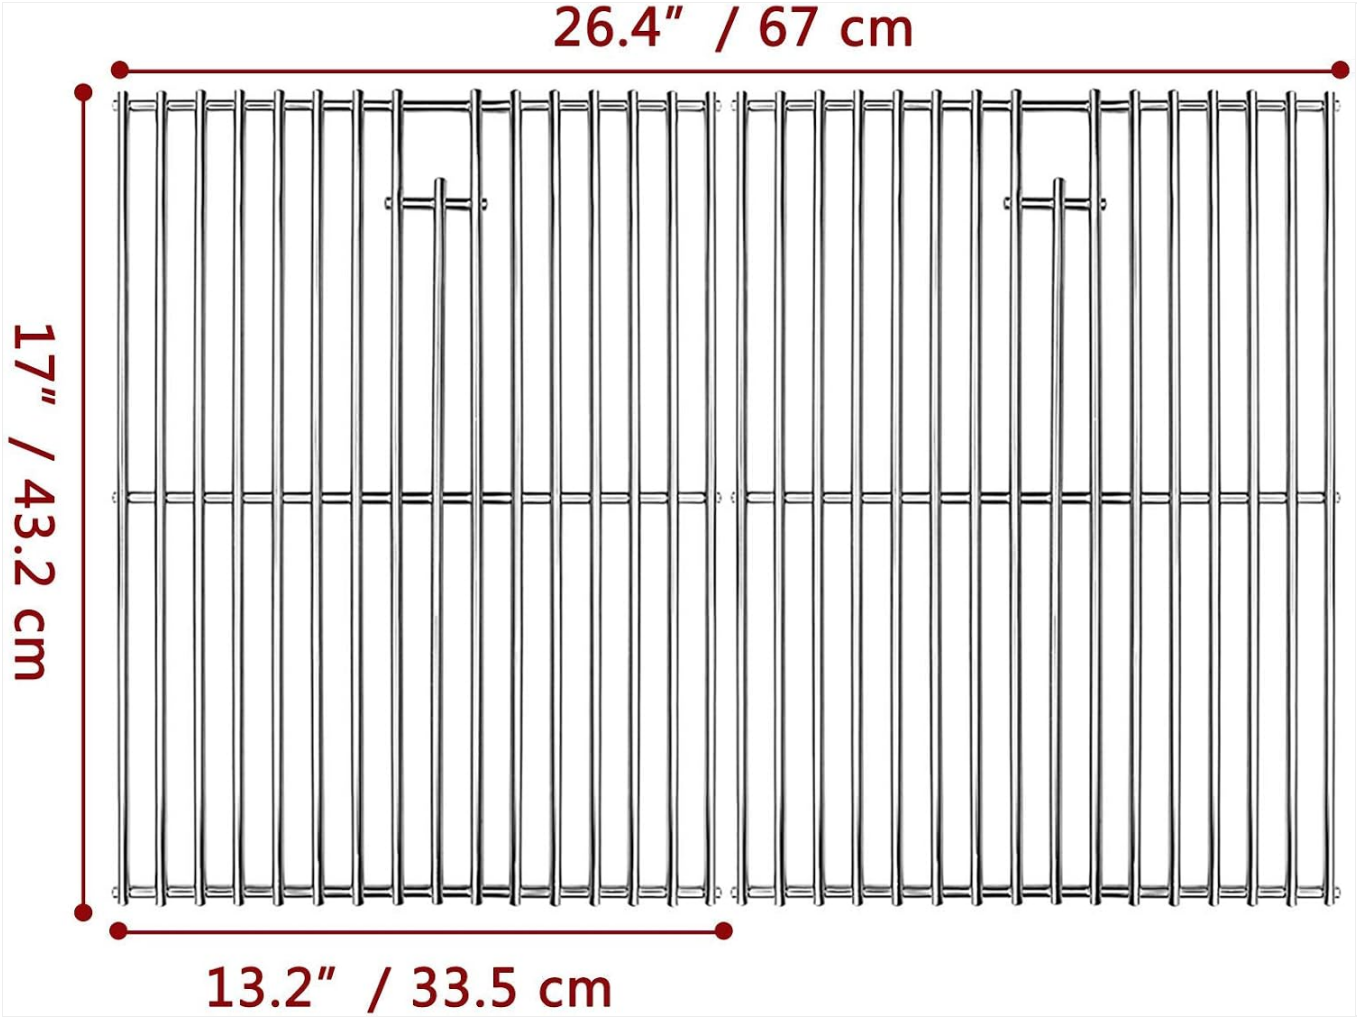


Figure 1: Dimensions of the Uniflasy Stainless Steel Cooking Grates.

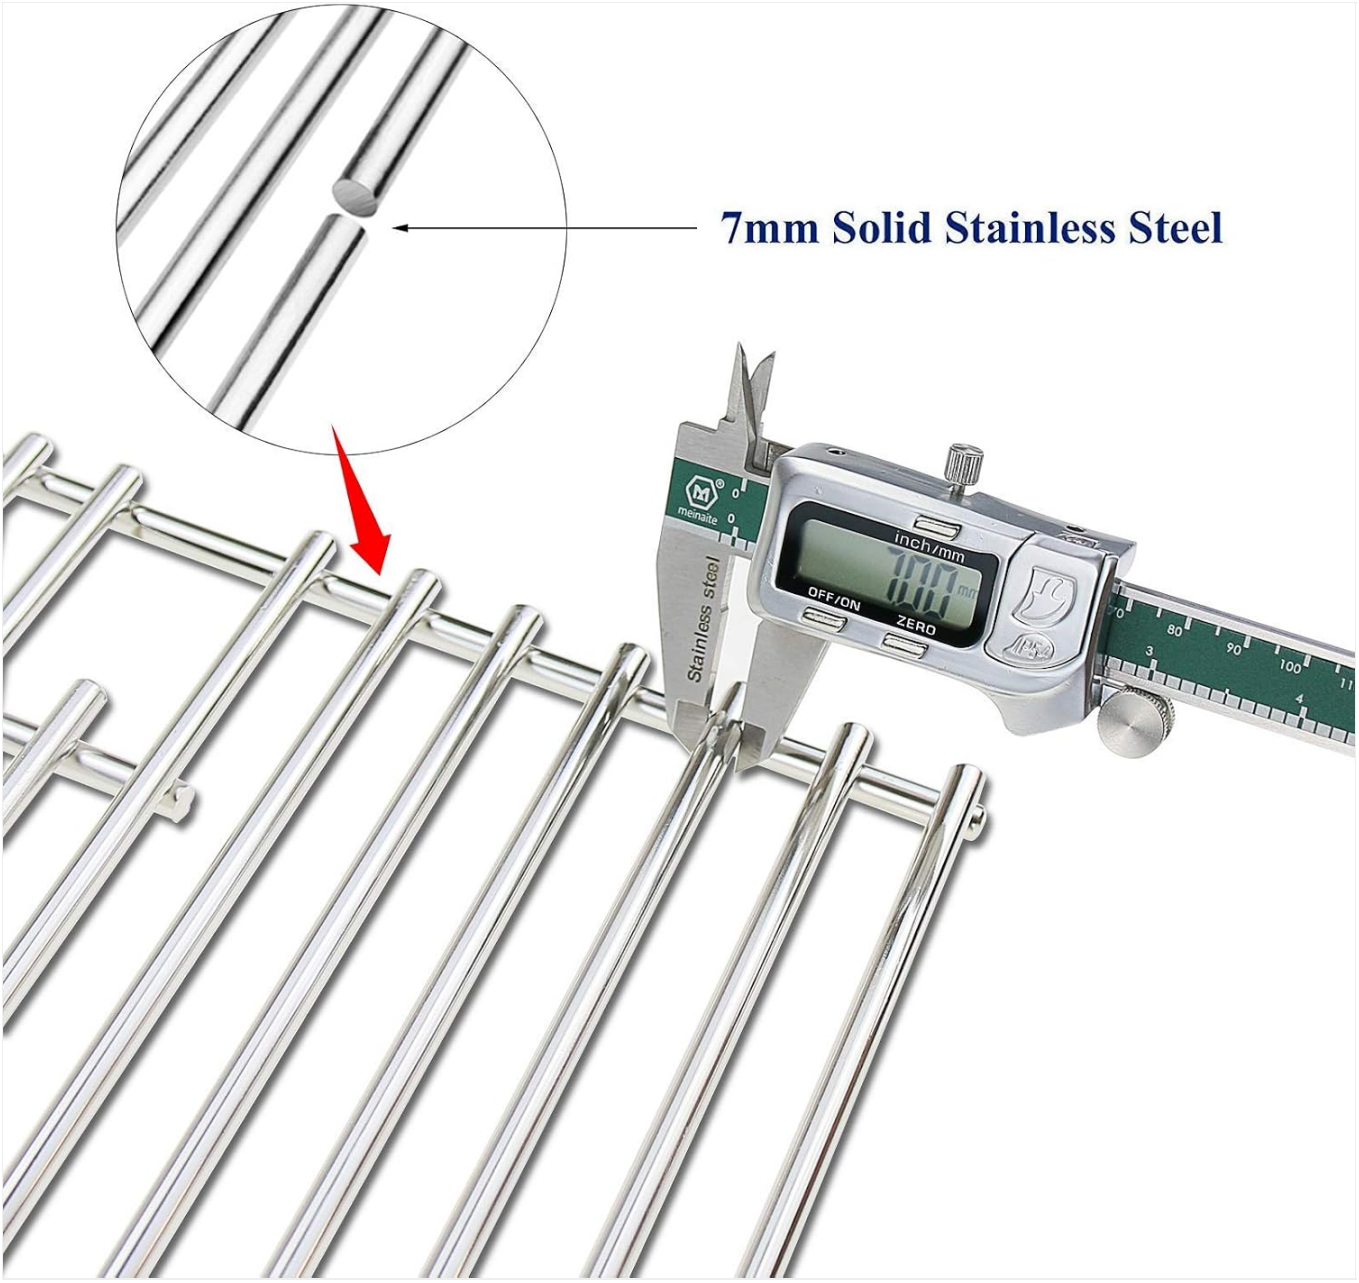


Figure 2: Detail of the 7mm solid stainless steel construction.

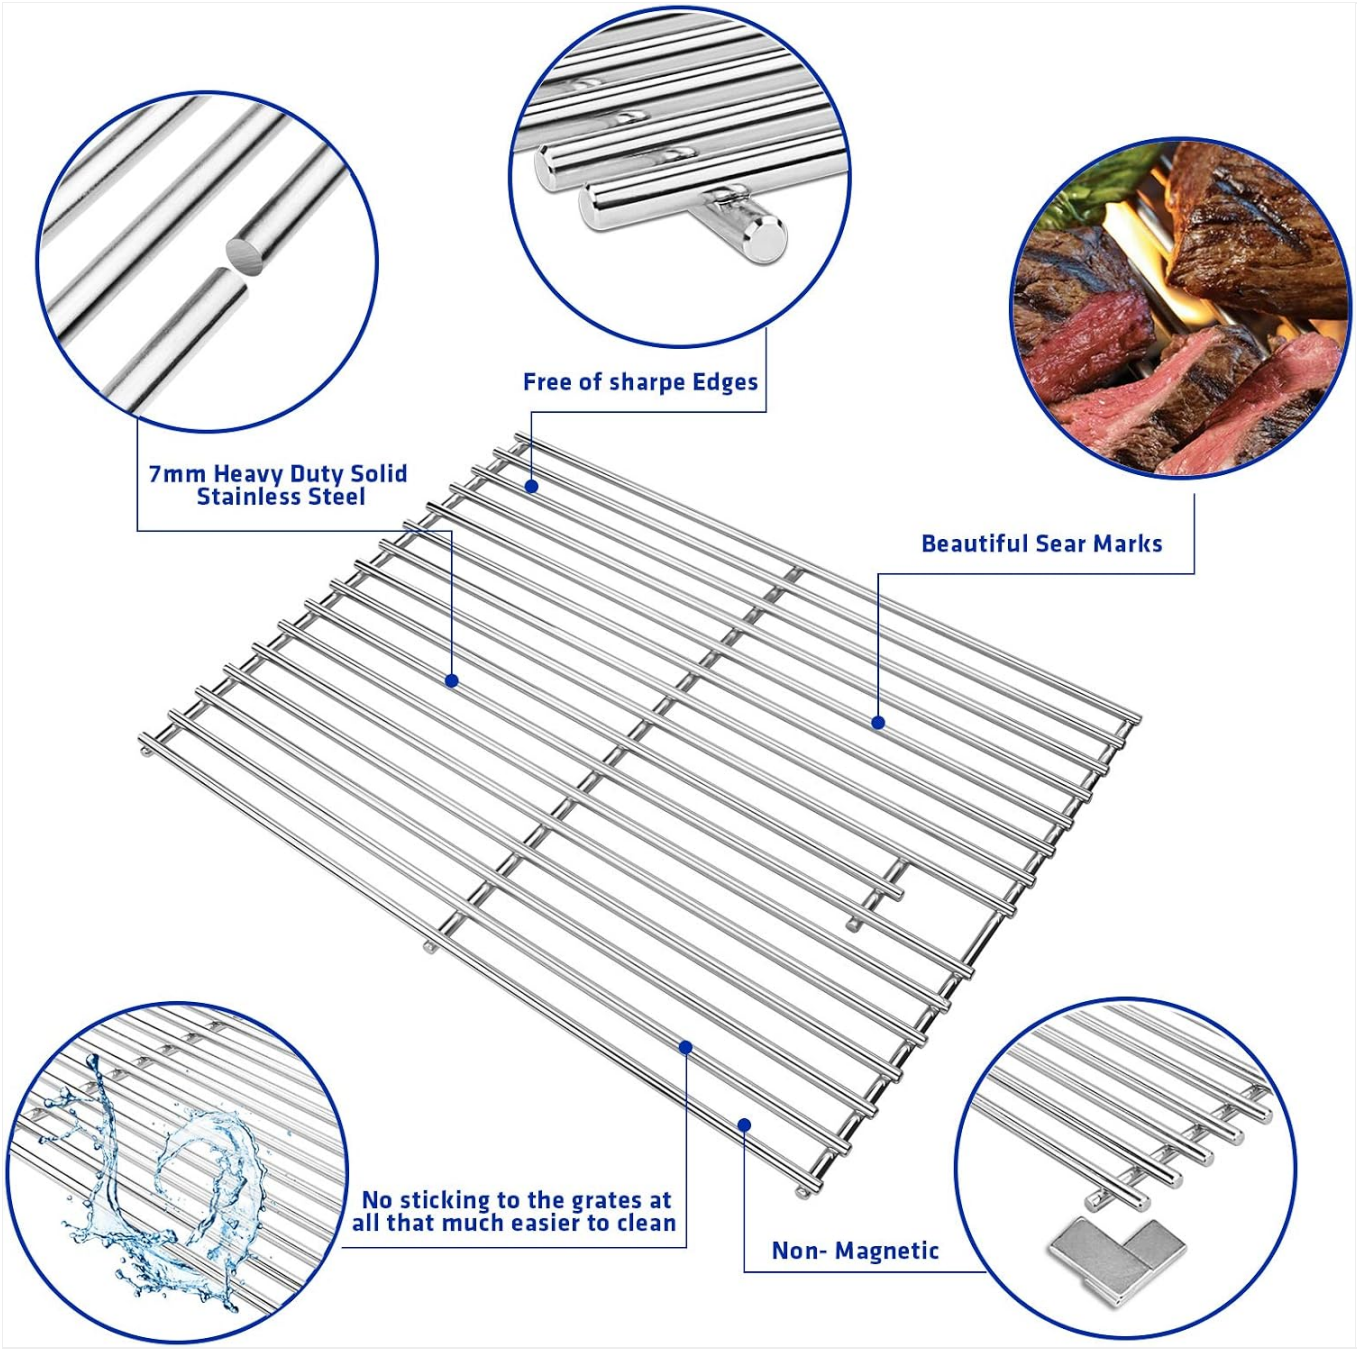


Figure 3: Key features of the Uniflasy cooking grates.



Figure 4: Non-magnetic test confirming genuine stainless steel.

Safety Information

Always prioritize safety when working with grill components. Ensure the grill is completely cool and disconnected from its fuel source before handling or replacing grates. Wear protective gloves to prevent cuts or burns. Keep children and pets away from the grill during installation and operation.

Setup and Installation

These cooking grates are designed for straightforward replacement. Follow these steps for proper installation:

1. Ensure your grill is turned off, cooled down, and the gas supply is disconnected.
2. Carefully remove the old cooking grates and any underlying heat tents or burner covers.
3. Clean any debris or residue from the grill's interior before installing new components.
4. Place the new Uniflasy cooking grates into the designated slots on your grill. Ensure they sit securely and evenly.

5. Verify that the grates are properly aligned and do not wobble.



Figure 5: Example of a grill with existing grates before replacement.



Figure 6: New grates perfectly installed in a Nexgrill 720-0830H.

▶ **Watch video online**

Grill Accessories for Most Home Depot Nexgrill 720 Series

Video 1: Overview of grill accessories, including cooking grates, for Nexgrill 720 series models. This video demonstrates various replacement parts and their general appearance.

Operating Instructions

Once installed, your new stainless steel cooking grates are ready for use. Stainless steel grates heat up quickly and evenly, providing consistent cooking temperatures. The robust design helps create excellent sear marks on your food.

- **Preheating:** Always preheat your grill with the lid closed for 10-15 minutes to allow the grates to reach optimal cooking temperature.
- **Oiling:** Lightly oil the grates before placing food to prevent sticking. Use a high smoke point oil like canola or grapeseed oil.
- **Cooking:** Place food directly on the hot grates. The narrow rod design helps support smaller items.



Figure 7: Food cooking on the stainless steel grates.

Maintenance

Proper maintenance extends the life of your cooking grates and ensures hygienic cooking. Stainless steel grates are known for their ease of cleaning compared to cast iron.

- **After Each Use:** While the grates are still warm, use a grill brush to remove any food residue. For stubborn spots, allow the grill to cool, then use a damp cloth or sponge with mild soap.
- **Deep Cleaning:** Periodically, remove the grates and wash them with warm, soapy water. A non-abrasive scrubber can be used for thorough cleaning. Rinse completely and dry immediately to prevent water spots.
- **Storage:** Store grates in a dry environment when not in use for extended periods.

Troubleshooting

If you encounter issues with your cooking grates, consider the following:

- **Food Sticking:** Ensure the grates are properly preheated and lightly oiled before placing food. Insufficient preheating or oiling can lead to sticking.
- **Uneven Cooking:** Verify that the grates are seated correctly and that your grill's burners are functioning properly and distributing heat evenly.
- **Rust Spots:** While stainless steel is corrosion-resistant, prolonged exposure to moisture or harsh chemicals can cause surface rust. Clean immediately with a stainless steel cleaner and dry thoroughly.

Specifications

Feature	Detail
Brand	Uniflasy
Product Dimensions (Total)	26.4"D x 17"W x 0.3"H
Material	Stainless Steel
Rod Thickness	7mm
Color	Silver
Included Components	Cooking Grid Grate x2
Item Weight	11.05 Pounds
Special Feature	Corrosion Resistant
Compatibility (Nexgrill)	720-0830H, 720-0830D, 720-0783E, 720-0783C, 720-0341, 720-0549, 720-0670A, 720-0670C, 720-0697E, 720-0888N, 720-0888, 720-0888S
Compatibility (Other)	Cuisinart CGG-7400 Gas Grill

Warranty and Support

For warranty information, product support, or to inquire about additional replacement parts, please contact Uniflasy customer service directly. Refer to the product packaging or the official Uniflasy website for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07CZGCLXR

More documents and user manuals: **https://manuals.plus/**