Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BC01B

Braun Classic Analog Alarm Clock BC01B User Manual

Introduction

This manual provides comprehensive instructions for the Braun Classic Analog Alarm Clock, model BC01B. Please read this manual carefully before using the product to ensure proper operation and longevity. Keep this manual for future reference.

Product Features

- **Silent Quartz Movement:** Ensures accurate timekeeping without ticking noise.
- **Crescendo Beep Alarm:** The alarm sound increases in frequency and volume if not turned off.
- **Integrated Foot Snooze/Light Function:** Activates snooze for 5 minutes and illuminates the dial for 5 seconds when pressed.
- **Luminous Tipped Hands:** Hour and minute hands glow in the dark for improved visibility in low light conditions.
- **Easy-to-Read Dial:** Clear and simple dial design for quick time reading.

Setup

1. Battery Installation

The Braun BC01B alarm clock requires one (1) AA battery (not included).

1. Locate the battery compartment cover on the back of the alarm clock.
2. Remove the cover by sliding or lifting it.
3. Insert one AA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Image: Rear view of the Braun BC01B alarm clock, highlighting the battery compartment and adjustment dials for time and alarm settings.

2. Setting the Time

1. Locate the time setting knob on the back of the alarm clock (usually marked with a clock icon).
2. Rotate the knob clockwise or counter-clockwise until the hour and minute hands display the correct time.

3. Setting the Alarm

1. Locate the alarm setting knob on the back of the alarm clock (usually marked with an alarm icon).
2. Rotate the knob to move the alarm hand to your desired alarm time.
3. Ensure the alarm ON/OFF switch (often a small slider or button) is in the 'ON' position to activate the alarm.

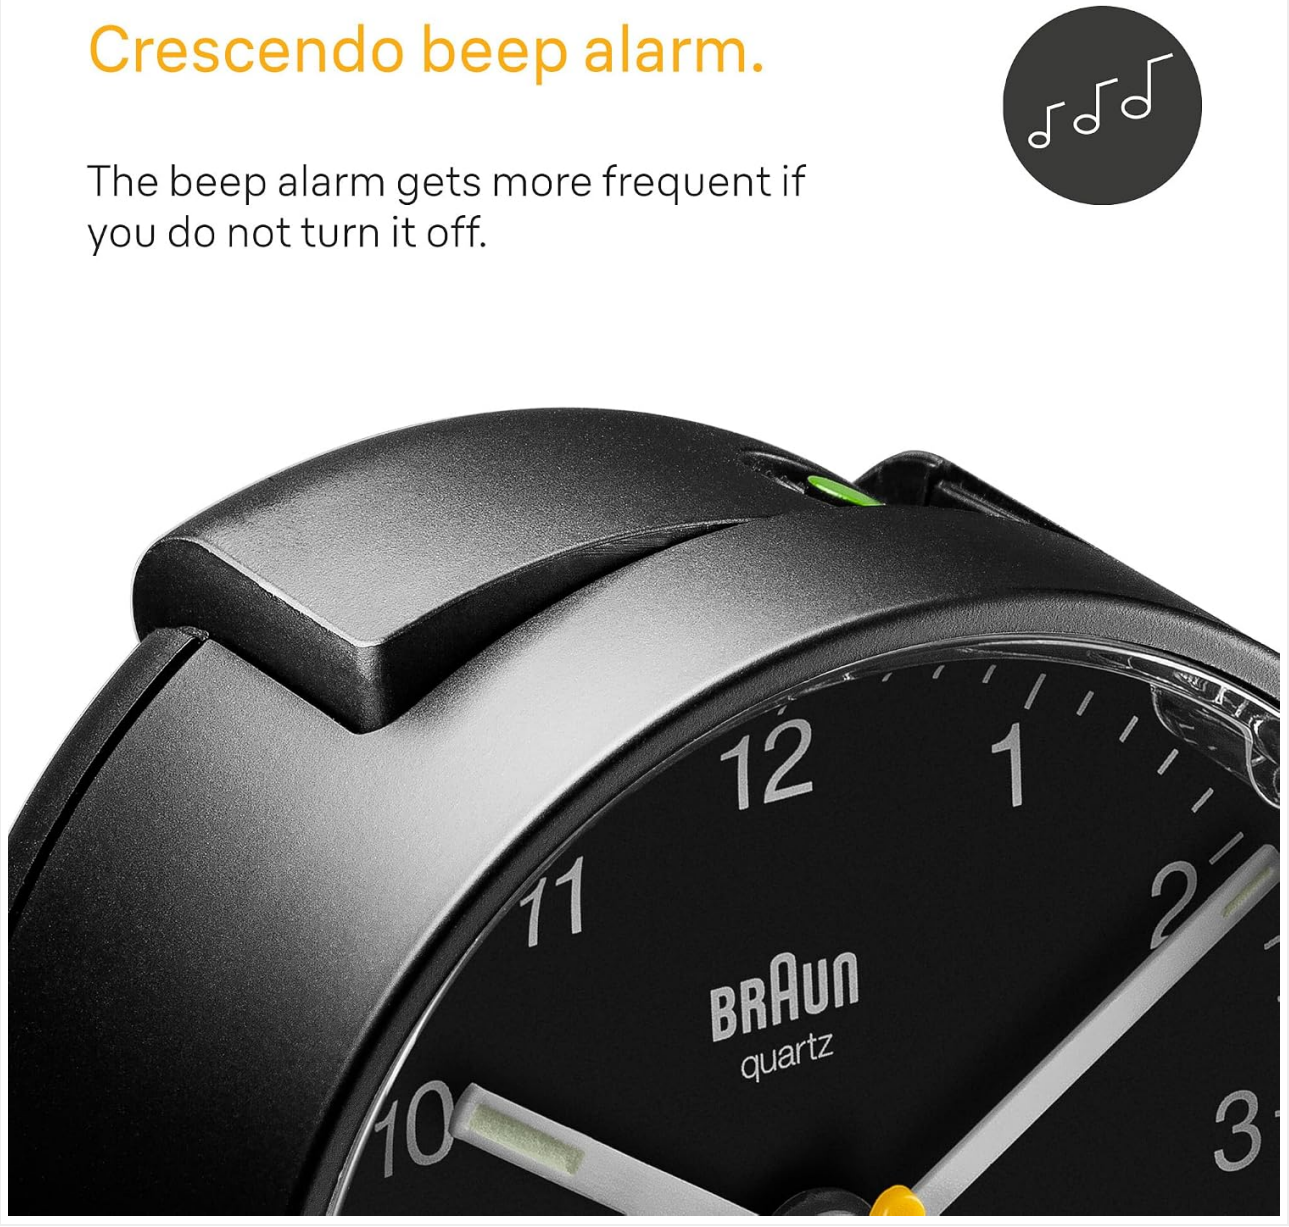


Image: A close-up view of the top of the Braun BC01B alarm clock, illustrating the integrated foot snooze/light button.

Operating Instructions

1. Activating/Deactivating the Alarm

Use the alarm ON/OFF switch located on the back or side of the clock to toggle the alarm function.

- Slide the switch to 'ON' (often indicated by a color, e.g., green) to enable the alarm.
- Slide the switch to 'OFF' to disable the alarm.

2. Snooze Function

When the alarm sounds, press the integrated foot snooze/light button located at the base of the clock.

- Pressing the button will temporarily silence the alarm for approximately 5 minutes.
- The alarm will sound again after the snooze interval.



Image: The Braun BC01B alarm clock with an overlay indicating the 'Zzz 5 min' snooze function, showing the clock face and the snooze button at the base.

3. Light Function

To illuminate the clock face in low light conditions:

- Press the integrated foot snooze/light button at the base of the clock.
- The dial will illuminate for approximately 5 seconds.



Image: The Braun BC01B alarm clock with its dial illuminated, demonstrating the light function for nighttime visibility.

Maintenance

1. Cleaning

To clean your alarm clock:

- Wipe the clock with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish.

2. Battery Replacement

Replace the AA battery when the clock stops functioning or the alarm sound weakens.

1. Follow the battery installation steps outlined in the "Setup" section.
2. Dispose of used batteries responsibly according to local regulations.

Troubleshooting

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Battery is dead or incorrectly inserted.	Replace the battery with a new AA battery, ensuring correct polarity.
Alarm not sounding	Alarm is not activated or alarm time is incorrectly set.	Check the alarm ON/OFF switch. Verify the alarm hand is set to the desired time.
Light function not working	Battery is low or dead.	Replace the battery.
Clock losing time	Weak battery.	Replace the battery with a fresh AA battery.

Specifications

Model: BC01B

Brand: Braun

Movement: Silent Quartz

Power Source: 1 x AA Battery (not included)

Dimensions: 6.9 cm x 3.81 cm x 3.7 cm (2.72 in x 1.5 in x 1.46 in)

Weight: 82.2 grams (2.9 oz)

Material: Plastic

Alarm Type: Crescendo Beep

Snooze Duration: 5 minutes

Light Duration: 5 seconds

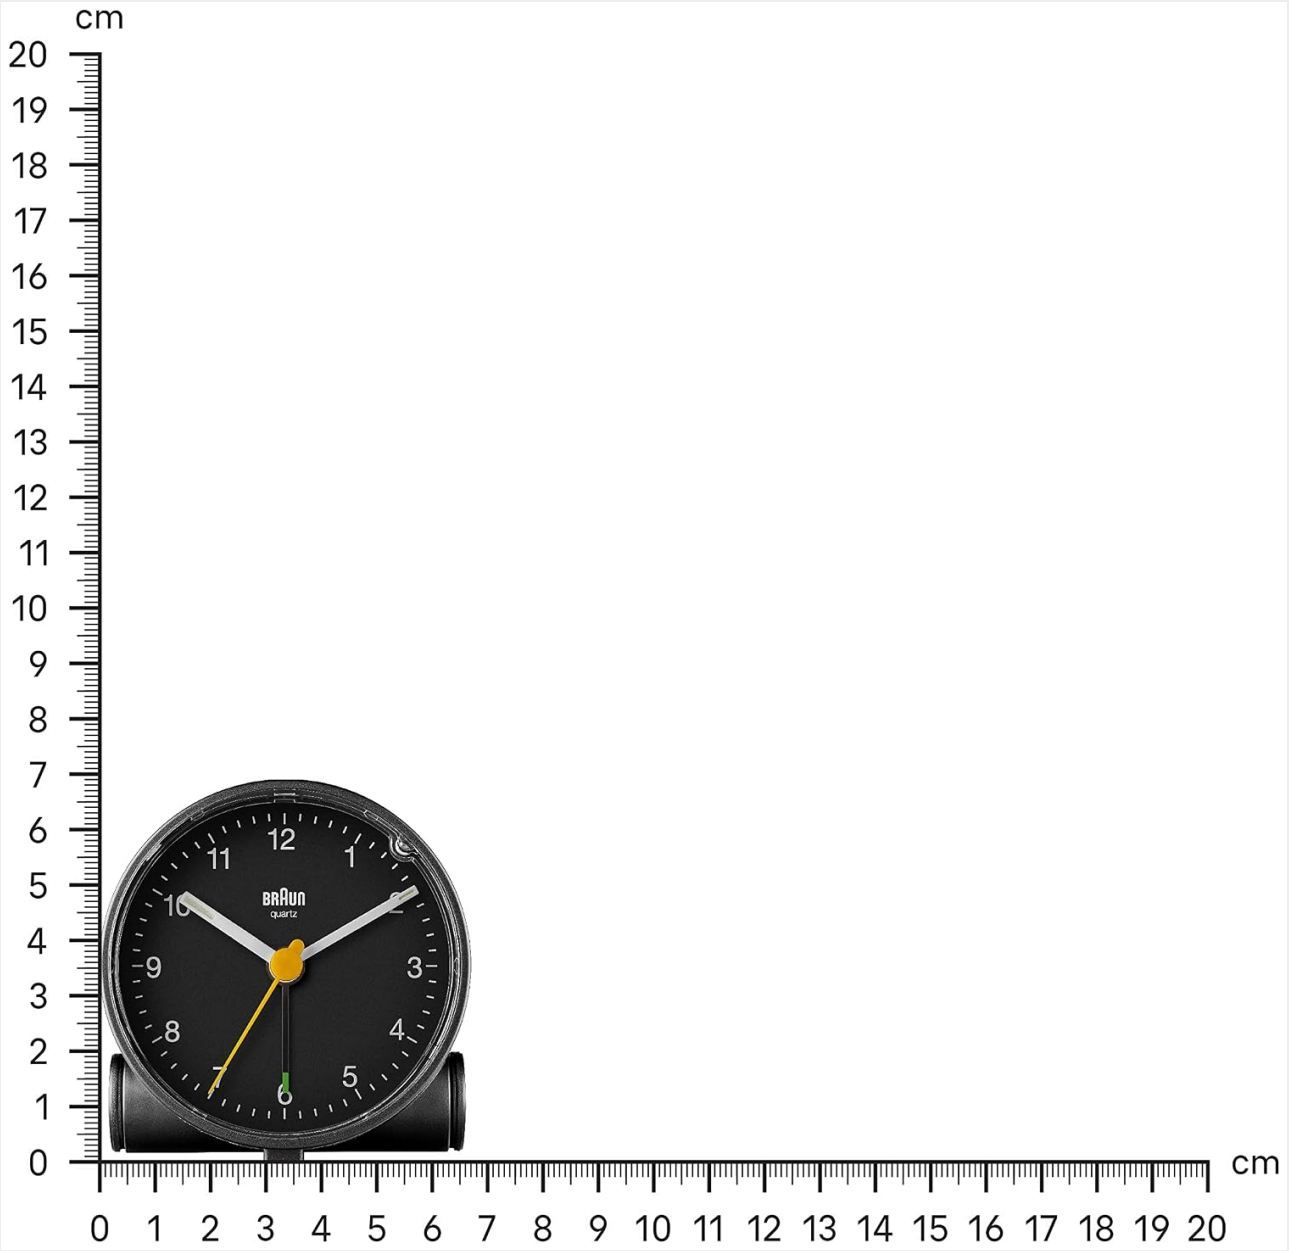


Image: The Braun BC01B alarm clock displayed alongside a ruler, illustrating its compact dimensions.

Warranty and Support

Warranty Information

This Braun BC01B alarm clock comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or battery leakage.

Please retain your proof of purchase for warranty claims.

Customer Support

For technical assistance, warranty claims, or further inquiries, please contact Braun customer support through their official website or the retailer where the product was purchased.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07CZWX178

More documents and user manuals: **https://manuals.plus/**