Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

GERYON 613-E5700-silver

GERYON Automatic Food Vacuum Sealer Machine User Manual

Model: 613-E5700-silver

Introduction

This manual provides detailed instructions for the safe and efficient operation and maintenance of your GERYON Automatic Food Vacuum Sealer Machine. Please read this manual thoroughly before first use and retain it for future reference.

Important Safety Information

- Always ensure the appliance is unplugged before cleaning or maintenance.
- Do not immerse the appliance in water or other liquids.
- Keep out of reach of children.
- Use only GERYON approved accessories and bags.
- Avoid touching the sealing strip immediately after use, as it may be hot.
- Do not operate the appliance if the power cord or plug is damaged.

Product Overview

The GERYON Automatic Food Vacuum Sealer is designed to preserve food freshness by removing air from specially designed bags and containers, then sealing them. This process extends the shelf life of various foods, reduces waste, and is ideal for meal preparation and sous vide cooking.



Image: The GERYON Automatic Food Vacuum Sealer Machine, a compact appliance for food preservation.

Setup and First Use

1. **Unpack the Appliance:** Carefully remove the vacuum sealer and all accessories from the packaging.
2. **Inspect for Damage:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Clean the Appliance:** Wipe down the exterior with a damp cloth. Refer to the Maintenance section for detailed cleaning instructions.
4. **Power Connection:** Place the vacuum sealer on a flat, stable surface. Plug the power cord into a standard electrical outlet (120 volts).
5. **Prepare Bags/Rolls:** If using a roll, utilize the built-in cutter to create custom-sized bags.

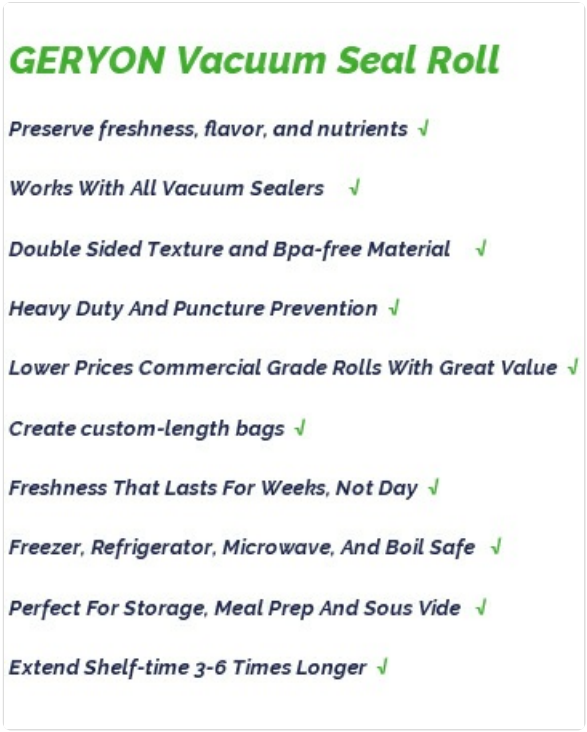

Image: GERYON vacuum seal rolls, used to create custom-sized bags for sealing.

Operating Your GERYON Vacuum Sealer

Understanding the Control Panel

The control panel features several buttons to customize your sealing process:

- **MODE:** Toggles between NORMAL and GENTLE vacuum pressure.
- **FOOD:** Toggles between DRY and MOIST food settings.
- **SEAL:** Creates a heat seal without vacuuming. Useful for sealing bags of chips or other delicate items.
- **VAC SEAL:** Automatically vacuums air from the bag and then seals it.
- **STOP:** Immediately halts any current operation.
- **PULSE VAC:** Allows manual control over vacuum pressure for delicate items.
- **CANISTER:** Used for vacuum sealing with external canisters (requires accessory hose).

General Vacuum Sealing Process

1. **Prepare the Bag:** Place your food item into a GERYON vacuum seal bag. Ensure the open end of the bag is clean, dry, and free of food debris. Leave at least 3 inches of space between the food and the top edge of the bag.
2. **Place the Bag:** Open the vacuum sealer lid. Place the open end of the bag into the vacuum channel, ensuring it lies flat across the sealing strip.
3. **Close the Lid:** Press down firmly on both sides of the lid until you hear a click, indicating it is securely latched.
4. **Select Settings:** Choose the appropriate food setting (DRY or MOIST) and mode (NORMAL or GENTLE) based on your food type.
5. **Start Sealing:** Press the **VAC SEAL** button. The machine will automatically remove air and then seal the bag.
6. **Release:** Once the process is complete, the indicator lights will turn off. Press the release buttons on the sides (if applicable) or lift the lid to retrieve your sealed bag.



Image: The GERYON Vacuum Sealer ready for use with food items in vacuum bags.

▶ **Watch video online**
GERYON Vacuum Sealer, Automatic Food Sealer Machine with Starter Kit of Saver Roll, Bags and Hose...

Video: Demonstrates the GERYON Vacuum Sealer in operation, including mode selection, sealing, and vacuum sealing various food items.

Sealing Only (No Vacuum)

For items like chips, cookies, or bags that do not require air removal:

1. Place the open end of the bag across the sealing strip.
2. Close the lid securely.
3. Press the **SEAL** button. The machine will create a heat seal.
4. Once complete, release the lid and remove the sealed bag.

Using the Accessory Port (Canister & Wine Stoppers)

Your GERYON Vacuum Sealer includes an accessory port for use with external vacuum canisters and wine stoppers (sold separately or included in starter kit).

1. Connect one end of the accessory hose to the accessory port on the vacuum sealer.
2. Connect the other end of the hose to the port on your vacuum canister or wine stopper.
3. Ensure the canister/stopper is properly attached to its container.
4. Press the **CANISTER** button. The machine will begin to remove air.
5. The machine will stop automatically when the desired vacuum level is reached.



Image: Various vacuum-sealed foods stored in a refrigerator, demonstrating extended freshness.

Care and Maintenance

Regular cleaning ensures optimal performance and extends the life of your vacuum sealer.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Clean Vacuum Chamber and Gasket:** The upper cover can be removed for easy access. Wash the removable

parts with warm, soapy water, rinse thoroughly, and dry completely before reassembling.

3. **Wipe Exterior:** Use a soft, damp cloth to wipe the exterior of the machine. Do not use abrasive cleaners or scrubbers.
4. **Sealing Strip:** Gently wipe the sealing strip with a dry cloth. Be careful as it may be hot if recently used.
5. **Storage:** Store the vacuum sealer in the unlocked position to prevent compression of the foam sealing ring, which can affect its sealing ability over time.



Image: Demonstrates how to remove the upper cover for easy cleaning of the vacuum chamber and gasket under running water.

Troubleshooting Guide

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet.

Problem	Possible Cause	Solution
Bag does not vacuum properly.	Bag not positioned correctly; lid not latched; bag has holes; moist food setting not selected for wet items.	Reposition the bag; ensure lid is fully latched; check bag for damage; select MOIST setting for wet foods.
Bag does not seal.	Sealing strip is dirty or wet; bag is wrinkled; too much moisture in the bag.	Clean and dry the sealing strip; smooth out the bag; pre-freeze very moist foods or use a paper towel to absorb excess liquid.
Vacuum is too strong/weak.	Incorrect mode selected.	Adjust the MODE setting (NORMAL/GENTLE) or use PULSE VAC for manual control.

Product Specifications

Feature	Detail
Brand	GERYON
Model Number	613-E5700-silver
UPC	192543583789
Power Source	Corded Electric
Voltage	120 volts
Wattage	110 watts
Operation Modes	Auto, Manual (Pulse Vac)
Item Weight	2.6 pounds

Warranty and Customer Support

GERYON products come with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or contact GERYON customer support.

If you encounter any issues or have questions regarding your GERYON Automatic Food Vacuum Sealer Machine, please contact our technical support team for assistance. Contact information can typically be found on the GERYON official website or on the product packaging.

Visit the official GERYON Store for more information and products:GERYON Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07DPHKDLQ

More documents and user manuals: **https://manuals.plus/**