Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

USARMT PHI-958

USARMT PHI-958 Replacement Remote Control for Philips Smart TVs

Model: PHI-958

Introduction

This manual provides instructions for the USARMT PHI-958 replacement remote control, designed for Philips Smart TVs. It functions identically to the original equipment manufacturer (OEM) remote.
This remote control is compatible with various Philips LED LCD TV Smart Ultra HDTV models, including but not limited to: 50PFL5601/F7, 65PFL5602/F7, 55PFL5602/F7, 50PFL5602/F7, 43PFL5602/F7, 32PFL4902/F7, 40PFL4901/F7, 43PFL4901/F7.




FORMAT
INFO
OK
BACK
OPTIONS
SOURCE
VOL
CH
APP1
APP2
APP3
APP4
1 _ -
2 ABC
DEF 3

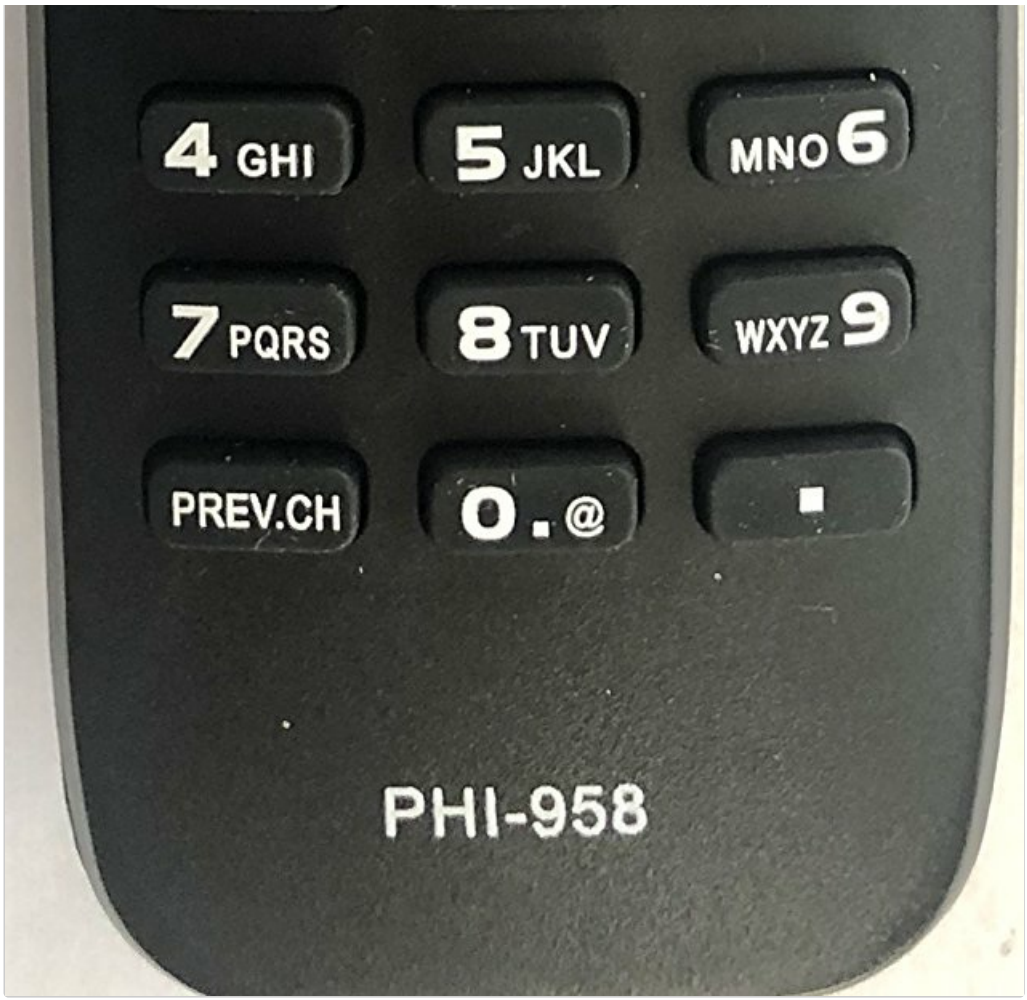

Image description: The front view of the USARMT PHI-958 replacement remote control, showing its buttons and ergonomic design.

Setup

Installing Batteries

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open.
3. Insert two AAA batteries, ensuring correct polarity (matching the + and - symbols inside the compartment).
4. Close the battery compartment cover by sliding it upwards until it clicks into place.

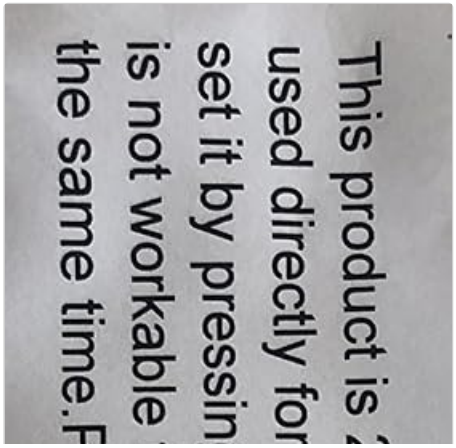

Image description: The back of the USARMT PHI-958 remote control, showing the battery compartment cover.

Initial Use

This remote control is designed to work directly with most Philips TV models without programming. Simply insert the batteries and begin use.

Operating Modes and Programming

This remote control supports multiple operating modes for different Philips devices (TV, Blu-ray/DVD).

Switching Modes for Philips TV

If the remote does not function directly with your Philips TV, it may need to be set to the correct TV mode:

1. Press and hold the "Power" button and the "1" button simultaneously.
2. If the remote still does not function, repeat the process by pressing and holding the "Power" button and the "2" button simultaneously.

Switching Modes for Philips Blu-ray/DVD

If using with a Philips Blu-ray or DVD player and it does not work directly, set it to the correct mode:

1. Press and hold the "Power" button and the "3" button simultaneously.

Restoring Default Settings

To reset the remote control to its default settings:

1. Press and hold the "Power" button and the "0" button simultaneously.

Troubleshooting

Remote Not Responding

- Ensure batteries are inserted correctly with the proper polarity.
- Replace old batteries with new ones.
- Check for any obstructions between the remote control and the TV's infrared receiver.
- If the remote does not work directly after battery installation, try switching modes as described in the "Operating Modes and Programming" section.

TV Not Responding After Programming Attempt

If the remote still does not function after attempting to switch modes, you may need to clear the TV's memory:

1. Turn off the TV.
2. Unplug the TV's power cord from the electrical outlet.
3. Wait for approximately 30 seconds.

4. Replug the power cord into the electrical outlet.
5. Turn on the TV and try using the remote control again.

Maintenance

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote control or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

Specifications

- **Brand:** USARMT
- **Model:** PHI-958
- **Item Model Number:** USARMT PHI-958-2
- **Connectivity Technology:** Infrared
- **Compatible Devices:** Philips Televisions, Philips Blu-ray/DVD players
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Power Source:** 2 x AAA Batteries (not included)

Support

For further assistance or inquiries regarding your USARMT PHI-958 remote control, please refer to the product's seller or manufacturer for direct support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07DYBQJYY

More documents and user manuals: **https://manuals.plus/**