Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BC12BW

Braun Classic Analogue Alarm Clock BC12BW Instruction Manual

Model: BC12BW

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Braun Classic Analogue Alarm Clock, Model BC12BW. Please read these instructions carefully before use to ensure proper functionality and longevity of your device.



Front view of the Braun Classic Analogue Alarm Clock, Model BC12BW, showcasing its classic design with a white dial and black casing.

Product Features

- **Crescendo Beep Alarm:** The alarm sound increases in frequency and volume if not turned off, ensuring effective wake-up.
- **Integrated Snooze/Light Function:** A foot-activated button provides a 5-minute snooze interval and illuminates the dial for 5 seconds.
- **Quiet Precision Quartz Movement:** Designed for silent operation, eliminating ticking sounds.
- **Luminous Tipped Hands:** Hour and minute hands feature luminous material for improved visibility in low light conditions.
- **Iconic Yellow Second Hand:** A distinctive design element for clear time indication.



Detail showing the crescendo beep alarm feature, indicating the alarm's increasing intensity.

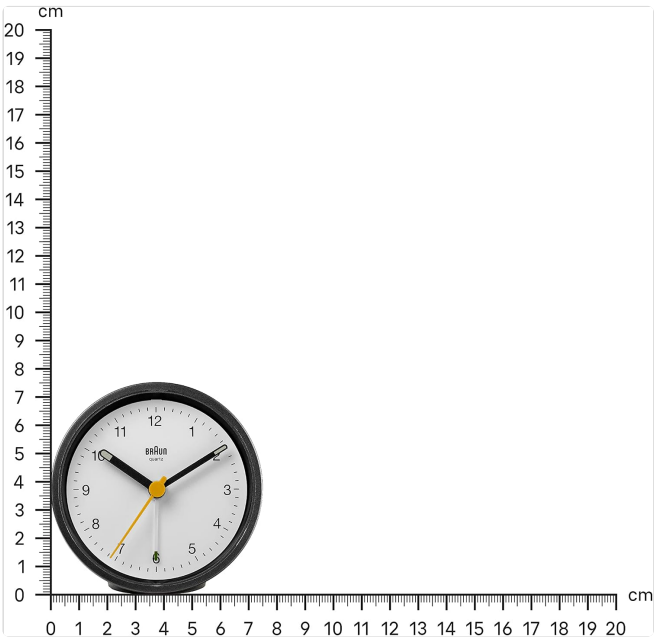

Illustration of the integrated snooze and light function, activated by pressing the clock's base.



The clock's luminous hands, visible in a dark environment, aiding night-time readability.



The clock face with an icon representing its quiet precision quartz movement, ensuring no audible ticking.

Setup

1. Battery Installation

The clock requires one (1) AAA battery (not included) for operation.

1. Locate the battery compartment cover on the back of the clock.
2. Remove the cover by sliding or gently prying it open.
3. Insert one (1) AAA battery, ensuring the correct polarity (+ and -) as indicated inside the compartment.

4. Replace the battery compartment cover securely.

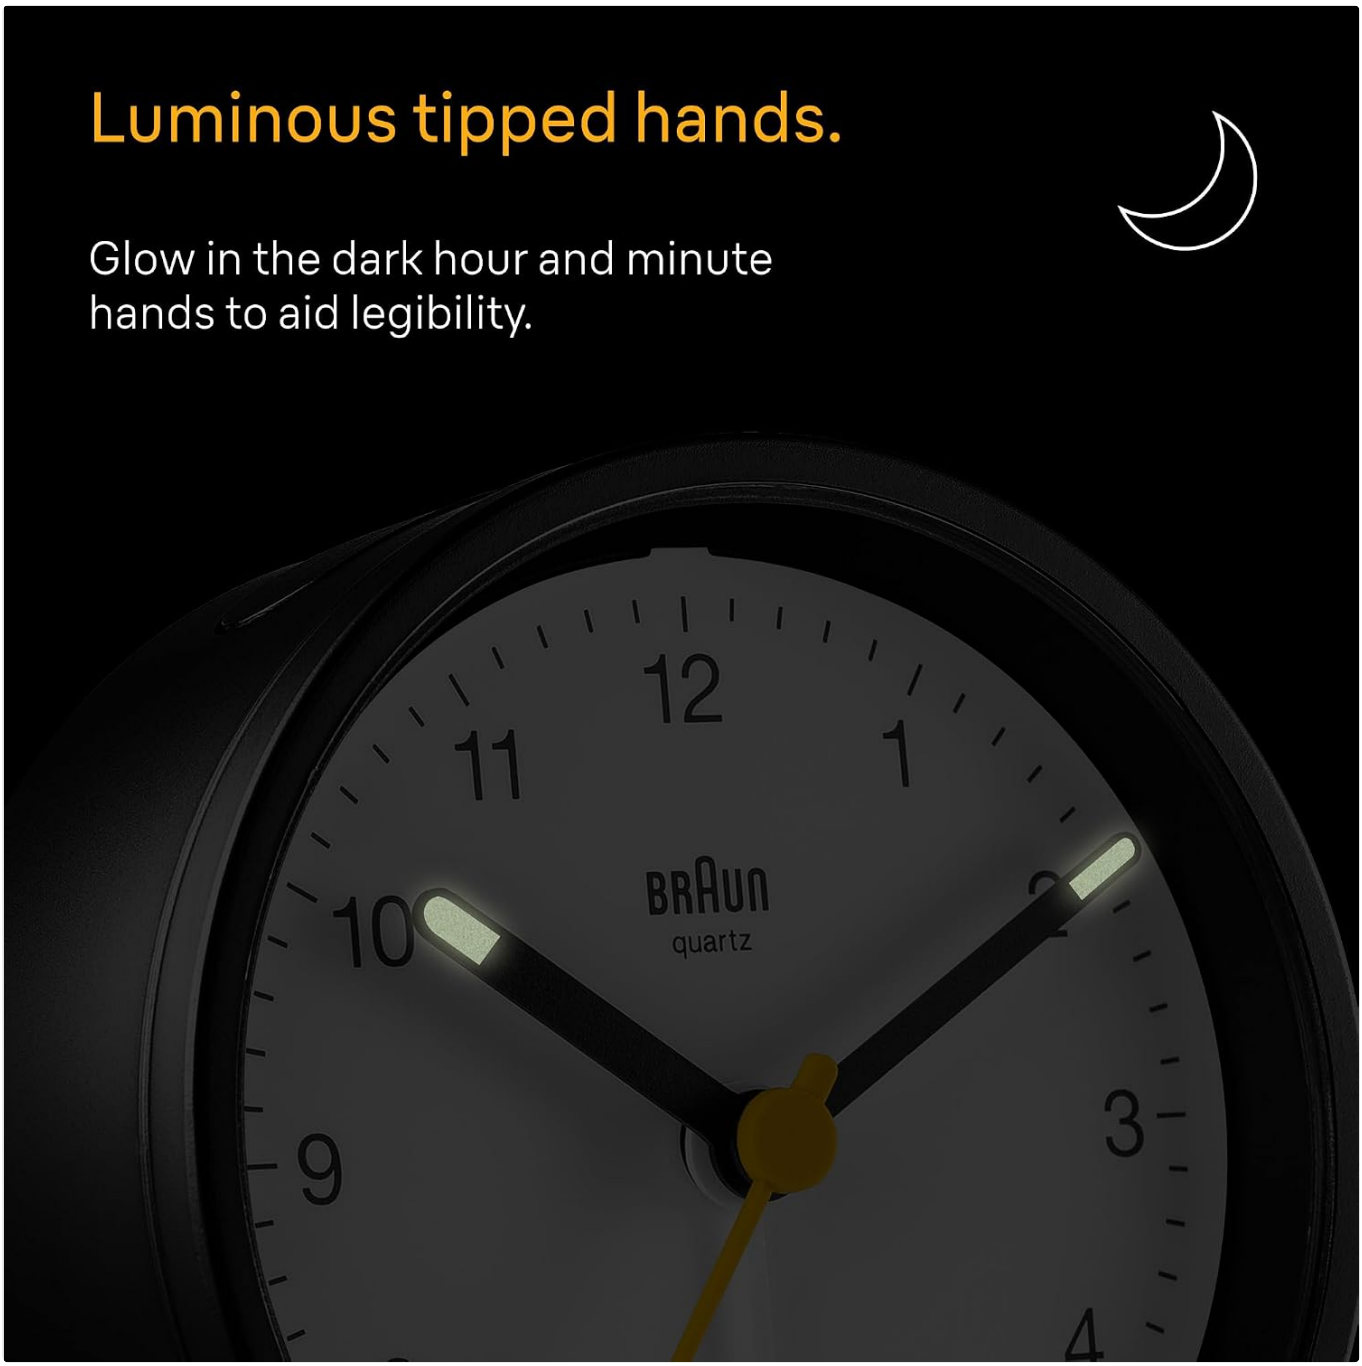

Rear view of the alarm clock, highlighting the battery compartment and control knobs.

2. Setting the Time

1. Locate the time setting knob on the back of the clock (usually the larger knob).
2. Rotate the knob in the indicated direction to move the hour and minute hands to the current time.
3. Ensure the time is set accurately.

3. Setting the Alarm

1. Locate the alarm setting knob on the back of the clock (usually the smaller knob).
2. Rotate the knob to move the alarm hand to your desired wake-up time.
3. To activate the alarm, ensure the alarm ON/OFF switch (often a small slider or button on the back or side) is in the 'ON' position.

Operating Instructions

1. Alarm Function

When the alarm is set and activated, it will sound at the designated time. The crescendo beep alarm will start softly and gradually increase in volume and frequency to ensure you wake up.

- **To Stop the Alarm:** Move the alarm ON/OFF switch to the 'OFF' position.
- **To Reset for Next Day:** If you wish to use the alarm again the next day, ensure the alarm ON/OFF switch is moved back to the 'ON' position after stopping the current alarm.

2. Snooze and Light Function

The clock features an integrated foot snooze/light function for temporary silence and illumination.

- **To Activate Snooze:** When the alarm is sounding, gently press down on the top of the clock. The alarm will pause for approximately 5 minutes.
- **To Activate Light:** Press down on the top of the clock at any time to illuminate the dial for approximately 5 seconds. This is useful for checking the time in the dark without activating the alarm.

Maintenance

1. Battery Replacement

Replace the AAA battery when the clock's timekeeping becomes inaccurate or the alarm/light functions weaken. Follow the battery installation steps outlined in the "Setup" section.

2. Cleaning

To clean the clock, use a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the casing or dial. Avoid exposing the clock to excessive moisture.

Troubleshooting

Problem	Possible Cause	Solution
Clock not keeping accurate time or stops.	Low or depleted battery.	Replace the AAA battery with a new one.
Alarm does not sound.	Alarm not activated or set incorrectly. Depleted battery.	Ensure the alarm ON/OFF switch is in the 'ON' position. Verify the alarm hand is set to the desired time. Replace battery if necessary.
Light function not working.	Depleted battery.	Replace the AAA battery.
Snooze function not working.	Depleted battery.	Replace the AAA battery.

Specifications

Feature	Detail
Brand	Braun
Model Number	BC12BW
Color	Black/White
Display Type	Analog
Movement	Quiet Precision Quartz
Special Features	Crescendo Beep Alarm, Snooze, Light, Luminous Hands
Product Dimensions	2.95"W x 2.95"H (75mm x 75mm)
Power Source	Battery Powered
Battery Type	1 x AAA (not included)
Material	Plastic
Mounting Type	Tabletop
Item Weight	0.705 ounces (20 Grams)

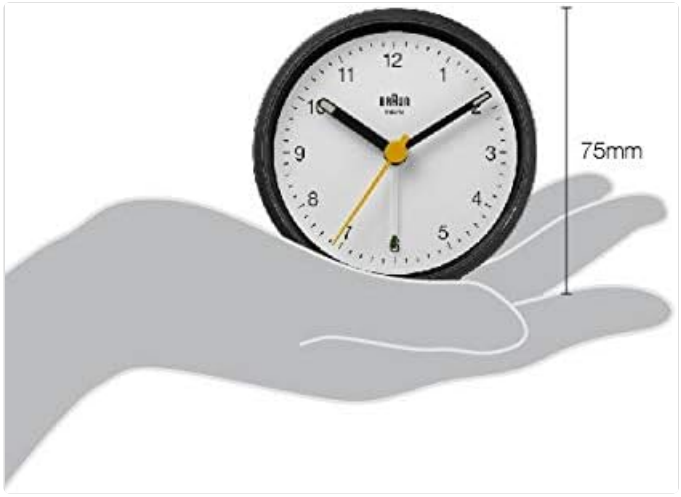

The alarm clock shown in hand, illustrating its compact size of 75mm in height.

Warranty and Support

This Braun product is covered by a manufacturer's 2-year warranty.
For warranty claims or technical support, please refer to the contact information provided with your purchase or visit the official Braun website.
Please retain your proof of purchase for warranty purposes.

© 2023 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07FMD367X

More documents and user manuals: **https://manuals.plus/**