Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DURACELL 379

Duracell 379 Silver Oxide Button Battery Instruction Manual

1. Introduction

This manual provides essential information for the safe and effective use of the Duracell 379 Silver Oxide Button Battery. This battery is designed to provide reliable power for various small electronic devices.

Product Name: Duracell 379 Silver Oxide Button Battery
Model Number: 379 (Equivalent to SR63, SR521SW, V379, SR521W, D379)
Voltage: 1.5 Volts

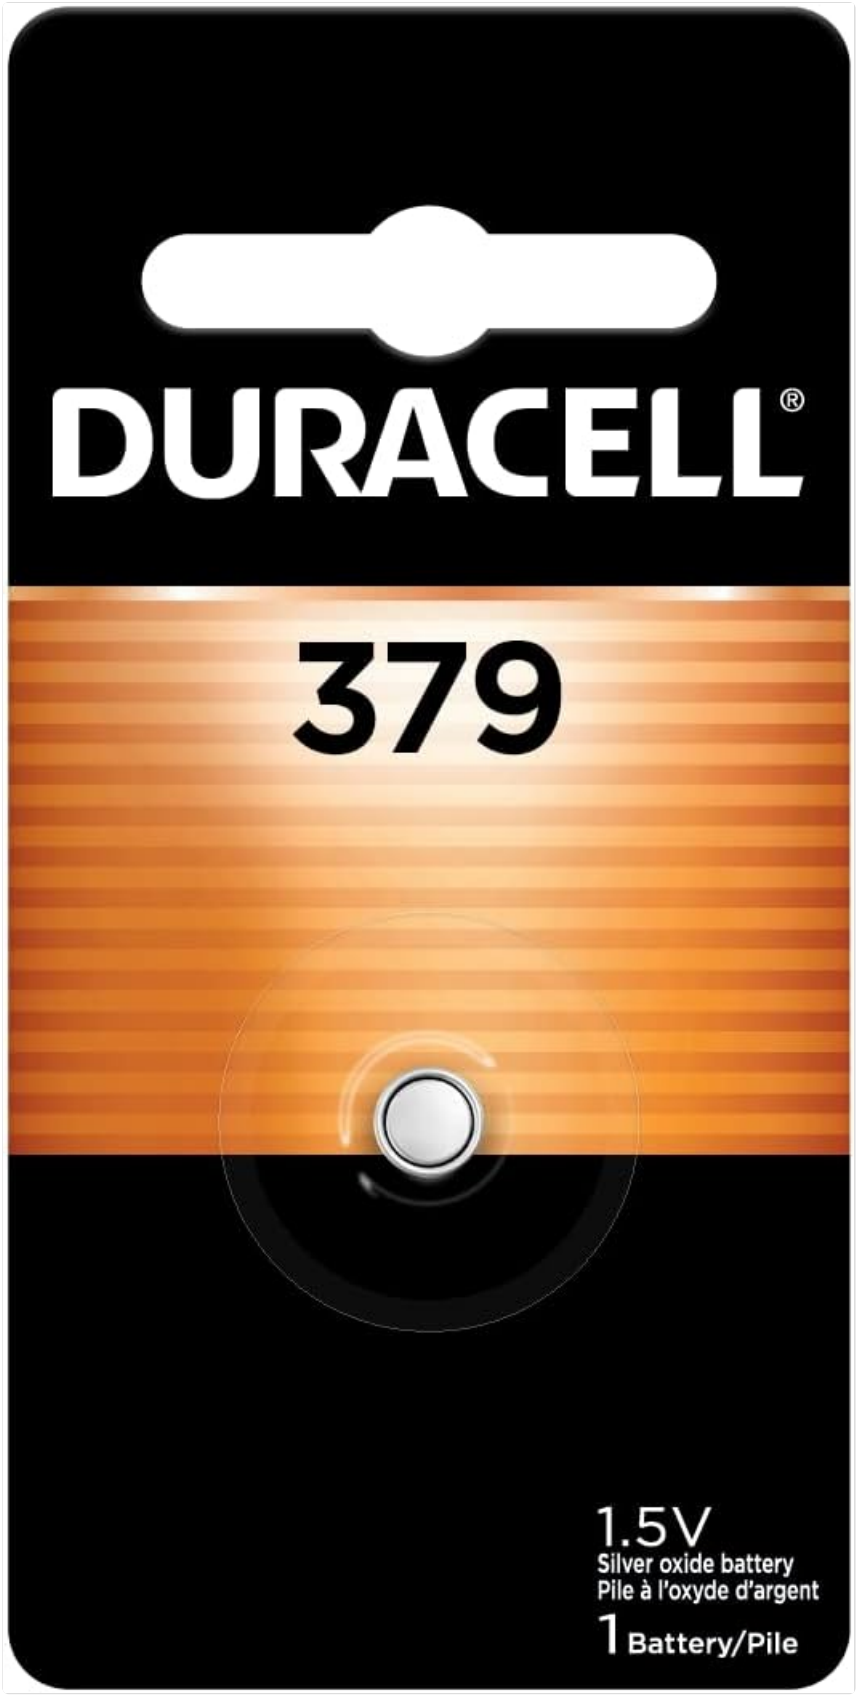

This image displays the front of the Duracell 379 Silver Oxide Button Battery packaging, clearly showing the Duracell brand logo, the '379' model number, and '1.5V Silver oxide battery' text.

2. Safety Information

WARNING: Battery can explode or leak if heated, disassembled, shorted, recharged, exposed to fire or high temperature or inserted incorrectly. Do not carry batteries loose in your pocket or purse. Keep batteries away from children. If swallowed, consult a physician at once. For information on treatment, call (202) 625-3333 collect.



The back of the Duracell 379 battery packaging, featuring important safety warnings and contact information in multiple languages, along with the UPC barcode (0041333137094).

3. Installation Guide

Follow these general steps for installing the Duracell 379 button battery. Always refer to your device's specific instruction manual for detailed battery replacement procedures.

1. **Identify Battery Compartment:** Locate the battery compartment on your device. This is often on the back,

bottom, or side, secured by a small screw or latch.

2. **Open Compartment:** Use the appropriate tool (e.g., a small screwdriver, coin, or specialized tool) to open the battery compartment.
3. **Remove Old Battery:** Carefully remove the old battery, noting its orientation (positive (+) and negative (-) terminals). Dispose of old batteries responsibly.
4. **Insert New Battery:** Insert the new Duracell 379 battery with the positive (+) side facing up, matching the orientation of the old battery or the markings inside the compartment. Ensure it sits securely.
5. **Close Compartment:** Securely close the battery compartment. Test the device to ensure proper function.



An array of electronic devices, including a watch, camera flash, digital thermometer, camera, and flashlight, demonstrating the wide compatibility of Duracell batteries.

4. Usage Guidelines

The Duracell 379 Silver Oxide Button Battery is suitable for a variety of compatible devices, including:

- Watches
- Medical Devices (e.g., digital thermometers)
- Calculators
- Laser Pointers
- Stopwatches
- Other small electronics requiring a 379-equivalent battery

For optimal performance, ensure the battery is used within the recommended temperature range of your device.



An overhead view of common electronic devices such as a camera, flashlight, and carbon monoxide alarm, illustrating the diverse applications for Duracell batteries.

5. Storage and Disposal

5.1 Storage

Duracell 379 Silver Oxide Button batteries are guaranteed for 4 years in storage. To maintain battery life and prevent leakage:

- Store batteries in their original packaging until ready for use.
- Keep batteries in a cool, dry place at room temperature.
- Avoid storing batteries with metal objects (e.g., coins, keys) to prevent short-circuiting.



This image shows a Duracell 379 button battery alongside its packaging, illustrating the product's guarantee for 4 years in storage.

5.2 Disposal

Do not dispose of batteries in household waste. Consult your local regulations for proper battery recycling and disposal options. Many communities offer collection programs for button cell batteries.

6. Troubleshooting

If your device is not functioning after battery installation, consider the following:

- **Incorrect Orientation:** Verify that the battery is inserted with the correct positive (+) and negative (-) polarity.
- **Poor Contact:** Ensure the battery makes firm contact with the device's terminals. Gently clean terminals if corrosion is present (use a cotton swab with rubbing alcohol, ensuring terminals are dry before re-inserting battery).
- **Depleted Battery:** Although new, check if the battery is depleted. Try a different new battery if available.
- **Device Malfunction:** If the battery is correctly installed and new, the issue may lie with the device itself. Refer to your device's manual or contact its manufacturer for support.

7. Specifications

Feature	Detail
Brand	DURACELL
Battery Cell Composition	Silver Oxide
Battery Capacity	1.5 Volts
Item Model Number	D379BPK
Equivalent Models	379, SR63, SR521SW, V379, SR521W, D379
Recommended Uses	Calculators, Watches, Medical Devices, Laser Pointers, Stopwatches
Product Dimensions	0.25 x 1.75 x 3.5 inches; 0.1 ounces (packaging)
Manufacturer	Duracell Distributing, Inc
Date First Available	December 23, 2015

8. Support and Warranty

For product support or warranty information, please refer to the official Duracell website or contact Duracell customer service. Specific warranty details may vary by region and purchase location.
Customer Service Number: 1-800-551-2355 (9:00 AM-5:00 PM E.S.T.)
Manufacturer: Duracell Distributing, Inc.
Website: www.duracell.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07GN8MS3Z

More documents and user manuals: **https://manuals.plus/**