Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

New Star PLASMA-W200BLACK

NewStar PLASMA-W200BLACK Tiltable Flat Screen Wall Mount

User Manual

1. Introduction

Thank you for choosing the NewStar PLASMA-W200BLACK Tiltable Flat Screen Wall Mount. This mount is designed to securely hold flat screens from 37 to 85 inches, with a maximum weight capacity of 100 kg. It features a tilt mechanism allowing for optimal viewing angles. Please read this manual thoroughly before installation to ensure safe and correct setup.

2. Safety Information

- Ensure the mounting surface can support the combined weight of the mount and the display.
- Do not exceed the maximum weight capacity of 100 kg (220 lbs).
- Always use appropriate tools and follow all installation steps carefully.
- If you are unsure about any part of the installation, consult a qualified professional.
- Keep children and pets away during installation.
- Check all connections periodically to ensure they remain secure.

3. Package Contents

Verify that all components are present before beginning installation.



Image: The NewStar PLASMA-W200BLACK wall mount showing the wall plate, two vertical TV brackets, and various mounting hardware.

- Wall Plate Assembly
- TV Bracket Arms (2x)
- Mounting Hardware Kit (screws, anchors, washers, spacers)
- Instruction Manual

4. Setup and Installation

Follow these steps carefully to install your wall mount.

4.1. Choose Mounting Location

Select a suitable wall location. Ensure there are no hidden electrical wires or plumbing. The wall must be capable of supporting the combined weight of the mount and your television.

4.2. Attach TV Brackets to Display

1. Carefully place your TV face down on a soft, clean surface.
2. Identify the VESA mounting holes on the back of your TV. The mount supports VESA patterns from 200x200mm to 865x480mm.

3. Select the appropriate screws, washers, and spacers from the hardware kit that fit your TV's VESA holes.
4. Attach the two vertical TV bracket arms to the back of your TV, ensuring they are level and securely fastened. Do not overtighten.

4.3. Mount Wall Plate to Wall

1. Hold the wall plate against the wall at the desired height and use a level to ensure it is perfectly horizontal.
2. Mark the drilling points through the holes on the wall plate.
3. Drill pilot holes at the marked locations. Use a drill bit appropriate for your wall type (wood stud, concrete, brick).
4. Insert wall anchors if required for your wall type.
5. Secure the wall plate to the wall using the provided lag bolts and washers. Tighten all bolts firmly.

4.4. Hang Display on Wall Plate

1. With assistance, carefully lift the TV with the attached brackets.
2. Hook the TV bracket arms onto the top edge of the wall plate.
3. Gently lower the TV until the brackets engage with the wall plate. Ensure both brackets are securely seated.
4. Engage the safety locking mechanisms on the bottom of the TV brackets to prevent accidental dislodging.

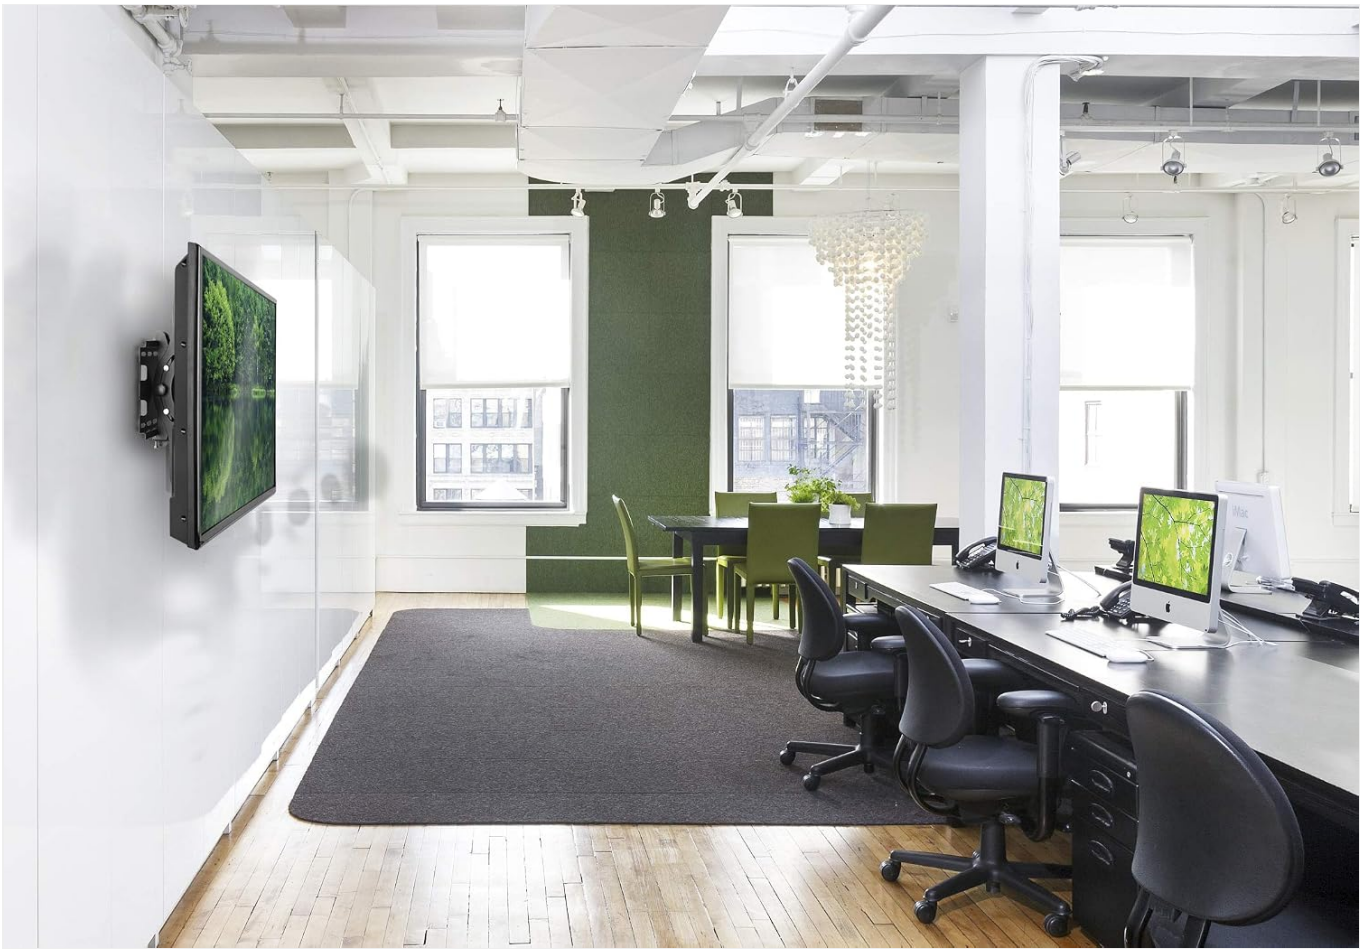


Image: A flat screen television mounted on a wall in an office environment, demonstrating the installed product.

5. Operating the Tilt Function

The NewStar PLASMA-W200BLACK mount allows for a tilt adjustment of up to 30 degrees. This feature helps reduce glare and optimize viewing angles.

1. To adjust the tilt, locate the tilt adjustment knobs or levers on the side of the TV bracket arms.

2. Loosen the knobs or levers to allow the TV to tilt freely.
3. Adjust the TV to your desired viewing angle.
4. Tighten the knobs or levers firmly to secure the TV in the new tilted position.

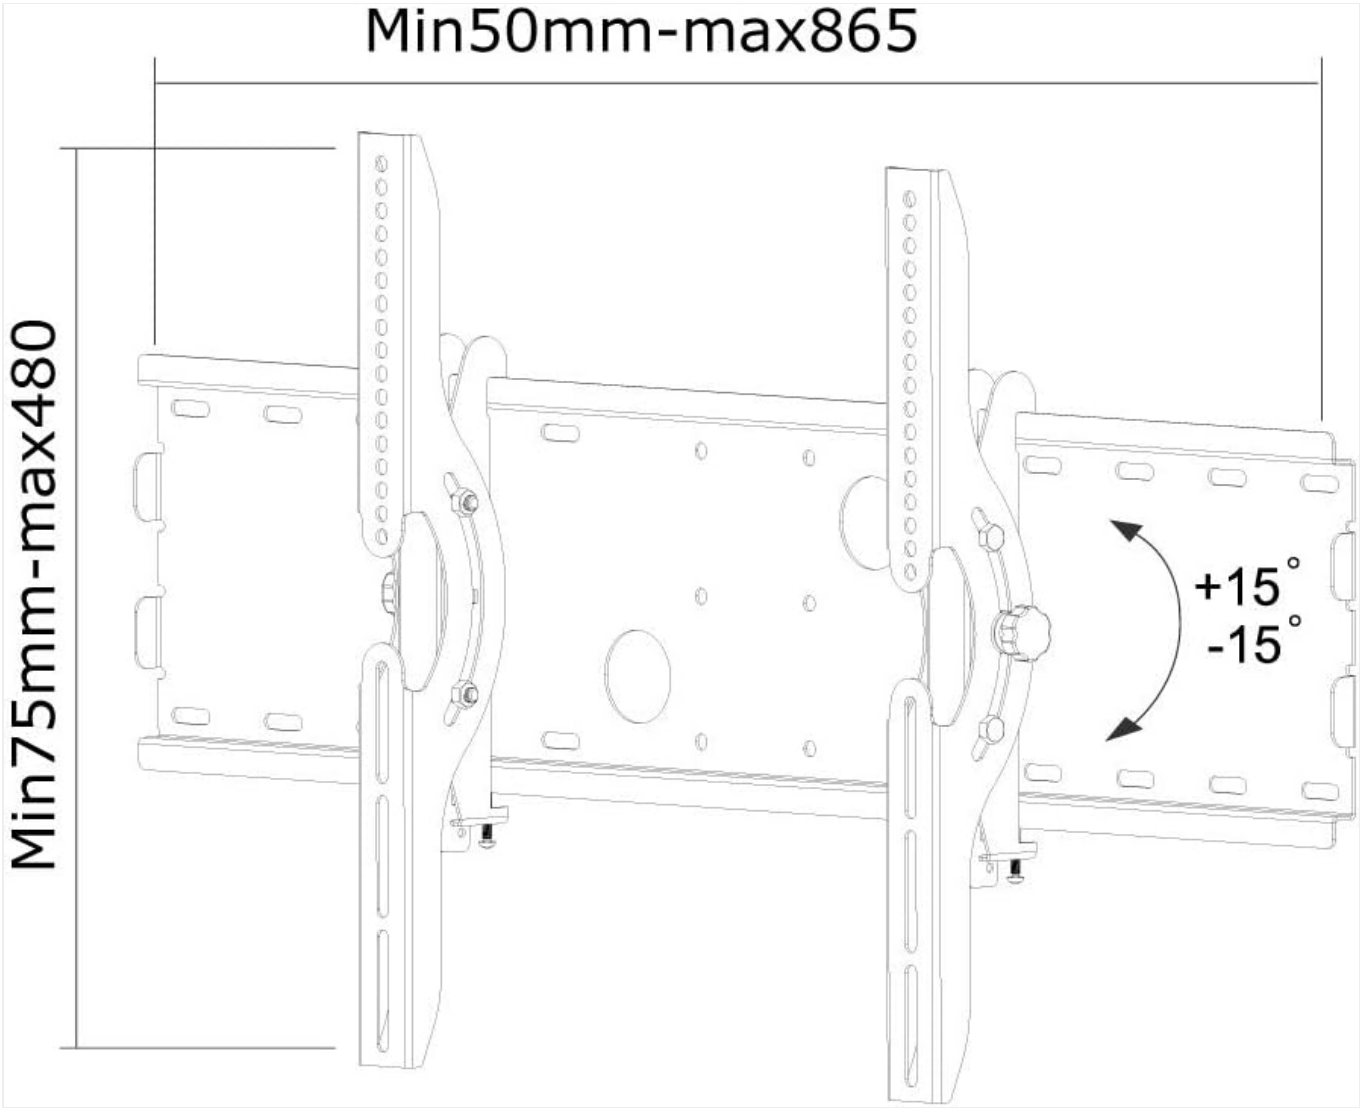


Image: Technical diagram illustrating the tilt range of +15 to -15 degrees and VESA mounting dimensions (Min 50mm-Max 865mm width, Min 75mm-Max 480mm height).

6. Maintenance

- **Cleaning:** Wipe the mount with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Periodic Checks:** Periodically inspect all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Damage:** If any part of the mount appears damaged, discontinue use and contact customer support.

7. Troubleshooting

Problem	Possible Cause	Solution
TV is not level after installation.	Wall plate was not level during installation.	Remove TV, re-level and re-mount the wall plate. Ensure a spirit level is used.

Problem	Possible Cause	Solution
TV feels unstable on the mount.	Screws are loose or safety locks are not engaged.	Check all mounting screws on both the wall plate and TV brackets. Ensure safety locking mechanisms are fully engaged.
Difficulty adjusting tilt.	Tilt adjustment knobs are too tight.	Loosen the tilt adjustment knobs before attempting to adjust the angle. Re-tighten after adjustment.

8. Specifications

Model:	PLASMA-W200BLACK
Screen Size Compatibility:	37" - 85" (94 cm - 216 cm)
Maximum Weight Capacity:	100 kg (220 lbs)
VESA Compatibility:	200x200mm to 865x480mm
Tilt Angle:	Up to 30 degrees (typically -15 to +15 degrees as per diagram)
Mount Depth:	7 cm (2.76 inches)
Color:	Black
Item Weight:	5.5 pounds (2.5 kg)
Product Dimensions:	37.2 x 3.15 x 9.06 inches (94.5 x 8 x 23 cm)

9. Warranty

The NewStar PLASMA-W200BLACK Tiltable Flat Screen Wall Mount comes with a**5 Year Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, or unauthorized modifications.

10. Support

For technical assistance, missing parts, or warranty inquiries, please contact NewStar customer support. Refer to the NewStar official website for the most up-to-date contact information.
Website: www.newstar.eu

© 2026 NewStar. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07H18ZR6N

More documents and user manuals: **https://manuals.plus/**