Manuals+

Q & A | Deep Search | Upload

Frigidaire FFET1222UB

Frigidaire 11.6 Cu. Ft. Compact ADA Top Freezer Refrigerator User Manual

Model: FFET1222UB

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Frigidaire 11.6 Cu. Ft. Compact ADA Top Freezer Refrigerator. Please read all instructions carefully before using your appliance to ensure optimal performance and longevity.

Front view of the Frigidaire 11.6 Cu. Ft. Compact ADA Top Freezer Refrigerator in black.

Important Safety Information

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury to persons. Keep this manual for future reference.

- Ensure the refrigerator is properly grounded.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.

- This appliance is intended for household use only.

Setup and Installation

Unpacking and Placement

Remove all packaging materials, tape, and protective film from the refrigerator. Clean the interior with a mild detergent and warm water before use. Place the refrigerator on a strong, level surface away from direct sunlight and heat sources. Allow at least 1 inch (2.54 cm) of space between the back and sides of the refrigerator and the wall for proper air circulation.

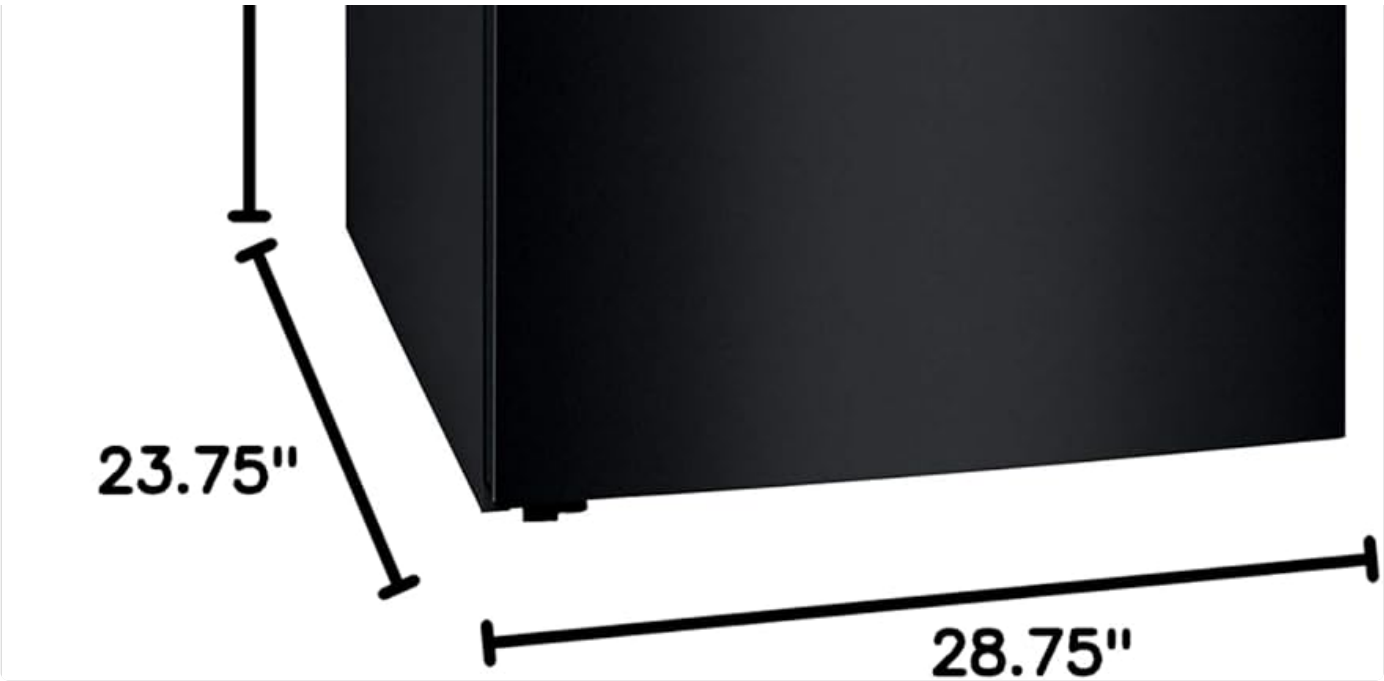

Diagram showing the dimensions of the Frigidaire refrigerator: 59.88 inches height, 23.75 inches depth, and 28.75 inches width.

Leveling the Refrigerator

Your refrigerator has adjustable leveling legs. Turn the legs clockwise to raise the refrigerator or counter-clockwise to lower it. Ensure the refrigerator is level to prevent vibration and ensure proper door sealing.

Door Reversal

The door swing of your refrigerator can be reversed to open from the left or right, based on your kitchen layout. Refer to the detailed instructions in the full installation guide for specific steps on how to reverse the door hinges. This process typically involves removing the top hinge, transferring the door, and reattaching hinges on the opposite side.

Illustration demonstrating the reversible door swing feature of the refrigerator, showing the door opening from both left and right sides.

Electrical Connection

Plug the power cord into a dedicated 115 Volt, 60 Hz, 15 Amp grounded electrical outlet. Do not use an extension cord. Allow the refrigerator to stand for at least 4 hours before loading with food to allow refrigerants to settle.

Operating Your Refrigerator

Electronic Temperature Controls

Your Frigidaire refrigerator features electronic controls for precise temperature management. Easily select options with the touch of a button to adjust the temperature settings for both the refrigerator and freezer compartments. Refer to the control panel for specific temperature ranges and adjustment methods.

Adjustable Glass Shelves

The refrigerator compartment includes 2 adjustable glass shelves. These shelves can be moved up or down to accommodate taller items, providing flexible storage options. To adjust, carefully lift the shelf and slide it out, then reposition it on the desired shelf supports.

Interior view of the refrigerator showing two adjustable glass shelves.

Crisper Drawers

Two clear crisper drawers are provided to help keep your fruits and vegetables fresh. These humidity-controlled drawers are designed to maintain optimal conditions for produce storage.

Close-up of refrigerator crisper drawers filled with apples and other fruits.

Store-More Door Bins

Clear refrigerator door bins offer additional storage and organization for bottles, condiments, and other items. These bins are designed to maximize usable space within the refrigerator door.

Refrigerator door with clear storage bins holding milk and juice containers.

LED Interior Lighting

Bright LED lighting illuminates the interior of both the refrigerator and freezer compartments, making it easier to find items quickly and efficiently.

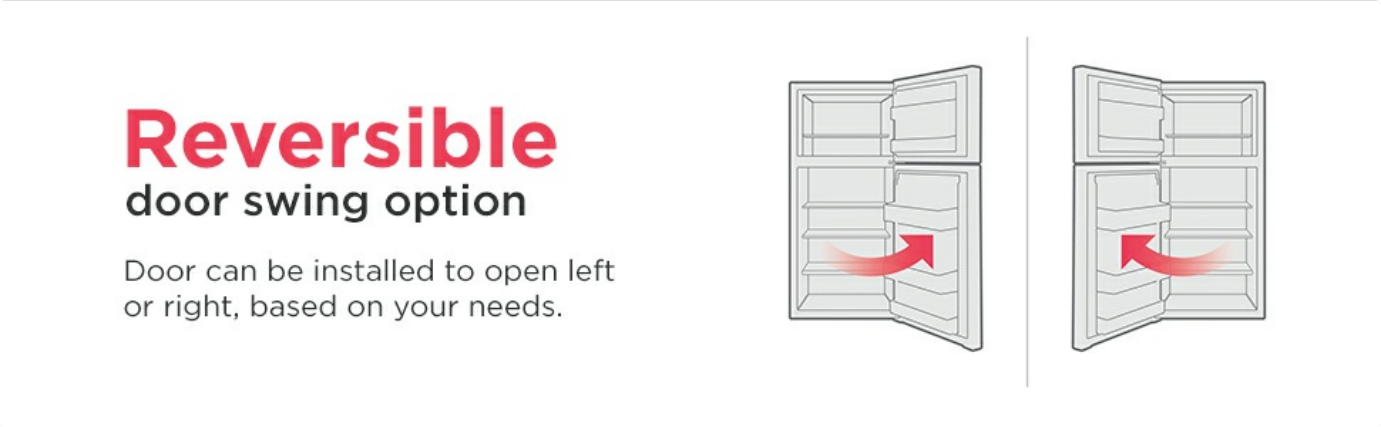

Bright LED interior lighting for enhanced visibility.

Frost Free Operation

This refrigerator features a frost-free system, eliminating the need for manual defrosting of either the refrigerator or freezer compartments. This system automatically prevents ice buildup.

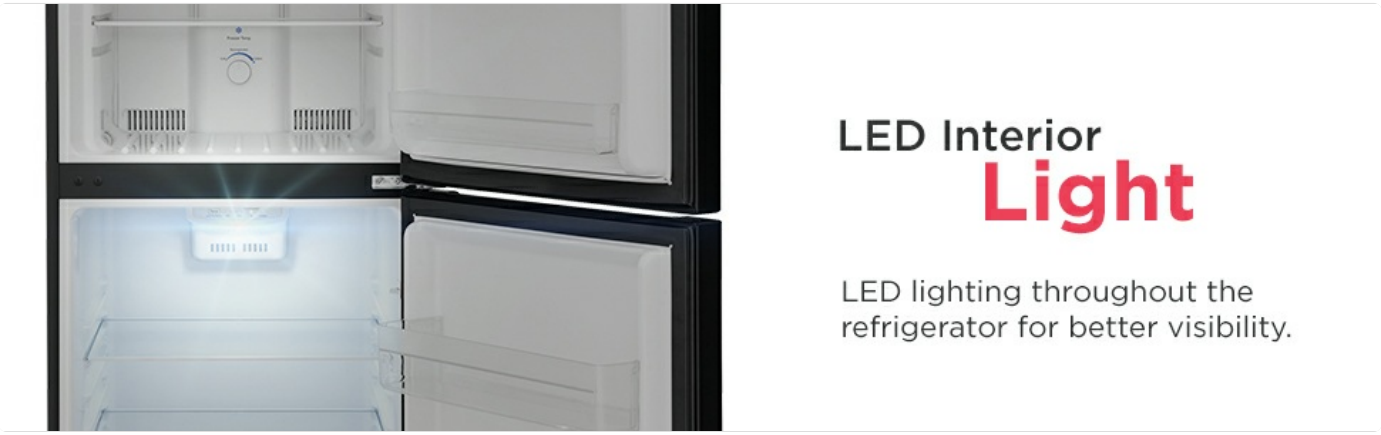

The frost-free feature eliminates the need for manual defrosting.

Care and Maintenance

Cleaning the Interior

Clean the interior of your refrigerator regularly to prevent odors and maintain hygiene. Use a solution of two tablespoons of baking soda to one quart of warm water. Wipe down surfaces with a soft cloth, then rinse and dry thoroughly. For stubborn stains, use a mild, non-abrasive cleaner.

Cleaning the Exterior

Wipe the exterior surfaces with a clean, soft cloth dampened with a mild detergent solution. For stainless steel finishes, use a specialized stainless steel cleaner. Avoid abrasive cleaners or scouring pads, which can scratch the surface.

Power Cord Care

Regularly inspect the power cord for any signs of damage. If the power cord is damaged, it must be replaced by a qualified service technician to avoid electrical hazards.

Troubleshooting

Before contacting customer service, review the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	Power cord unplugged; temperature control set too warm; door left open; excessive food load.	Check power connection; adjust temperature setting; ensure door is closed properly; reduce food load if overfilled.
Freezer not freezing properly	Temperature control set too warm; door left open; heavy frost buildup.	Adjust freezer temperature to a colder setting; ensure freezer door is sealed; the unit is frost-free, but excessive humidity can cause temporary frost.
Unusual noises	Refrigerator not level; items vibrating against each other; normal operating sounds.	Level the refrigerator; rearrange items; some sounds (e.g., refrigerant flow, fan operation) are normal.
Water on floor	Drain tube clogged; door not sealing properly.	Clear the drain tube (refer to full manual); check door gasket for proper seal.

Product Specifications

Below are the key specifications for your Frigidaire 11.6 Cu. Ft. Compact ADA Top Freezer Refrigerator:

Feature	Detail
Brand	Frigidaire
Model Number	FFET1222UB
Capacity	11.6 Cubic Feet
Product Dimensions (D x W x H)	23.75 x 28.75 x 59.88 inches
Item Weight	132.1 Pounds
Annual Energy Consumption	310 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	8.4 Cubic Feet
Freezer Capacity	3.2 Cubic Feet
Installation Type	Freestanding
Special Features	ADA Compliant, CSA Certified, Energy Star Certified
Color	Black
Voltage	115 Volts
Defrost System	Frost Free
Door Hinges	Reversible
Shelf Type	Glass

Feature	Detail
Number of Doors	2
Included Components	Power cord

This appliance is ENERGY STAR Certified, maximizing energy and dollar savings.

Warranty Information

Your Frigidaire refrigerator comes with a manufacturer's warranty. Please refer to the warranty card included with your product or visit the official Frigidaire website for detailed information regarding warranty coverage, terms, and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or to purchase replacement parts, please contact Frigidaire customer service. You can also visit the official Frigidaire store online for more product information and resources:

Visit the Frigidaire Store

When contacting support, please have your model number (FFET1222UB) and serial number ready.

© 2023 Frigidaire. All rights reserved.