Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

PocketBook PB632-K-WW

PocketBook Touch HD 3 User Manual

Your Guide to the Audio- & E-Book Reader with Glare-Free E-Ink Screen, SMARTlight, and IPX8 Waterproofing

1. Introduction

Welcome to the PocketBook Touch HD 3, a high-performance and lightweight e-reader designed for an exceptional reading and listening experience. This manual provides detailed instructions on how to set up, operate, and maintain your device, ensuring you get the most out of its advanced features.

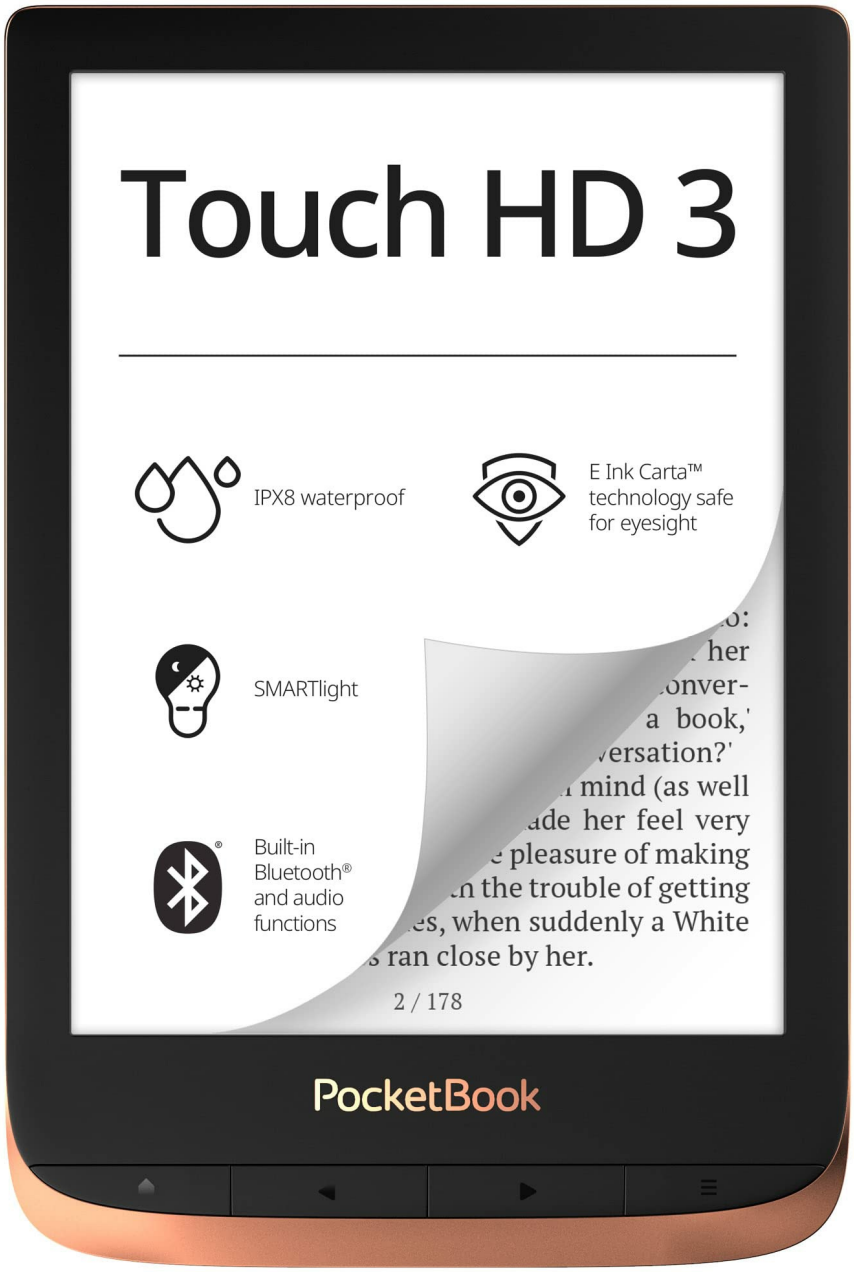

Image: A person enjoying reading on the PocketBook Touch HD 3 e-reader, highlighting its portability and user-friendly design.

2. What's in the Box

Upon unboxing your PocketBook Touch HD 3, please ensure all the following components are present:

- PocketBook Touch HD 3 E-Reader
- Micro USB Cable
- Micro USB Audio Adapter
- Quick Start Guide (not included in this digital manual)
- Warranty Card (not included in this digital manual)

3. Initial Setup

3.1 Charging the Device

Before first use, fully charge your PocketBook Touch HD 3. Connect the included Micro USB cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen activates.
- **To Power Off:** Press and hold the Power button, then select 'Power Off' from the options that appear on the screen.
- **Sleep Mode:** A short press of the Power button will put the device into sleep mode, conserving battery.

3.3 Connecting to Wi-Fi

To access online services, download books, or update firmware, connect your device to a Wi-Fi network:

1. From the home screen, tap the 'Settings' icon.
2. Select 'Wi-Fi' and turn it on.
3. Choose your desired network from the list.
4. Enter the password if prompted and tap 'Connect'.

4. Operating Instructions

4.1 Reading Experience

The PocketBook Touch HD 3 features a 6-inch E-Ink Carta HD touchscreen, designed to provide a comfortable, paper-like reading experience with minimal glare.



Image: The PocketBook Touch HD 3 displaying clear text on its E-Ink Carta screen, optimized for reading comfort.

4.1.1 Adaptive SMARTlight

The SMARTlight function allows you to adjust both the brightness and the color temperature of the frontlight. This feature helps reduce eye strain, especially during prolonged reading sessions or in varying light conditions.



Image: A user adjusting the SMARTlight on their PocketBook Touch HD 3, demonstrating the customizable screen illumination.

For a visual guide on adjusting SMARTlight:

Your browser does not support the video tag.

Video: Instructions on how to adjust the SMARTlight feature on your PocketBook e-reader by swiping the screen up and down.

4.1.2 Changing Font Settings

Customize your reading experience by changing the font type and size to your preference.
For a visual guide on changing fonts:

Your browser does not support the video tag.

Video: Demonstrates how to change the font on your PocketBook e-reader through the settings menu.

4.1.3 Activating Dark Mode

Dark Mode inverts the screen colors, displaying white text on a black background, which can be more comfortable for reading in low-light conditions.
For a visual guide on activating Dark Mode:

Your browser does not support the video tag.

Video: Shows how to activate Dark Mode on your PocketBook e-reader by accessing the upper drop-down menu.

4.2 Audio Features

The PocketBook Touch HD 3 supports audio files and Text-to-Speech, allowing you to listen to audiobooks or have text files read aloud.

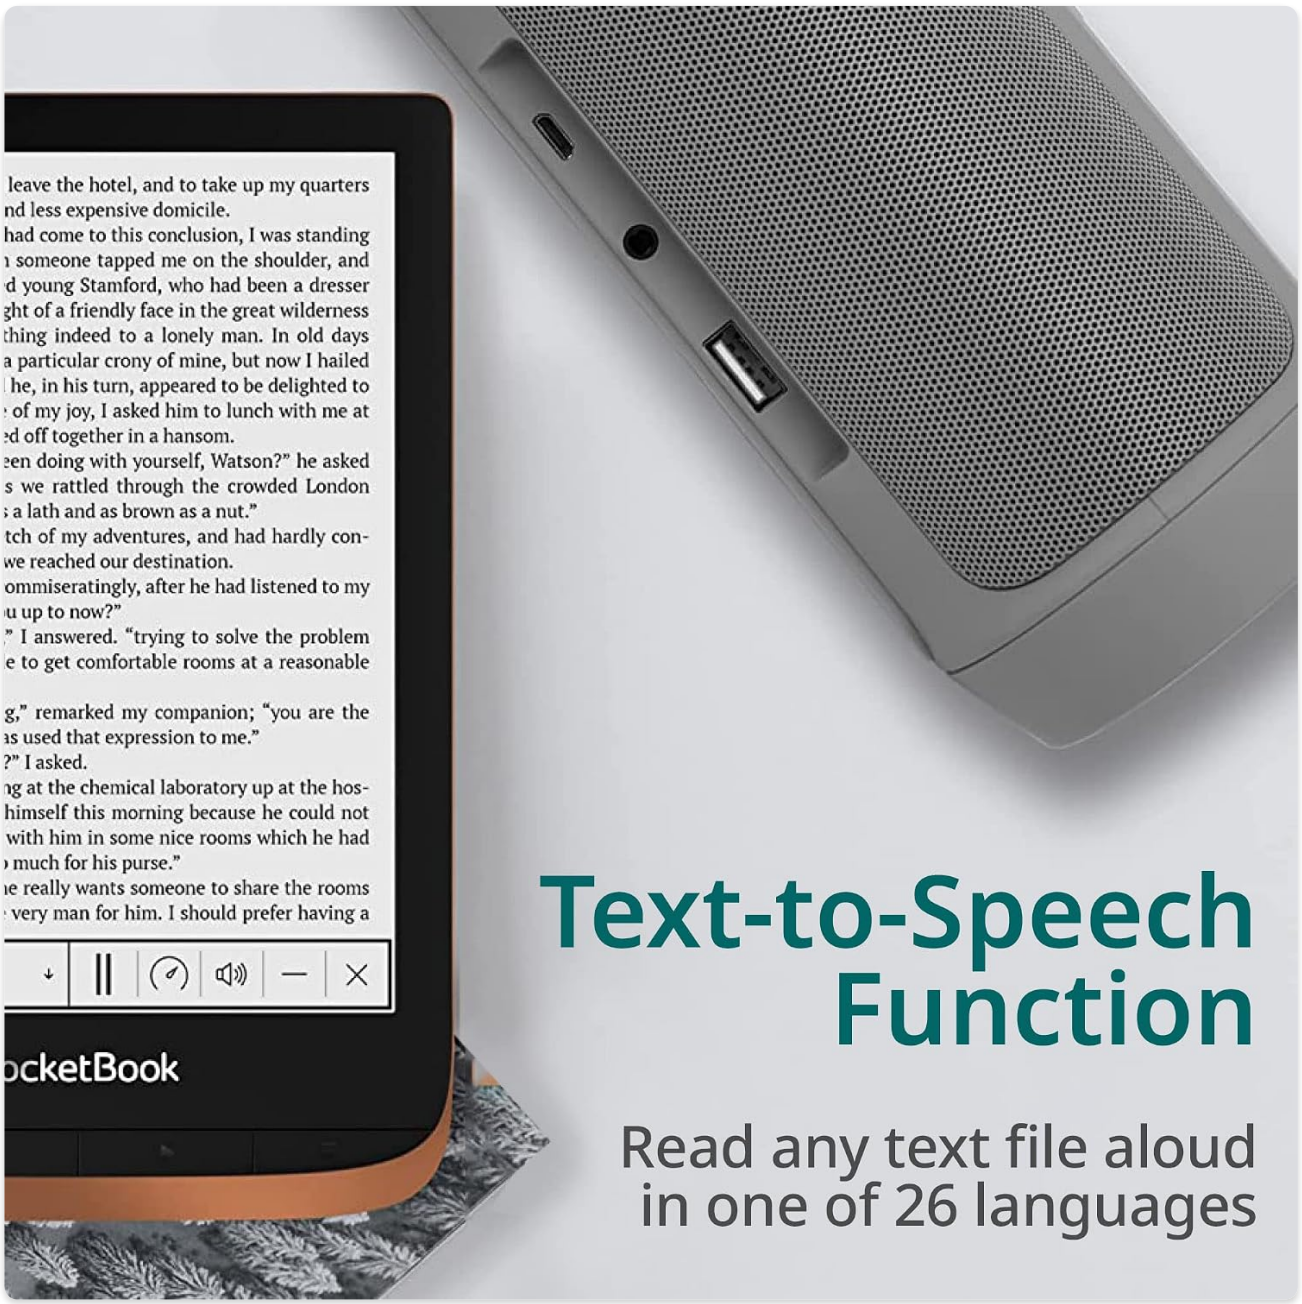

Image: The PocketBook Touch HD 3 screen showing the Text-to-Speech function active, ready to read text aloud.

4.2.1 Text-to-Speech (TTS) Function

The Text-to-Speech feature can read any text file aloud in a natural-sounding voice. You may need to download additional voice packages.
For a visual guide on downloading and installing TTS voices:

Your browser does not support the video tag.

Video: Instructions on how to download and install Text-to-Speech (TTS) voices on your PocketBook e-reader.

4.2.2 Bluetooth Connectivity for Audio

Connect Bluetooth-enabled headphones or speakers to your e-reader to enjoy audiobooks or music without wires.



Image: The PocketBook Touch HD 3 paired with wireless headphones, illustrating its Bluetooth audio capabilities for audiobooks.

4.3 IPX8 Waterproof Rating

The device is designed to be waterproof, complying with the IPX8 standard. This means it can withstand immersion in fresh water up to 2 meters deep for up to 60 minutes. This feature allows for worry-free reading in environments like the bath or by the pool.

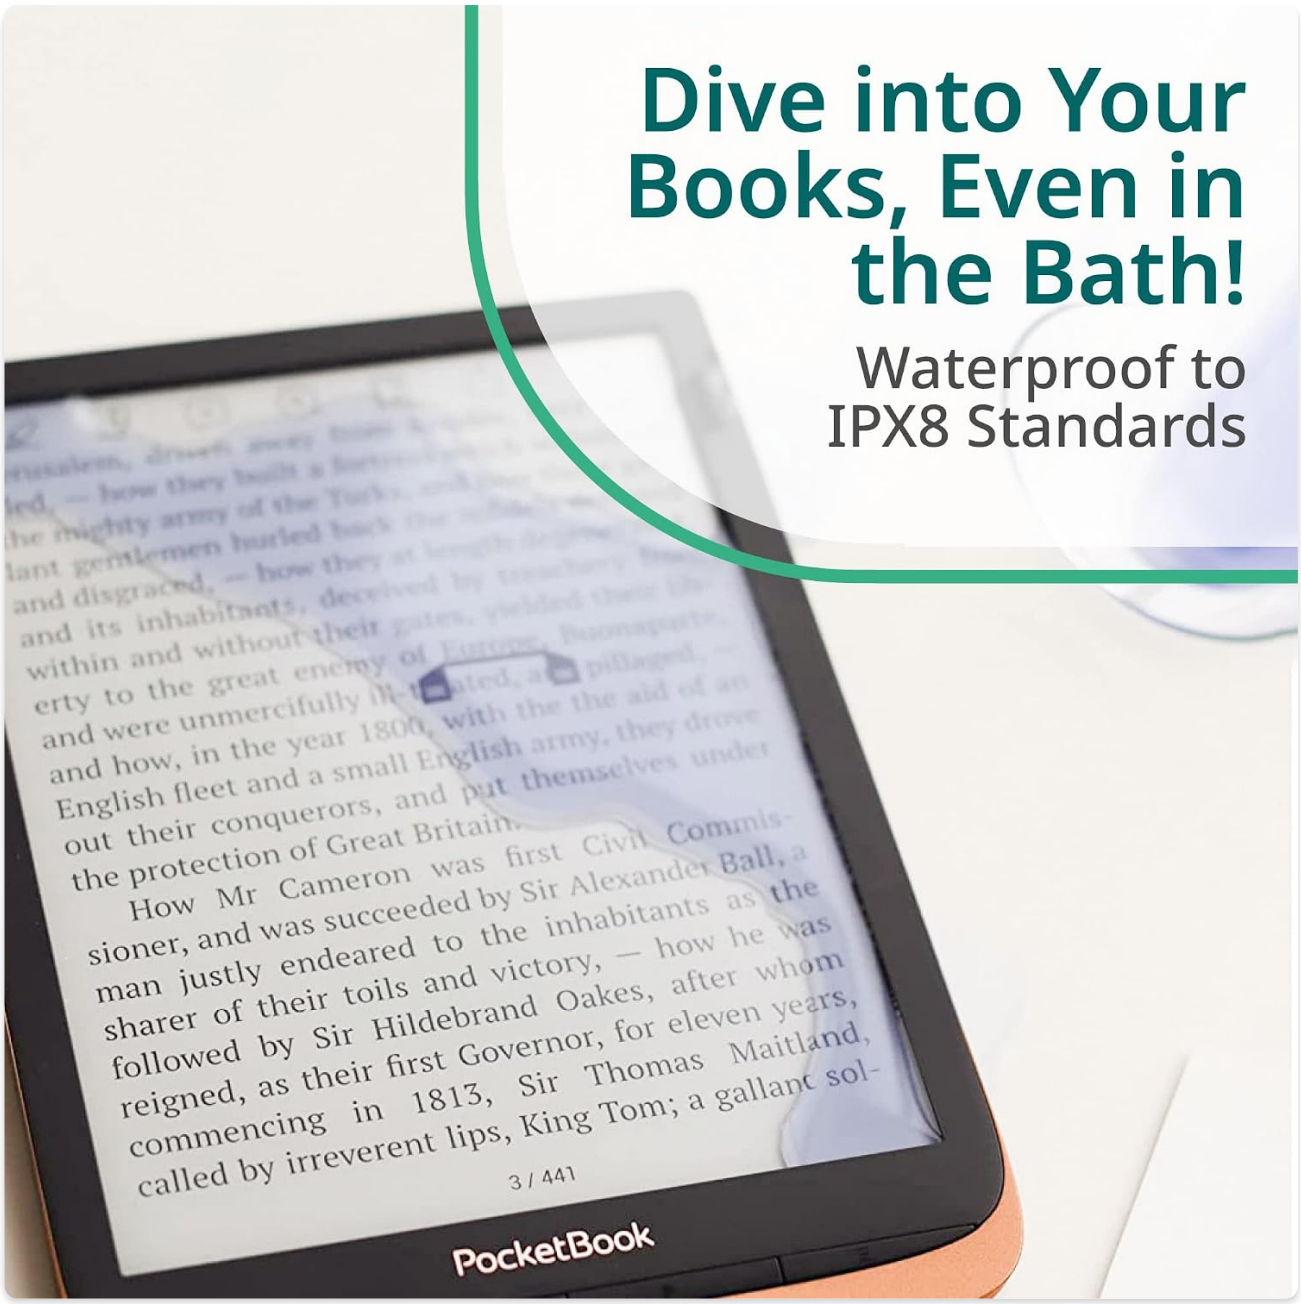

Image: The PocketBook Touch HD 3 being used in a wet environment, demonstrating its IPX8 waterproof protection.

4.4 Supported File Formats

The PocketBook Touch HD 3 supports a wide range of formats, eliminating the need for file conversion:

- **Book Formats:** EPUB, FB2, DOC, DJVU, PDF (DRM), TXT, RTF, HTML, CHM, MOBI, ACSM, PRC, etc. (19 formats)
- **Comic Formats:** CBR, CBZ (2 formats)
- **Graphic Formats:** JPEG, BMP, PNG, TIFF (4 formats)
- **Audio Formats:** MP3, M4B, OGG, OGG.ZIP (6 formats)

4.5 Battery Life

Enjoy extended reading sessions with up to 720 hours (approximately 1 month) of battery life on a single charge, depending on usage and settings.



Image: The PocketBook Touch HD 3 being stored in a bag, with icons representing cloud services, Wi-Fi, and long battery life, emphasizing its convenience for travel and connectivity.

5. Maintenance

5.1 Cleaning the Device

To clean your PocketBook Touch HD 3, use a soft, dry, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or solvents, as these can damage the screen and casing.

5.2 Storage

Store your e-reader in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

6. Troubleshooting

If you encounter issues with your PocketBook Touch HD 3, refer to the following common solutions:

6.1 Device Not Responding

- **Restart:** Press and hold the Power button for 10-15 seconds to force a restart.
- **Charge:** Ensure the device is charged. Connect it to a power source for at least 30 minutes.

6.2 Screen Issues (Frozen, Flickering)

- **Restart:** A restart often resolves temporary screen glitches.
- **Firmware Update:** Check for available firmware updates, as these can fix software-related display issues.

6.3 Wi-Fi Connectivity Problems

- **Toggle Wi-Fi:** Turn Wi-Fi off and then on again on your device.
- **Router Restart:** Restart your Wi-Fi router.
- **Check Password:** Ensure you are entering the correct Wi-Fi password.

6.4 Books Not Opening / File Format Issues

- **Supported Formats:** Verify that the file format is supported by the device (refer to Section 4.4).
- **File Corruption:** Try opening another file to see if the issue is specific to one book.

If these steps do not resolve your issue, please contact PocketBook customer support.

7. Specifications

Feature	Detail
Brand	PocketBook
Model Name	PocketBook Touch HD 3
Model Number	PB632-K-WW
Display Technology	E-Ink Carta
Screen Size	6 inches
Display Resolution	1072x1448
Internal Memory	16 GB
Connectivity	Bluetooth, Wi-Fi
Battery Life	Up to 720 hours
Waterproof Rating	IPX8
Processor Speed	1 GHz
Human-Interface Input	Touchscreen
Weight	155 g

8. Warranty and Support

8.1 Warranty Information

The PocketBook Touch HD 3 comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or service inquiries, please visit the official PocketBook website or contact their customer service department. You can find more information and support resources at the PocketBook Store on Amazon or their official global website.

© 2023 PocketBook. All rights reserved.
This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07JVCXXBS

More documents and user manuals: **https://manuals.plus/**