**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



## Edillas 869

# Edillas Kids Digital Watch Instruction Manual

Model: 869

## Introduction

This manual provides detailed instructions for the Edillas Multifunction Digital Watch, designed for children. It covers all essential functions, from initial setup to advanced features like stopwatch and alarm, ensuring a comprehensive understanding of your new timepiece.






Image: Front view of the Edillas Kids Digital Watch, black with yellow accents, displaying the digital time.

## Key Features

- **7-Color Backlight:** Adjustable backlight with dark blue, green, red, sky blue, orange, pink, and purple options for clear visibility at night.
- **50M Water Resistance:** Suitable for daily use, including hand washing, showering, swimming, and surfing.*Not for pressing buttons underwater.*
- **Multifunctionality:** Includes alarm, stopwatch, LED cold light, time/minute/second/date/week/AM/PM display, 12/24-hour format, and hourly chime.
- **Durable Construction:** High-quality movement for accurate timekeeping, soft TPU strap for comfort, and shock-resistant stainless steel back case.

## Watch Components

Familiarize yourself with the watch's buttons and display areas.




Image: Diagram showing the different buttons and display sections of the watch, including Light, Start, Reset, Mode, Hour, Minute, Second, and Week indicators.

- **LIGHT Button:** Activates the backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button:** Used to start/stop functions in Stopwatch mode, and adjust settings.
- **RESET Button:** Used to reset functions in Stopwatch mode, and adjust settings.

## Initial Setup

### Setting Time and Date

1. From the normal time display, press the**MODE** button three times to enter time setting mode. The seconds will start

flashing.

2. Press the **RESET** button to zero out the seconds.
3. Press the **START** button to move to the next setting (Hour).
4. Press the **RESET** button to adjust the hour. Note the AM/PM indicator for 12-hour format.
5. Continue pressing **START** to cycle through Minute, Month, Date, and Day of the Week settings.
6. Use the **RESET** button to adjust each value.
7. Once all settings are complete, press the **MODE** button to return to the normal time display.

### 12/24 Hour Format

In time setting mode (seconds flashing), press the **RESET** button while the hour is flashing to toggle between 12-hour (A/P indicator) and 24-hour format.

## Operating Instructions

### Backlight Function

Press the **LIGHT** button (top left) to illuminate the display. The backlight will stay on for a few seconds.

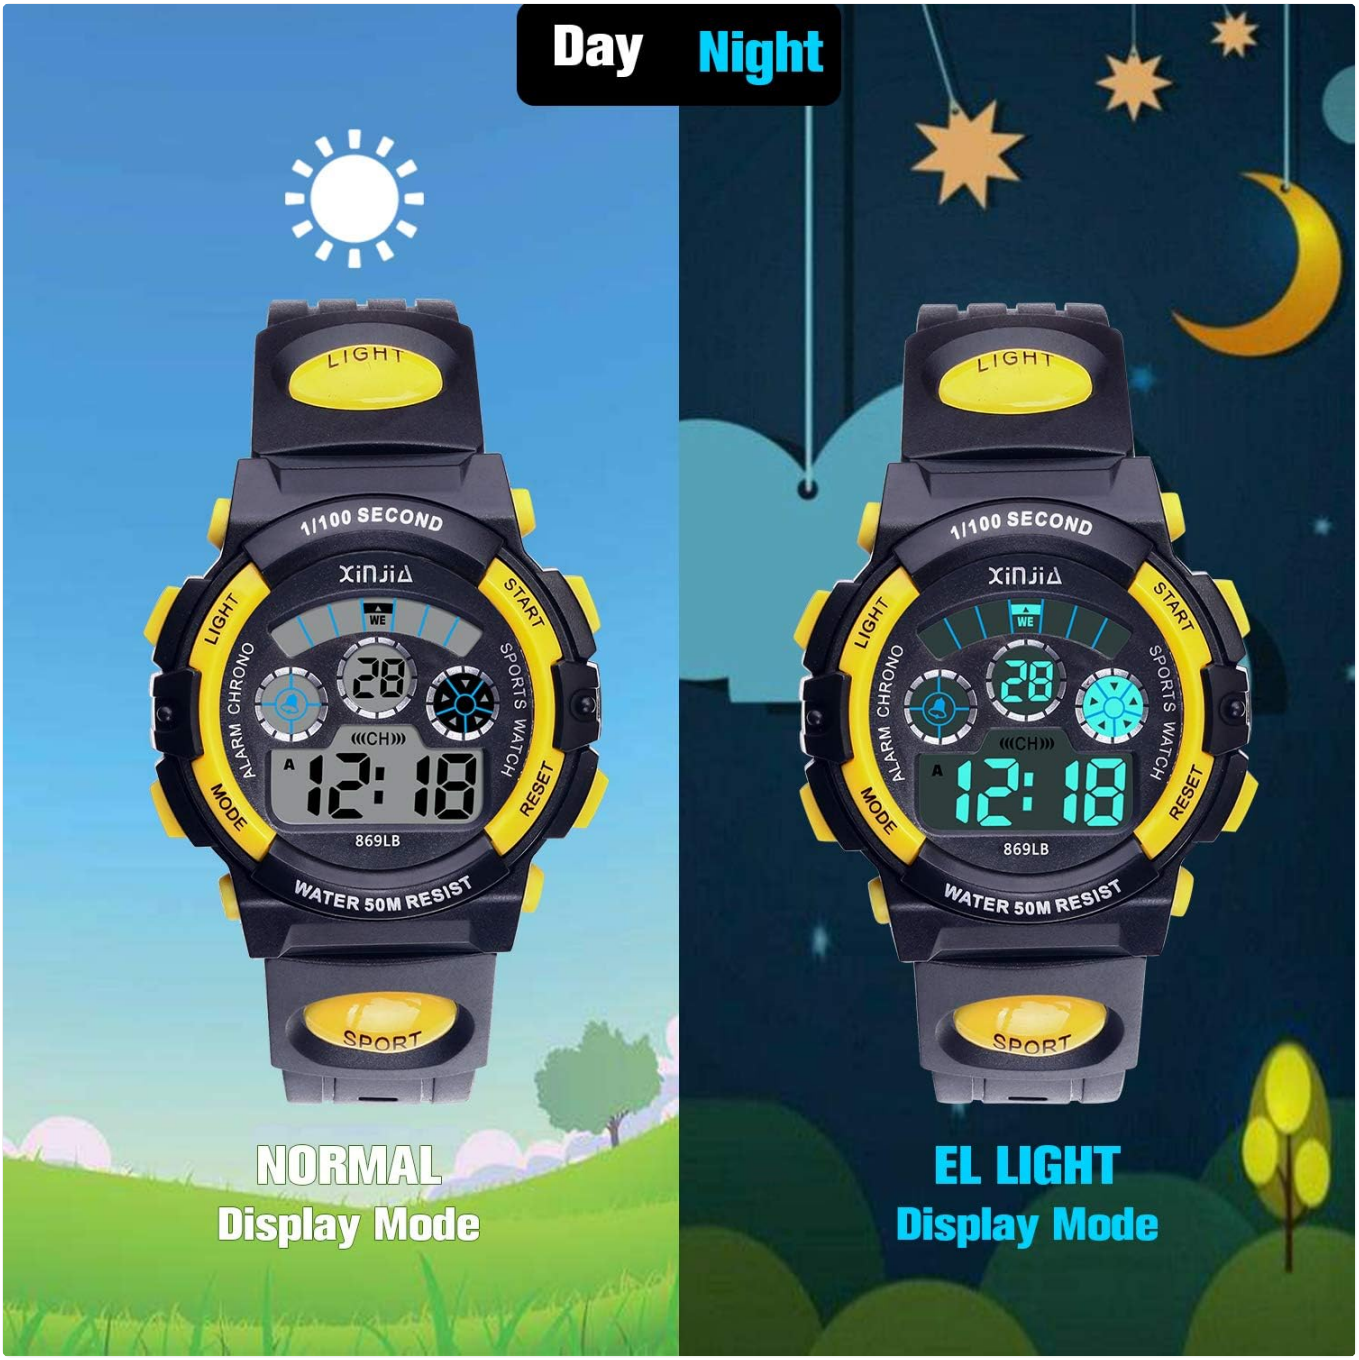



Image: Comparison of the watch display in normal daylight mode and with the EL (electroluminescent) backlight activated in a dark environment.

### Changing Backlight Colors

To change the backlight color, press and hold the**LIGHT** button for approximately 3 seconds. The color will cycle through the available 7 colors (dark blue, green, red, sky blue, orange, pink, purple). Release the button when your desired color is displayed.




Image: The Edillas Kids Digital Watch with examples of its seven different backlight colors displayed on the right side.

## Alarm Function

1. From the normal time display, press the **MODE** button once to enter Alarm mode. The alarm time will be displayed.
2. Press the **RESET** button to toggle the alarm ON/OFF. An alarm icon will appear when ON.
3. To set the alarm time, press the **START** button. The hour digits will flash.
4. Use the **RESET** button to adjust the hour.
5. Press the **START** button to move to the minute setting.

6. Use the **RESET** button to adjust the minute.
7. Press the **MODE** button to exit alarm setting mode.

### Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause the timing.
4. Press the **RESET** button to reset the stopwatch to "00:00:00".
5. To exit Stopwatch mode, press the **MODE** button.

### Hourly Chime

In the normal time display, press the **MODE** button twice to enter Stopwatch mode. Then, press the **RESET** button to toggle the hourly chime ON/OFF. An icon (often a bell or chime symbol) will appear when the hourly chime is active.

## Care and Maintenance

### Water Resistance

The Edillas Kids Digital Watch is rated 50M (5 ATM) water-resistant. This means it is suitable for everyday use and can withstand splashes, rain, hand washing, showering, and even swimming or surfing.




Image: Illustrations showing children washing hands, taking a shower, and swimming, demonstrating the watch's 50M water resistance.

**Important: Do NOT press any buttons while the watch is submerged in water, as this can compromise the water seal and cause damage.**

### Cleaning

To clean your watch, wipe it with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish or strap.

### Battery

The watch uses a high-quality battery designed for long-lasting performance. When the display becomes dim or functions become erratic, it may be time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance is maintained.

## Troubleshooting

| Problem | Possible Cause | Solution |
|---|---|---|
| Display is blank or dim. | Low battery. | Replace the battery. |
| Time is incorrect. | Time needs to be reset after battery change or accidental adjustment. | Follow the "Setting Time and Date" instructions. |
| Alarm does not sound. | Alarm is turned OFF or set incorrectly. | Ensure the alarm is ON and the time is set correctly. |
| Water inside the watch. | Buttons pressed underwater or seal compromised. | Stop using the watch immediately and seek professional repair. Do not attempt to dry it yourself. |

## Specifications




Image: Diagram illustrating the physical dimensions of the watch, including case diameter, thickness, band length, and band width.

- **Model Number:** 869

- **Case Diameter:** 44.5 mm (1.75 inches)
- **Case Thickness:** 17 mm (0.67 inches)
- **Band Length:** 24 cm (9.44 inches)
- **Band Width:** 16 mm (0.63 inches)
- **Max Fit Wrist:** 22 cm (8.66 inches)
- **Min Fit Wrist:** 15 cm (5.9 inches)
- **Product Weight:** 43 g (1.5 oz)
- **Water Resistance:** 50M (5 ATM)
- **Clasp Type:** Buckle
- **Material:** High-quality movement, soft TPU strap, stainless steel back case

## Warranty and Support

Edillas provides a satisfaction guarantee for its products. If you encounter any issues with your watch, please contact our customer support team.

**Customer Support Email:** Yadelaiaftersale@163.com

We are committed to resolving any problems to your satisfaction.

© 2024 Edillas. All rights reserved.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

**Open the live page**

**https://manuals.plus/asin/B07M87DL5B**

More documents and user manuals: **https://manuals.plus/**