Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Geepas GSB5081

Geepas 750W 3-in-1 Mixer Grinder Instruction Manual

Model: GSB5081

Introduction

Thank you for purchasing the Geepas 750W 3-in-1 Mixer Grinder. This versatile appliance is designed to simplify your kitchen tasks, offering efficient dry grinding, wet grinding, and mixing capabilities. With its powerful motor and durable stainless steel jars, it is ideal for preparing a wide range of ingredients, from spices and chutneys to batters and purees. Please read this manual carefully before use to ensure safe and optimal operation of your new appliance.



Image Description: A red Geepas 3-in-1 mixer grinder with three stainless steel jars. The main unit is red with a black base and a speed control knob. One large jar is placed on the main unit, and two smaller jars are positioned to its left and right.

Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before operating the appliance.
- Do not immerse the motor unit, cord, or plug in water or other liquids.
- Always unplug the appliance from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury. Use a scraper only when the motor is stopped.
- Ensure the jar is securely locked onto the motor unit before operating.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not overload the mixer grinder. Refer to the maximum capacity guidelines for each jar.
- Do not use outdoors. This appliance is for household use only.
- Avoid contact with moving parts.
- Blades are sharp. Handle with extreme care when cleaning.

Product Overview

Components

Your Geepas 3-in-1 Mixer Grinder comes with the following main components:

- **Motor Unit:** The main body housing the powerful 750W motor and speed control knob.
- **Large Stainless Steel Jar (1.5 Liters):** Typically used for blending liquids, making smoothies, and wet grinding larger quantities.
- **Medium Stainless Steel Jar:** Suitable for wet grinding, making batters, and general mixing.
- **Small Stainless Steel Jar:** Ideal for dry grinding spices, nuts, and making chutneys.
- **Lids:** Transparent, unbreakable polycarbonate lids for each jar to prevent leakage.
- **Stainless Steel Blades:** Fixed blades designed for specific grinding and mixing tasks in each jar.



Image Description: The red Geepas mixer grinder on a white surface, surrounded by various dry spices and ingredients, demonstrating its grinding capabilities.

Key Features

- **Powerful 750W Motor:** Ensures efficient and quick grinding and mixing of even tough ingredients.
- **3 Stainless Steel Jars:** Designed for various applications, including dry grinding, wet grinding, and blending.
- **Durable Stainless Steel Blades:** High-quality blades for fine and consistent results.
- **3-Speed Control Knob:** Allows precise control over the grinding and mixing process.
- **Ergonomic Handles:** Sturdy and comfortable handles on jars for easy handling.
- **Safety Lock Mechanism:** Jars feature a twist-lock design for secure operation.
- **Non-Slip Feet:** Vacuum rubber feet provide stability and prevent movement during operation.



Image Description: A close-up view of the mixer grinder's jar, highlighting its sturdy ergonomic handle for comfortable grip.



Image Description: An image displaying key product features through icons: stainless steel jars, stainless steel blades, a 3-speed control knob, and a non-slip base, positioned next to the mixer grinder.



Image Description: A graphic listing features such as 3-speed control, high-speed copper motor, stainless steel grinder jars, and stainless steel cutting blades, accompanied by relevant icons.

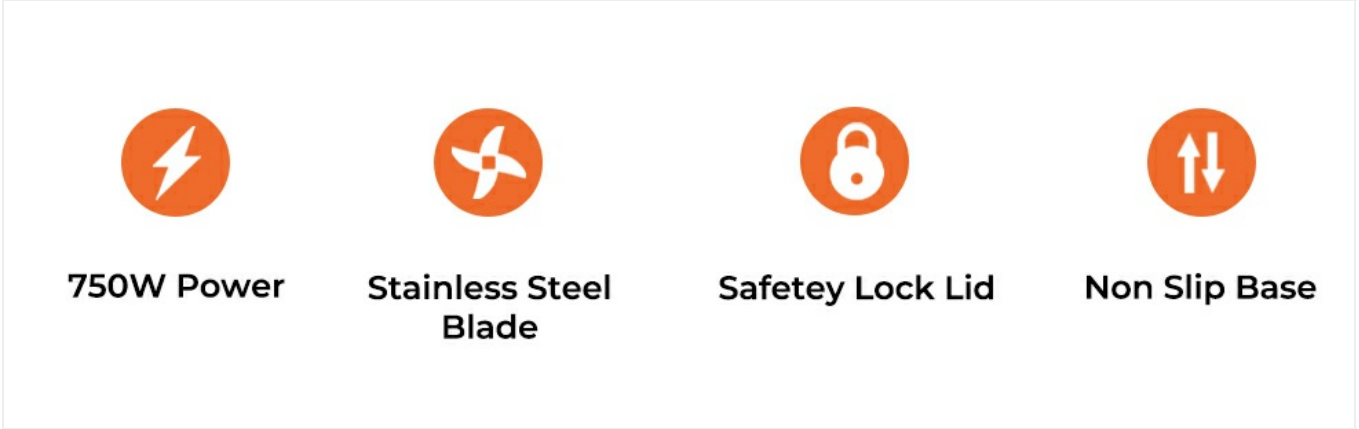


Image Description: A set of four icons illustrating key features: 750W power, stainless steel blade, safety lock lid, and non-slip base.



Image Description: A close-up shot of the white motor coupling mechanism located on the red base unit of the mixer grinder.



Image Description: The Geepas mixer grinder with its three stainless steel jars, emphasizing the material and design of the jars.

Setup

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Clean Before First Use:** Wash the stainless steel jars, lids, and blades with warm soapy water. Rinse thoroughly and dry completely. Wipe the motor unit with a damp cloth. Do not immerse the motor unit in water.
3. **Placement:** Place the motor unit on a clean, dry, stable, and flat surface, away from the edge of the countertop. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Ensure the voltage indicated on the appliance matches your local power supply before plugging in.

Operating Instructions

Follow these steps for safe and effective operation:

1. **Prepare Ingredients:** Cut ingredients into small pieces if necessary to facilitate grinding and prevent overloading.
2. **Load the Jar:** Place the desired ingredients into the appropriate stainless steel jar. Do not fill the jar beyond the maximum fill line indicated (if any), or approximately 2/3 of the jar's capacity to allow for proper blending/grinding.
3. **Secure the Lid:** Place the lid firmly onto the jar. Ensure it is properly seated and locked to prevent spills during operation.
4. **Attach Jar to Motor Unit:** Place the loaded jar onto the motor unit. Twist the jar clockwise until it locks securely into place. The appliance will not operate unless the jar is correctly locked.
5. **Select Speed:** Plug the appliance into a power outlet. Turn the speed control knob to the desired setting (1, 2, or 3).
    - **Speed 1:** For light mixing and delicate ingredients.
    - **Speed 2:** For general grinding and mixing.
    - **Speed 3:** For heavy-duty grinding and tougher ingredients.
    - **Pulse (P):** For short bursts of power, ideal for chopping or quick mixing. Turn the knob to 'P' and release.
6. **Operate:** Allow the mixer grinder to run until the desired consistency is achieved. For optimal performance and motor longevity, operate in short bursts (e.g., 60 seconds on, 30 seconds off) rather than continuous operation for extended periods.
7. **Switch Off:** Once done, turn the speed control knob to the 'OFF' position (0). Unplug the appliance from the power outlet.
8. **Remove Jar:** Twist the jar counter-clockwise to unlock and lift it from the motor unit. Carefully remove the lid and pour out the contents.



Image Description: A detailed view of the speed control knob on the red mixer grinder, showing settings from 0 to 3, and indicating its function for dry and wet grinding with 3-speed control.



Image Description: A visual guide showing the different types of grinding blades (chutney, wet, dry) and examples of food items they are designed to process, such as coconut chutney, fruit smoothies, and various dry spices.

Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your mixer grinder.

1. **Always Unplug:** Before cleaning, ensure the appliance is switched off and unplugged from the power outlet.
2. **Clean Jars and Lids:**
   - Immediately after use, rinse the jars and lids to prevent food from drying on.
   - Wash with warm soapy water using a soft sponge or brush.
   - For stubborn residue, fill the jar with warm water and a drop of dish soap, run the mixer grinder on speed 1 for a

few seconds, then rinse.
    - Handle blades with extreme care as they are very sharp.
    - Rinse thoroughly and dry completely before storing.
3. **Clean Motor Unit:**
    - Wipe the exterior of the motor unit with a soft, damp cloth.
    - Do not use abrasive cleaners or scourers.
    - Never immerse the motor unit in water or any other liquid.
4. **Storage:** Store the mixer grinder and its accessories in a clean, dry place, away from direct sunlight and out of reach of children.

TROUBLESHOOTING

If you encounter any issues with your mixer grinder, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in. Power outlet not working. Jar not locked correctly. Overload protection activated.	Ensure the power cord is securely plugged into a working outlet. Test the outlet with another appliance. Twist the jar clockwise until it clicks securely into place. Unplug, remove some ingredients, wait 2-3 minutes for motor to cool, then restart.
Motor runs but ingredients are not grinding/mixing.	Jar overloaded. Ingredients too large or hard. Insufficient liquid for wet grinding.	Reduce the quantity of ingredients. Cut ingredients into smaller pieces. Add more liquid (for wet grinding/blending).
Burning smell from motor.	Overloading or continuous operation. New motor smell (initial uses).	Switch off immediately, unplug, and allow the motor to cool down for at least 15-20 minutes. Reduce load. A slight burning smell during initial uses is normal as the motor "breaks in." If it persists or is strong, contact customer support.
Excessive noise or vibration.	Jar not properly seated. Unstable surface. Damaged blades or coupling.	Ensure the jar is securely locked onto the motor unit. Place the appliance on a flat, stable surface. Inspect blades and coupling for damage. Do not use if damaged.

If the problem persists after trying these solutions, please contact Geepas customer support or your retailer. Do not attempt to repair the appliance yourself.

SPECIFICATIONS

Feature	Detail
Brand	Geepas
Model Number	GSB5081
Power	750 Watts
Voltage	240 Volts
Capacity (Main Jar)	1.5 Liters
Number of Jars	3 (various capacities for dry, wet, chutney grinding)
Material	Polycarbonate (lids), Stainless Steel (jars, blades)
Number of Speeds	3 + Pulse function
Dimensions (L x W x H)	7.87 x 13.78 x 14.17 cm (approx. 3.1 x 5.4 x 5.6 inches)
Item Weight	2.49 Kilograms (approx. 5.49 lbs)
Special Features	Safety Lock, Non-Slip Feet
Country of Origin	India

Warranty and Support

The Geepas 750W 3-in-1 Mixer Grinder comes with a**2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear.
For warranty claims, technical support, or any other inquiries, please contact the retailer from whom you purchased the product or refer to the contact information provided in your product packaging. Please have your proof of purchase and model number (GSB5081) ready when contacting support.

© 2024 Geepas. All rights reserved.
For more information, visit www.geepas.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07MVQ2W2R

More documents and user manuals: **https://manuals.plus/**