Manuals+
Q & A | Deep Search | Upload

X Rocker 5139101

X Rocker Sony Playstation Gold 2.1 Gaming Chair Instruction Manual

Model: 5139101

1. Introduction

This manual provides essential instructions for the assembly, operation, and maintenance of your X Rocker Sony Playstation Gold 2.1 Gaming Chair. Please read this manual thoroughly before use to ensure proper setup and to maximize your gaming experience. Retain this manual for future reference.

Image 1.1: Front view of the X Rocker Sony Playstation Gold 2.1 Gaming Chair.

This image displays the X Rocker Sony Playstation Gold 2.1 Gaming Chair in its assembled state, showcasing its design and overall appearance.

2. Safety Information

Observe the following safety precautions to prevent injury or damage to the product:

- Ensure all components are securely fastened during assembly.
- Do not stand on the chair or use it as a step stool.
- Keep liquids away from the control panel and audio components.
- Avoid placing hands or fingers under the chair while rocking to prevent pinching.
- Use only the power adapter supplied with the product.
- Do not attempt to modify or disassemble the chair's electronic components.
- This product is designed for indoor use only.

3. Package Contents

Verify that all items are present before beginning assembly:

- X Rocker Sony Playstation Gold 2.1 Gaming Chair (Main Unit)
- Armrests (2 units)
- Power Adapter
- Audio Connection Cables (e.g., 3.5mm audio cable)
- Instruction Manual (this document)

4. Assembly and Setup

The X Rocker Sony Playstation Gold 2.1 Gaming Chair requires minimal assembly. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and place them on a clean, flat surface.
2. **Attach Armrests:** Locate the two armrests. Align each armrest with the designated mounting points on the sides of the chair. Secure them using the provided screws and tools (if applicable). Ensure they are firmly attached.
3. **Position the Chair:** Place the assembled chair in your desired gaming location.
4. **Connect Power:** Plug the power adapter into the DC IN port on the chair's control panel. Then, plug the adapter into a wall outlet.
5. **Connect Audio:** Use the provided audio cables to connect your gaming console, TV, or other audio source to the appropriate input ports on the chair's control panel. Refer to the "Operating Instructions" section for detailed audio connection options.

Image 4.1: Rear view of the chair showing the control panel with input/output ports.

This image displays the control panel located on the side of the chair, featuring various input and output ports for audio connections and the power input. This is where you will connect your gaming console or other audio devices.

5. Operating Instructions

The X Rocker Sony Playstation Gold 2.1 Gaming Chair features an integrated 2.1 audio system for an immersive experience.

5.1 Audio System

- **Speakers:** Two speakers are integrated into the headrest, providing directional audio.
- **Subwoofer:** A subwoofer is embedded in the backrest, delivering enhanced bass and vibration feedback.

Image 5.1: Rear view of the chair, highlighting the integrated subwoofer in the backrest.

This image shows the back of the gaming chair, where the subwoofer is visibly integrated into the backrest, designed to provide powerful bass output.

5.2 Control Panel

The control panel, located on the side of the chair, allows you to manage audio settings and connections:

- **Power Button:** Turns the chair's audio system on or off.
- **Volume Control:** Adjusts the overall audio volume.
- **Bass Control:** Adjusts the intensity of the subwoofer's bass output.
- **Input Ports:** Connect your audio source (e.g., gaming console, TV, smartphone) using the appropriate audio cables (e.g., 3.5mm jack, RCA).
- **Output Port:** Allows connection to another X Rocker chair or external audio device (if available).

Ensure your audio source's volume is set to a moderate level before adjusting the chair's volume.

6. Maintenance

To maintain the condition and longevity of your X Rocker Gaming Chair, follow these guidelines:

- **Cleaning:** Wipe the faux leather surface with a soft, damp cloth. For stubborn stains, use a mild soap solution and immediately wipe dry. Avoid abrasive cleaners or solvents.
- **Storage:** Store the chair in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all connections and fasteners to ensure they are secure.

7. Troubleshooting

If you encounter issues with your gaming chair, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speakers/subwoofer.	Power not connected. Audio cables loose or incorrect. Chair volume too low. Audio source volume too low or muted.	Ensure power adapter is securely plugged into chair and wall outlet. Check all audio cable connections. Ensure they are fully inserted into the correct input ports. Increase the volume on the chair's control panel. Increase the volume on your audio source (console, TV, etc.) and ensure it is not muted.
Distorted or poor sound quality.	Volume too high. Loose audio connection. Interference.	Reduce the volume on both the chair and the audio source. Verify all audio cable connections are secure. Move the chair or audio source away from other electronic devices that may cause interference.
Chair does not power on.	Power adapter not connected or faulty. Wall outlet not functioning.	Check power adapter connection to chair and wall. Test the wall outlet with another device. Ensure the power button on the control panel is pressed.

If the problem persists after attempting these solutions, please contact customer support.

8. Specifications

Feature	Detail
Brand	X Rocker
Model Number	5139101
Color	Gold (with black accents)
Product Dimensions (Depth x Width x Height)	85 cm x 65 cm x 84 cm (approx. 33.5 in x 25.6 in x 33.1 in)
Material	Faux Leather (Simili cuir)
Item Weight	1 Kilogram (approx. 2.2 lbs) *Note: This weight appears unusually low for a gaming chair and may be a data entry discrepancy.*
Audio System	2.1 (2 headrest speakers, 1 backrest subwoofer)

Feature	Detail
Frame Material	Wood
Seat Material Type	Foam and Synthetic Leather
Care Instructions	Clean (Nettoyer)

9. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official X Rocker website. Keep your proof of purchase for any warranty claims.
For further assistance, you may contact X Rocker customer service directly.

© 2024 X Rocker. All rights reserved.

Related Documents - 5139101

	X-Rocker 2.1 Bluetooth Sound Rocker Assembly Instructions Step-by-step guide for assembling the X-Rocker 2.1 Bluetooth Sound Rocker gaming chair, including a detailed parts list, safety warnings, and assembly procedures.
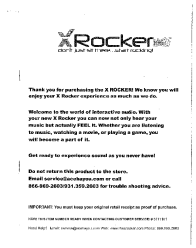	X Rocker Gaming Chair User Manual & Setup Guide - Ace Bayou Comprehensive user manual and setup guide for the X Rocker gaming chair by Ace Bayou. Learn about features, connections, troubleshooting, and warranty information.
	X Rocker 2.1 Wireless & Bluetooth Gaming Chair: Setup and User Guide This user manual provides comprehensive setup and connection guides for the X Rocker 2.1 Wireless & Bluetooth gaming chair. Learn how to connect to PS4, Xbox One, and TVs, troubleshoot common issues, and ensure safe usage for an immersive audio experience.

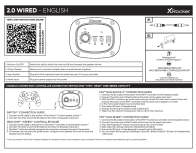	[X Rocker 2.0 Wired Gaming Chair Connection and Safety Guide] Comprehensive guide to connecting and safely using the X Rocker 2.0 Wired gaming chair, including console and TV setup, troubleshooting, and important safety information.
	[X Rocker Gaming Chair User Manual and Setup Guide] Comprehensive guide for the X Rocker gaming chair by Ace Bayou, covering features, setup, wired and Bluetooth connections, troubleshooting, and warranty information.
	[X Rocker 2.0 Bluetooth Gaming Chair with RGB LED - User Manual] Comprehensive user manual for the X Rocker 2.0 Bluetooth gaming chair with RGB LED, covering setup, connections, troubleshooting, and safety information.