Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Olympia K-5025-BN

Olympia K-5025-BN I2 Single Handle Pull-Down Kitchen Faucet Instruction Manual

Model: K-5025-BN | Brand: Olympia

Important Safety Information

Please read all instructions carefully before installation and use. Failure to follow these instructions may result in property damage or personal injury. Retain this manual for future reference.

- Always turn off the main water supply before beginning any installation or repair work.
- Wear appropriate personal protective equipment, such as safety glasses, during installation.
- If you are unsure about any part of the installation process, consult a qualified plumber.
- Do not use harsh chemicals or abrasive cleaners on the faucet finish.

Package Contents

Verify that all components are present before beginning installation.

- Faucet Assembly (Main Body with Handle and Pull-Down Sprayer)
- Mounting Hardware (Mounting Nut, Washer)
- Flexible Supply Lines (Pre-attached)
- Sprayer Hose Weight
- Deck Plate (for 3-hole installation, if applicable)



This image shows the complete Olympia K-5025-BN I2 kitchen faucet, highlighting its single lever handle and pull-down sprayer design.


Setup and Installation

Before You Begin

- Ensure you have the necessary tools: adjustable wrench, Phillips screwdriver, plumber's putty or silicone sealant, flashlight, bucket, and rags.
- Turn off the hot and cold water supply valves under the sink. If no shut-off valves are present, turn off the main water supply to your home.
- Clear the area under the sink for easy access.


Installation Steps

1. **Prepare the Sink Deck:** This faucet is designed for 1 or 3-hole 8-inch installations. If your sink has three holes, use the included deck plate to cover the unused holes. Ensure the deck plate is properly aligned and sealed with plumber's putty or silicone. For a single-hole installation, no deck plate is needed.

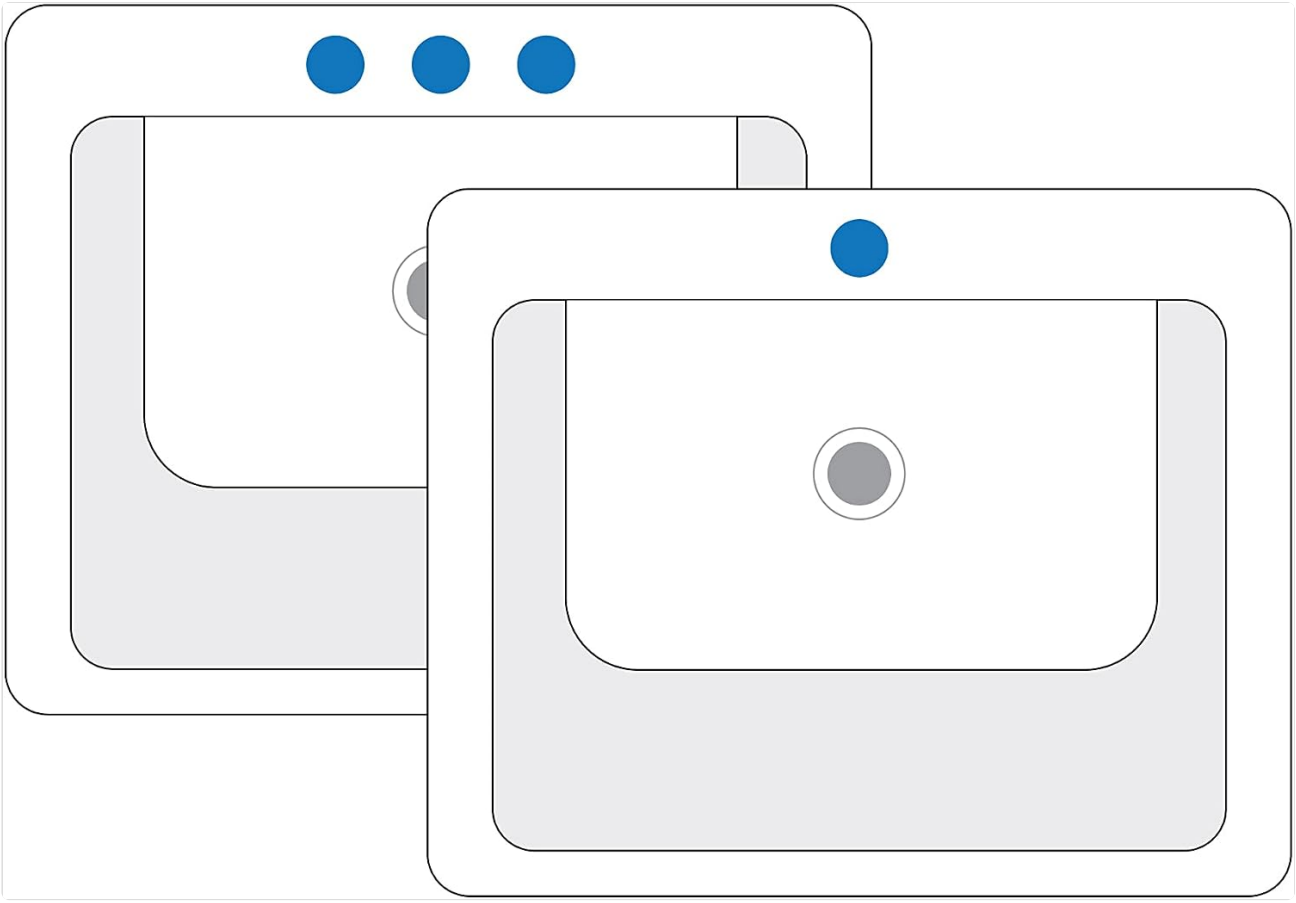

This diagram illustrates common kitchen sink configurations, showing options for one-hole or three-hole faucet installations.

2. **Install the Faucet Body:** Insert the faucet's supply lines and sprayer hose through the mounting hole(s) in the sink deck. From underneath the sink, secure the faucet using the provided mounting washer and nut. Hand-tighten first, then use an adjustable wrench to snug it firmly, ensuring the faucet is straight.
3. **Connect Water Supply Lines:** Connect the pre-attached flexible supply lines to your hot and cold water supply valves. The lines are 30 inches long with 3/8-inch connections. Ensure connections are tight to prevent leaks.

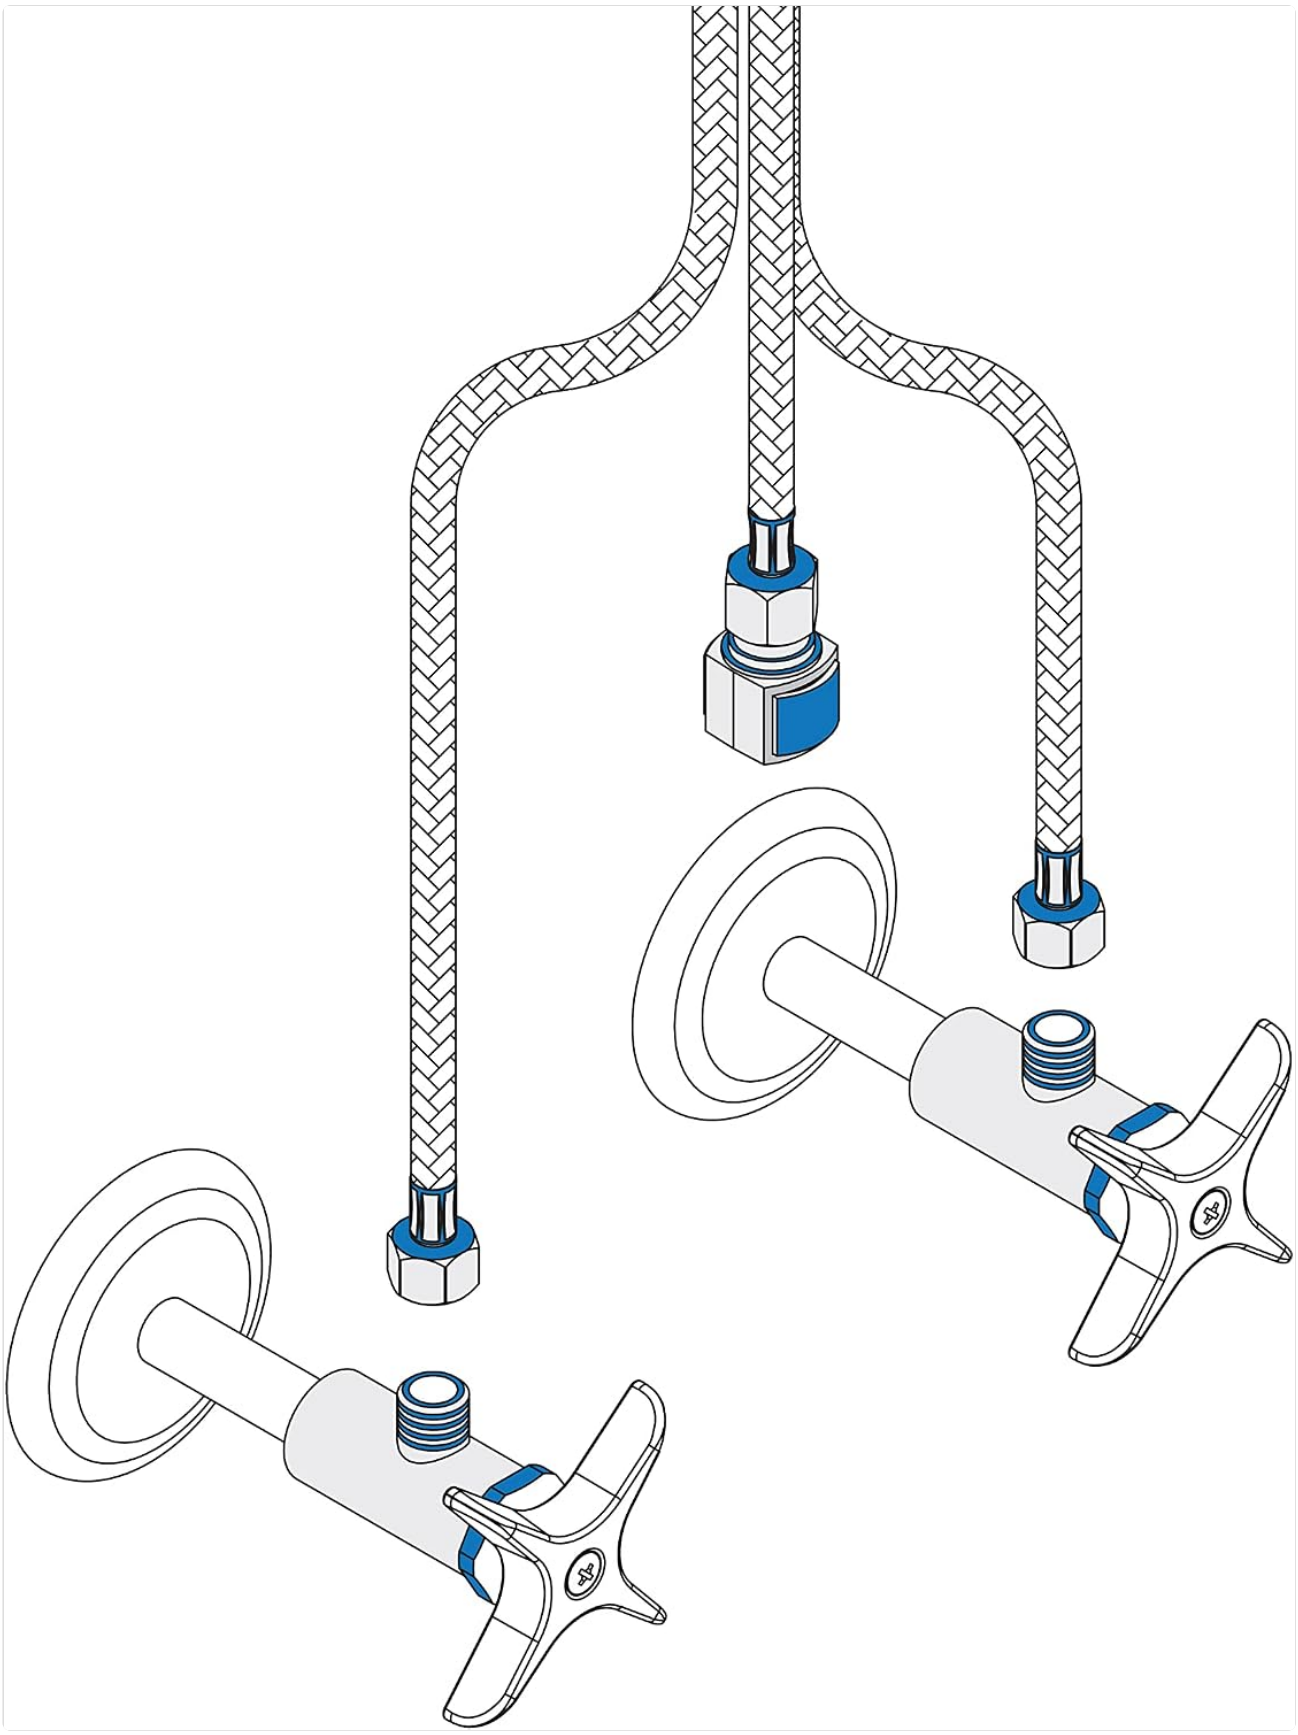

This illustration shows the flexible supply lines and how they connect to the hot and cold water shut-off valves under the sink.

4. **Install Sprayer Hose Weight:** Attach the sprayer hose weight to the pull-down hose under the sink. This weight helps the sprayer retract smoothly back into the faucet spout. Position it approximately 6-8 inches from the bottom of the sprayer head when the sprayer is docked.
5. **Test for Leaks:** Once all connections are made, slowly turn on the hot and cold water supply valves. Check all connections for any signs of leaks. Run the faucet for a few minutes to flush out any debris and check for proper operation of the handle and sprayer.

Operating Instructions

Water Flow and Temperature Control

The Olympia K-5025-BN faucet features a single lever handle for easy control of both water flow and temperature. Move the handle up to increase water flow and down to decrease or turn off. Pivot the handle left for hot water and right for cold water.

Pull-Down Sprayer Function

The pull-down sprayer head offers enhanced flexibility and reach. Simply pull the sprayer head down from the spout. It features two spray patterns: a steady stream for filling pots and a powerful spray for rinsing. Press the button on the sprayer head to switch between these patterns. The sprayer head swivels 360 degrees for full sink coverage and retracts smoothly when released.


Maintenance

Cleaning the Faucet

To maintain the finish of your faucet, clean it regularly with a soft cloth and mild soap. Rinse thoroughly with water and dry with a soft cloth. Avoid using abrasive cleaners, harsh chemicals, or scouring pads, as these can damage the finish.

Cartridge Information

This faucet is equipped with a durable ceramic disc cartridge, designed for long-lasting, drip-free performance. If you experience issues with water flow or temperature control, the cartridge may need inspection or replacement. Consult a professional plumber for cartridge servicing.

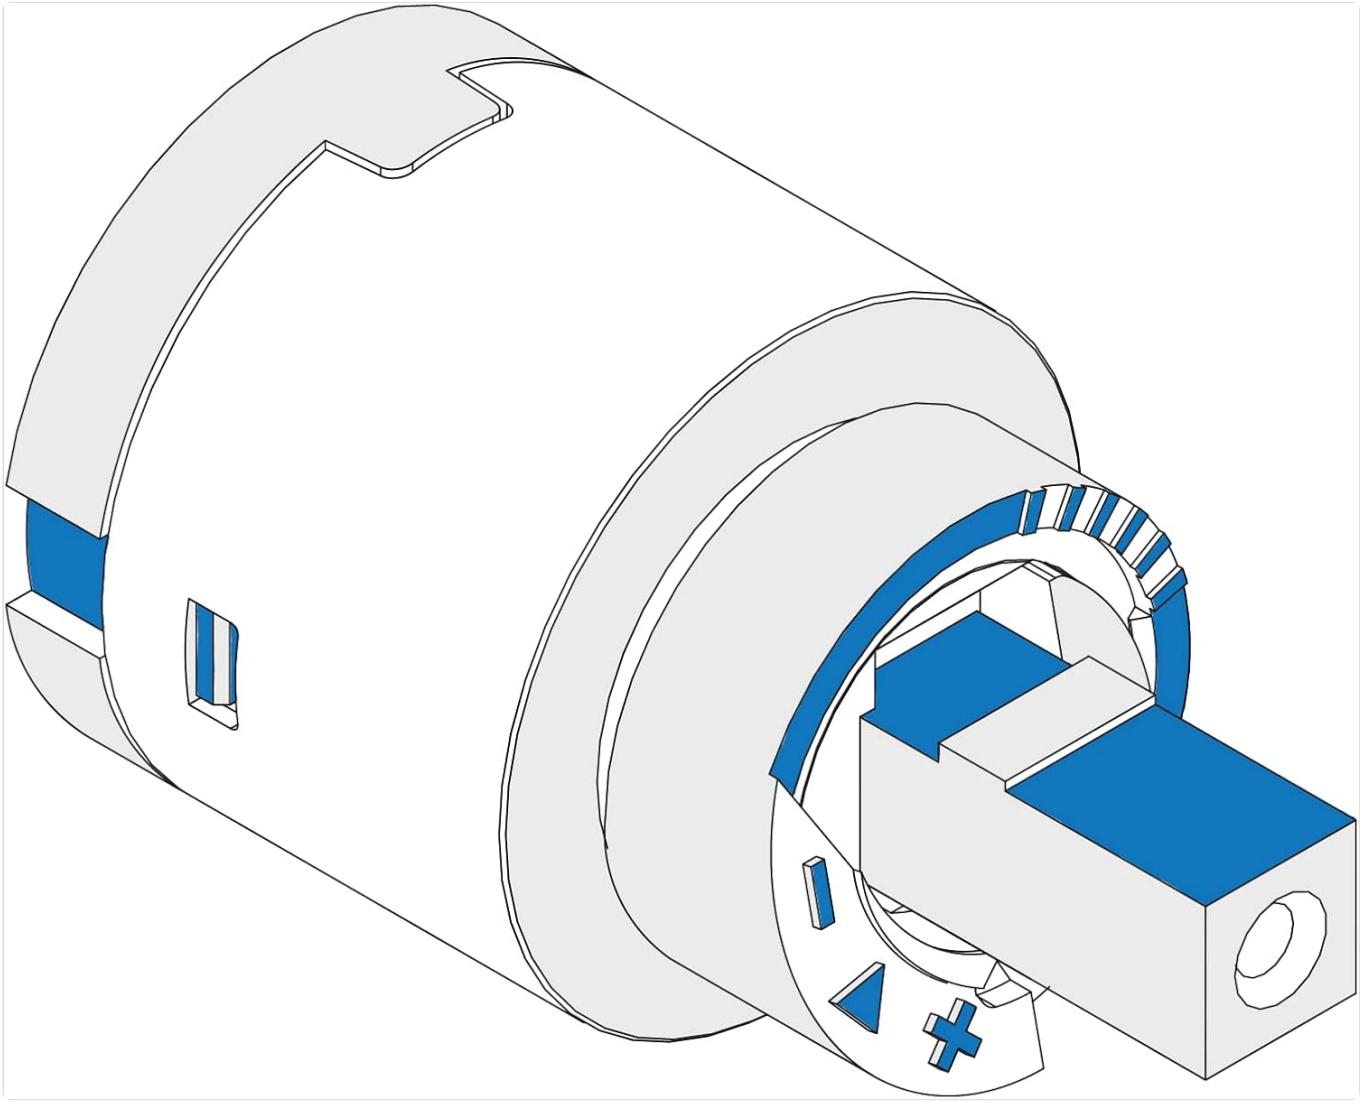

This image displays the internal ceramic disc cartridge, a key component for smooth and drip-free operation of the faucet.


Troubleshooting

Problem	Possible Cause	Solution
Low Water Flow	Aerator clogged, supply lines kinked, or water supply partially closed.	Clean or replace aerator. Check supply lines for kinks. Ensure water supply valves are fully open.
Faucet Leaks	Loose connections, damaged O-rings, or faulty cartridge.	Tighten connections. Inspect and replace O-rings if worn. Consider replacing the ceramic disc cartridge.
Sprayer Does Not Retract Fully	Hose weight improperly positioned or obstruction under the sink.	Adjust the position of the hose weight. Clear any obstructions preventing the hose from moving freely.
Water Temperature Issues	Hot/cold supply lines reversed or cartridge issue.	Verify supply line connections. If problem persists, the cartridge may need inspection.

Specifications

- **Brand:** Olympia
- **Model Number:** K-5025-BN

- **Style:** I2
- **Material:** Metal
- **Finish Type:** Brushed Nickel
- **Mounting Type:** Deck Mount
- **Number of Handles:** 1
- **Hole Count:** 1 or 3-Hole 8" Installation
- **Special Feature:** Pull Down Sprayer with 2 Spray Patterns
- **Maximum Flow Rate:** 1.5 Gallons Per Minute (GPM)
- **Reach:** 7-5/8 inches
- **Height (Deck to Aerator):** 8-3/4 inches
- **Item Weight:** 6.1 Pounds
- **Included Components:** Handle, Sprayer
- **UPC:** 763439858795

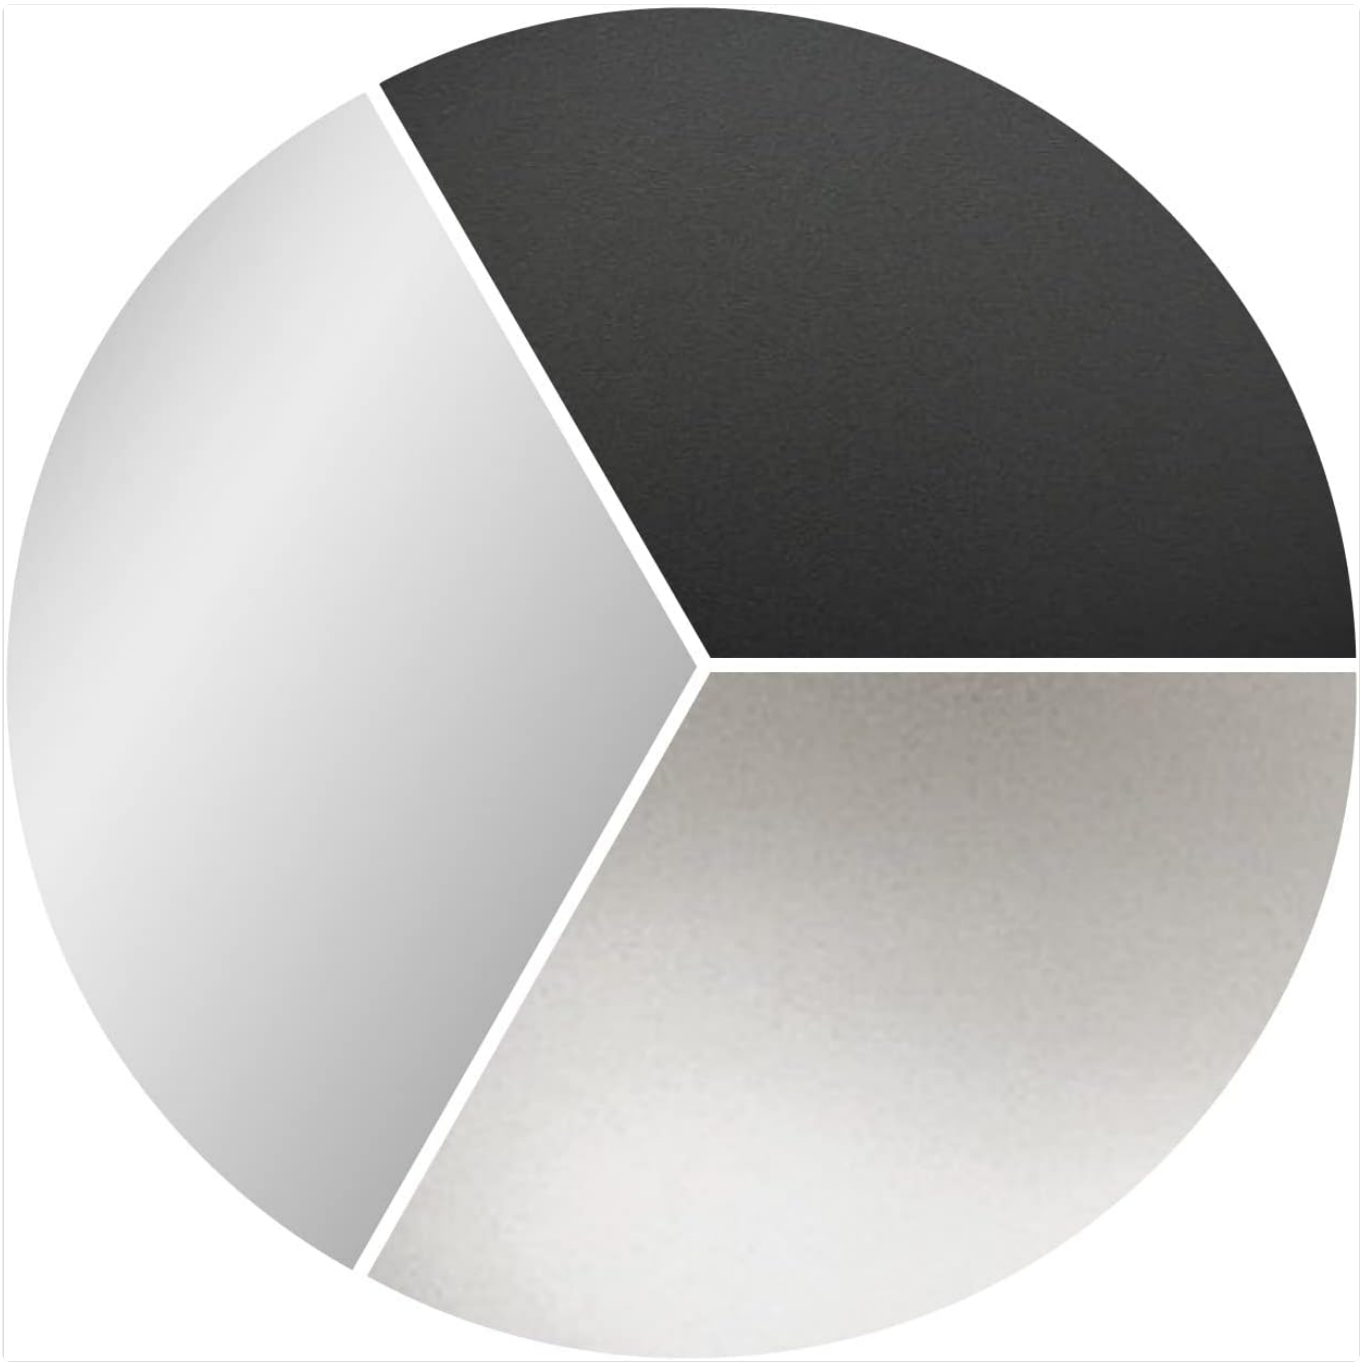

This graphic represents the available finish options for the I2 faucet series, including Brushed Nickel, Matte Black, and Polished Chrome.

Warranty Information

Olympia products are manufactured to high-quality standards and are backed by a manufacturer's warranty. For specific details regarding your product's warranty coverage, please refer to the warranty card included with your purchase or visit the official Olympia website. Keep your proof of purchase for warranty claims.

Customer Support

If you have any questions, require technical assistance, or need replacement parts, please contact Olympia customer support. Contact information can typically be found on the product packaging or the official Olympia website. Please have your model number (K-5025-BN) and purchase date ready when contacting support.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07NYZGY7P

More documents and user manuals: **https://manuals.plus/**