Manuals+
Q & A | Deep Search | Upload

One For All URC4811

One For All URC4811 Universal Replacement Learning Remote Control for LG Televisions

Instruction Manual

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your One For All URC4811 Universal Replacement Learning Remote Control. This remote is designed to be compatible with all LG Televisions, including LCD, LED, OLED, and Plasma models, offering a seamless replacement for your original LG remote.

2. Product Overview

The One For All URC4811 remote control is engineered for ease of use and broad compatibility with LG televisions. Key features include:

- **Direct Compatibility:** Functions like your original LG television remote. For most LG TVs, no setup is required; simply insert batteries and it is ready to use.
- **Learning Feature:** Allows customization of the remote to your specific needs by copying functions from your original remote.
- **App Shortcut Keys:** Provides direct access to your favorite streaming services.
- **Number of Keys:** 50.
- **Remote Control Technology:** Infrared (IR).

Product Images

Figure 1: Front view of the One For All URC4811 remote control, showcasing its button layout and ergonomic design.

Figure 2: Side view of the One For All URC4811 remote control, highlighting its slim profile.

Figure 3: Back view of the One For All URC4811 remote control, showing the battery compartment cover.

Figure 4: Back view of the One For All URC4811 remote control with the battery compartment open, revealing the slots for AAA batteries.

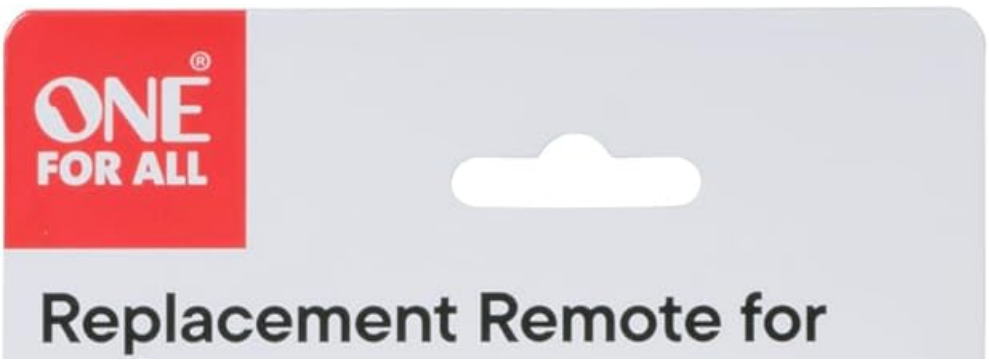

Figure 5: Front of the retail packaging for the One For All URC4811 remote control, displaying product features and

compatibility.

Figure 6: Back of the retail packaging for the One For All URC4811 remote control, providing additional product information and setup details.

3. Setup

3.1. Battery Installation

The remote requires 2 AAA batteries (not included). To install the batteries:

1. Remove the battery compartment cover located on the back of the remote.
2. Insert 2 AAA batteries, ensuring correct polarity (+ and - terminals).
3. Replace the battery compartment cover until it clicks securely into place.

3.2. Initial Pairing / Codeless Setup

For most LG Televisions, the One For All URC4811 remote control is ready to use immediately after battery installation, requiring no additional setup. Simply point the remote at your LG TV and begin using it. If your TV does not respond, refer to the 'Learning Feature' section for advanced setup options.

4. Operating Instructions

4.1. Basic Functions

The remote provides all standard functions of an LG TV remote, including:

- **Power On/Off:** Use the dedicated power button to turn your TV on or off.
- **Volume Control:** Adjust volume up or down using the +/- buttons.
- **Channel Navigation:** Change channels using the CH +/- buttons or direct number input.
- **App Shortcuts:** Dedicated buttons provide quick access to popular streaming services.

4.2. Learning Feature

The learning feature allows you to copy specific functions from your original LG remote control to your One For All URC4811 remote. This is useful if a particular function is not pre-programmed or if you prefer a custom button layout. Refer to the Quick Setup Guide included with your remote for detailed steps on using the learning feature.

4.3. Official Product Video

Your browser does not support the video tag.

Video 1: This video provides a tutorial on setting up the One For All Smart Control 8, demonstrating the general setup process for One For All universal remotes. While not specific to the URC4811 model, it illustrates the brand's approach to remote control configuration.

5. Maintenance

To ensure the longevity and optimal performance of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** Replace batteries when the remote's performance degrades. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. Troubleshooting

If you encounter issues with your remote control, try the following steps:

- **Remote Not Responding:** Check if the batteries are correctly inserted and have sufficient charge. Replace them if necessary.
- **Line of Sight:** Ensure there are no obstructions between the remote and the TV's IR receiver.
- **Specific Functions Not Working:** Use the learning feature to re-program the affected buttons from your original LG remote.
- **TV Not Responding After Battery Change:** For some LG models, the remote may require re-pairing or a quick setup process after battery replacement. Refer to the Quick Setup Guide.

7. Specifications

Feature	Specification
Product Dimensions	8.03 x 2.01 x 0.94 inches
Item Weight	2.72 ounces
Item Model Number	URC4811
Batteries Required	2 AAA batteries (not included)
Brand	One For All
Special Feature	Universal, Learning Function
Color	Black
Max Number of Supported Devices	1 (specifically for LG TVs)
Compatible Devices	LG Televisions (LCD, LED, OLED, Plasma)

8. Warranty and Support

For warranty information and technical support, please refer to the documentation included with your product or visit the official One For All website. Keep your purchase receipt as proof of purchase for any warranty claims.