Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BC02XW

Braun Classic Travel Analogue Alarm Clock BC02XW User Manual

Model: BC02XW

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Braun Classic Travel Analogue Alarm Clock, Model BC02XW. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your device.




Front view of the Braun Classic Travel Analogue Alarm Clock, Model BC02XW, showcasing its minimalist design with a white dial, black hands, and a yellow second hand.

Setup

Battery Installation

1. Locate the battery compartment cover on the back of the alarm clock.
2. Gently slide or lift the cover to open the compartment.
3. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment. **Note: Battery is not included.**
4. Replace the battery compartment cover, ensuring it is securely closed.

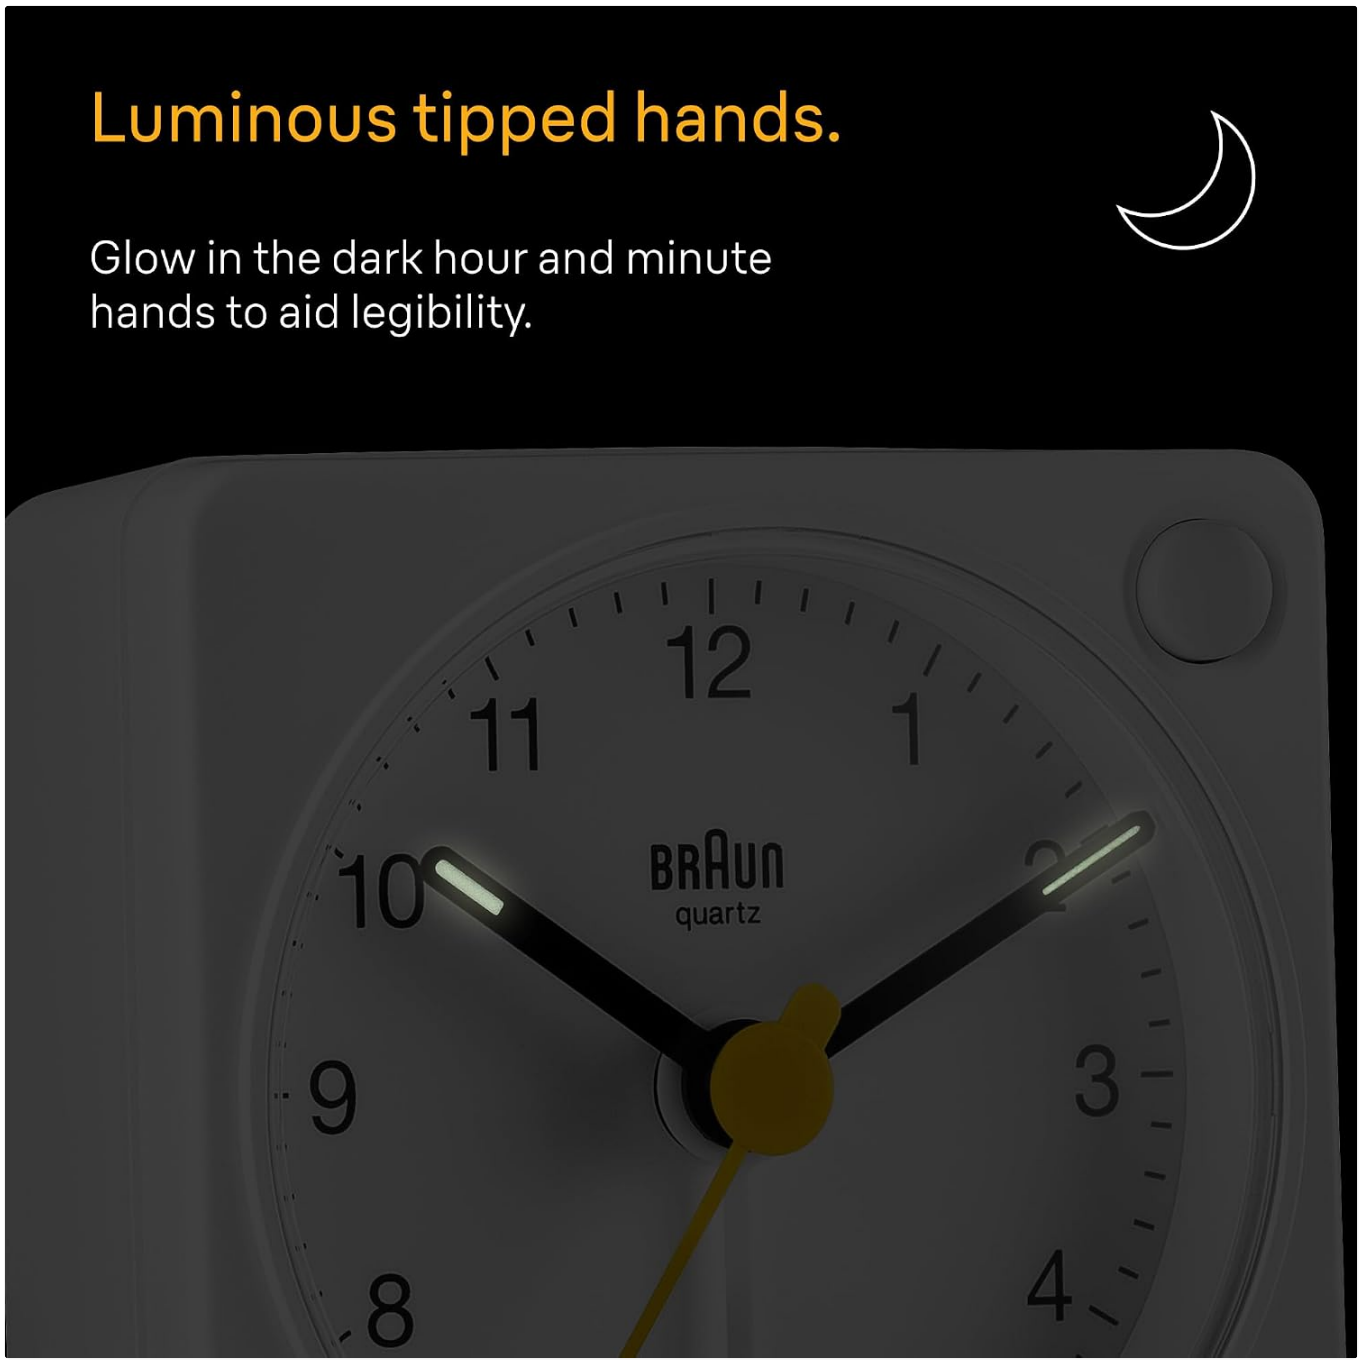

Rear view of the alarm clock, illustrating the battery compartment and setting dials.

Operating Instructions

Setting the Time

1. Locate the time setting dial on the back of the clock. This is typically the larger dial.
2. Rotate the dial clockwise or counter-clockwise to adjust the hour and minute hands to the current time.

Setting the Alarm

1. Locate the alarm setting dial on the back of the clock. This is typically the smaller dial.
2. Rotate the dial to move the alarm hand to your desired wake-up time.

Activating and Deactivating the Alarm


- To activate the alarm, slide the alarm switch (located on the top or side of the clock) to the 'ON' position. A visual indicator (e.g., a green bar) may appear.

- To deactivate the alarm, slide the alarm switch to the 'OFF' position.

Snooze and Light Function

- When the alarm sounds, press the large button on the top of the clock to activate the snooze function. The alarm will pause for approximately 5 minutes before sounding again.
- Press the same top button to activate the backlight. The light will illuminate for approximately 5 seconds to allow for time viewing in low-light conditions.



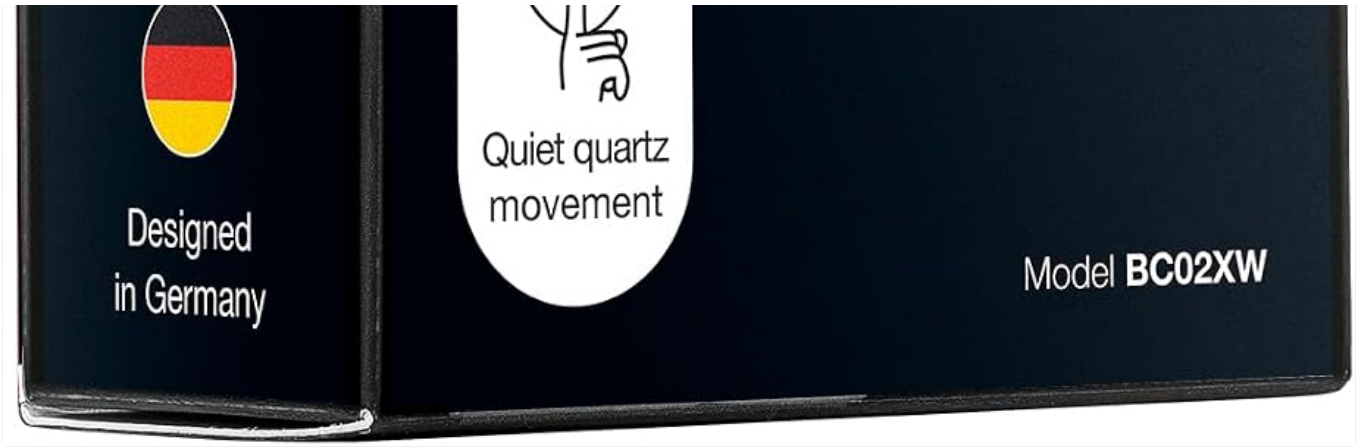

The alarm clock displaying the integrated snooze and light function, indicated by the illuminated dial and the 'Zzz' icon.

Crescendo Beep Alarm

The alarm features a crescendo beep, meaning the alarm sound will gradually increase in frequency and volume if not turned off, ensuring a gentle yet effective wake-up.



Close-up of the alarm clock, highlighting the crescendo beep alarm feature with musical note icons.

Features

Quiet Precision Quartz Movement

The clock is equipped with a high-quality quartz movement that operates silently, eliminating distracting ticking sounds for a peaceful environment.



The alarm clock face, emphasizing the quiet precision quartz movement with an icon representing silence.

Luminous Tipped Hands

The hour and minute hands feature luminous tips, allowing for improved legibility in low-light conditions after exposure to light.



Quiet precision quartz movement.

The alarm clock in a darkened setting, showing the luminous tips of the hour and minute hands for night visibility.

Compact Travel Size

With dimensions of approximately 5.7cm x 5.7cm x 2.7cm (W x H x D), this alarm clock is designed to be compact and portable, making it ideal for travel.



The alarm clock resting in a hand, demonstrating its compact and travel-friendly size.

Maintenance

- **Cleaning:** Wipe the clock with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Battery Replacement:** Replace the AA battery annually or when the clock's performance diminishes (e.g., dim light, weak alarm).
- **Storage:** If storing the clock for an extended period, remove the battery to prevent leakage.

Troubleshooting

- **Clock not running:** Ensure the AA battery is inserted correctly with the correct polarity and is not depleted. Replace the battery if necessary.
- **Alarm not sounding:** Verify that the alarm is set to the desired time and the alarm switch is in the 'ON' position. Check battery level.
- **Light not working:** Ensure the battery has sufficient power. The light function is momentary and will only stay on for 5 seconds per press.
- **Difficulty setting time/alarm:** The setting dials may require firm but gentle rotation. If they feel excessively stiff, ensure no debris is obstructing them.

Specifications

- **Model:** BC02XW
- **Dimensions:** 2.24 x 1.5 x 2.24 inches (5.7cm x 3.8cm x 5.7cm)
- **Weight:** 2.07 ounces (58.7 grams)

- **Power Source:** 1 x AA Battery (not included)
- **Movement:** Quiet Precision Quartz
- **Material:** Plastic
- **Features:** Crescendo Beep Alarm, Snooze Function (5 min), Integrated Backlight (5 sec), Luminous Tipped Hands

Warranty and Support

For warranty information or technical support, please refer to the official Braun website or contact your local Braun customer service representative. Keep your purchase receipt as proof of purchase.
For additional resources, you may consult the official Braun website:Braun Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07P2FZ71P

More documents and user manuals: **https://manuals.plus/**