Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

eufy AK-T2115J81

eufy by Anker BoostIQ RoboVac 15T User Manual

Model: AK-T2115J81 | Brand: eufy

Introduction

The eufy BoostIQ RoboVac 15T is a super-thin, powerful robotic vacuum cleaner designed to provide an effortless and thorough clean for your home. With its 1500Pa strong suction, it effectively removes dirt, dust, and crumbs from hard floors and medium-pile carpets. The RoboVac 15T features BoostIQ technology, which automatically increases suction power when needed, and a touch-control panel for easy operation. Its quiet operation ensures minimal disturbance while cleaning.
This manual provides detailed instructions on setting up, operating, maintaining, and troubleshooting your RoboVac 15T to ensure optimal performance and longevity.

Setup Guide

Before using your RoboVac 15T, please follow these steps to ensure proper setup and functionality.

1. **Unpack the Device:** Carefully remove all components from the packaging. Verify that all items listed in the "What You Get" section are present.
2. **Install Side Brushes:** Attach the two side brushes to the bottom of the RoboVac by pressing them onto the posts until they click into place.
3. **Place the Charging Base:** Position the charging base on a hard, level surface against a wall. Ensure there is at least 3 feet (1 meter) of clear space to the front and 1 foot (0.3 meters) to each side of the charging base. Connect the AC power adapter to the charging base and plug it into a wall outlet.
4. **Initial Charge:** Place the RoboVac onto the charging base, ensuring the charging pins align. The indicator lights on the RoboVac will illuminate to show it is charging. For first-time use, fully charge the RoboVac for at least 5-6 hours.
5. **Prepare the Cleaning Area:** Remove any obstacles such as power cords, small objects, or loose rugs that could entangle the RoboVac. Use the provided cable ties to organize wires and power cords.



Image: The eufy BoostIQ RoboVac 15T, showcasing its sleek, dark brown design and touch-control panel. This is the main unit of the robotic vacuum cleaner.

Operating Instructions

The RoboVac 15T offers various cleaning modes and features to optimize your cleaning experience.

- **Starting a Clean:** Press the "Clean" button on the RoboVac's touch-control panel or on the remote control to start

an automatic cleaning cycle. The RoboVac will intelligently navigate your home.

- **BoostIQ Technology:** The RoboVac 15T is equipped with BoostIQ technology, which automatically increases suction power within 1.5 seconds when it detects a need for stronger cleaning, such as transitioning from hard floors to carpets. This ensures efficient cleaning across different surfaces.
- **Cleaning Modes:** Use the remote control to select specific cleaning modes:
  - **Auto Clean:** The default mode, where RoboVac cleans automatically until battery is low.
  - **Spot Clean:** Focuses on a specific area for concentrated cleaning.
  - **Edge Clean:** Cleans along walls and furniture edges.
  - **Single Room Clean:** Cleans one room thoroughly before returning to the charging base.
- **Quiet Operation:** The RoboVac 15T operates at a low noise level, comparable to a microwave, allowing for cleaning without significant disturbance.
- **Returning to Charging Base:** Press the "Home" button on the remote control or the RoboVac to send it back to the charging base. It will automatically return when its battery is low.



Image: A hand gently touching the control panel of the eufy RoboVac 15T, illustrating its easy-to-use touch interface for starting cleaning cycles.



Image: The eufy RoboVac 15T cleaning a wooden floor while a person relaxes on a bed and a dog sleeps nearby, emphasizing its quiet operation.

Your browser does not support the video tag.

Video: An official eufy video demonstrating the BoostIQ RoboVac 15T in action, highlighting its cleaning capabilities and features.

Maintenance

Regular maintenance is crucial for the optimal performance and longevity of your RoboVac 15T.

- **Emptying the Dustbin:** The RoboVac 15T features a large 0.6L dustbin. After each cleaning cycle, or when the dustbin is full, press the release button to remove the dustbin and empty its contents.
- **Cleaning the Dustbin and Filter:** Rinse the dustbin with water as needed. The triple-layer high-performance filter should be tapped clean after each use and washed periodically. Allow all parts to air dry completely before reassembling.
- **Cleaning the Rolling Brush:** Periodically remove the rolling brush and use the provided cleaning tool to remove any hair or debris wrapped around it.
- **Cleaning Side Brushes:** Check the side brushes regularly for tangled hair or debris. Remove and clean them as necessary. Replace worn-out side brushes with new ones from the extra set provided.
- **Cleaning Sensors and Charging Pins:** Use a dry cloth to wipe the drop sensors, charging pins, and charging contacts on both the RoboVac and the charging base.

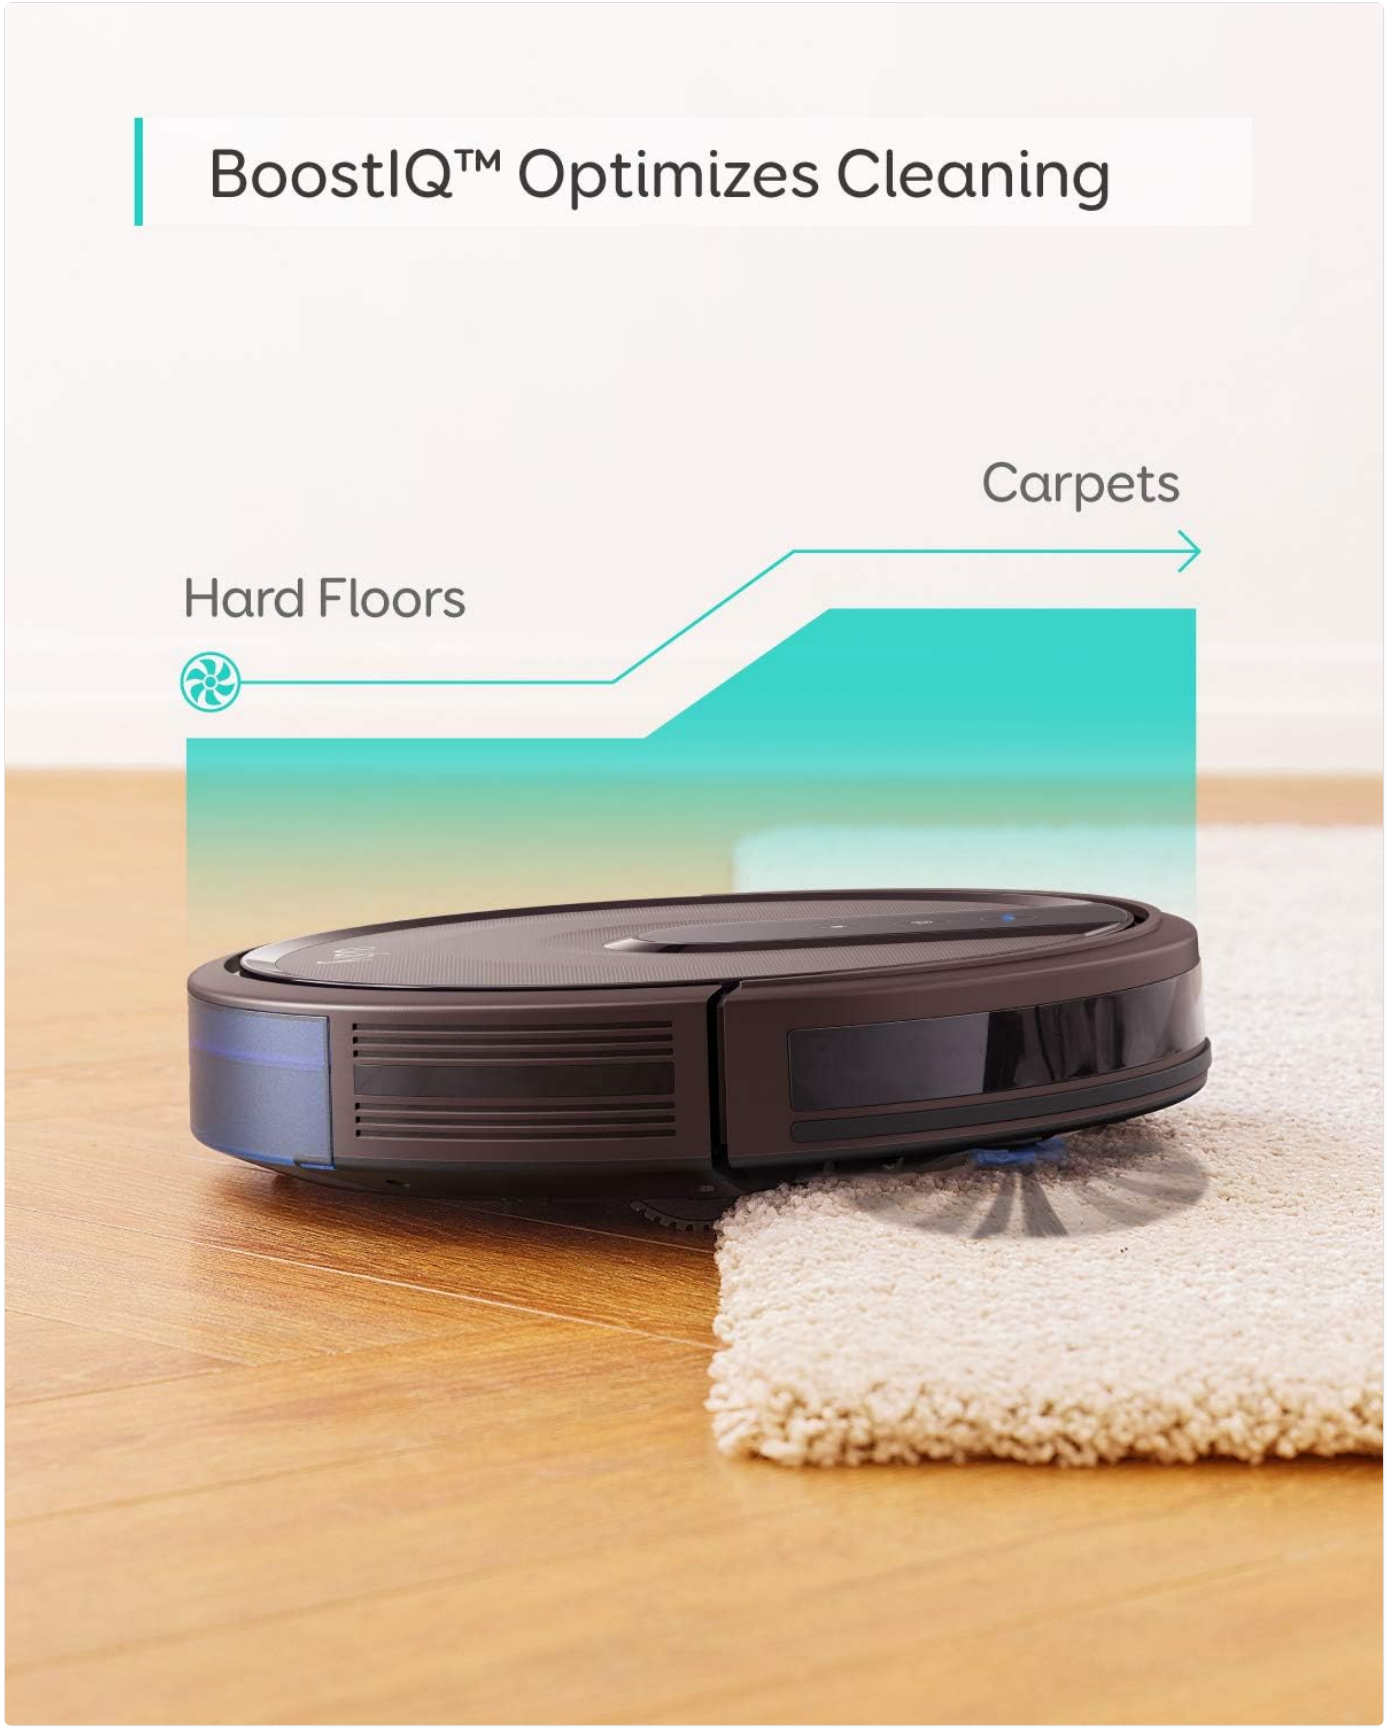


Image: A hand holding the open dustbox of the eufy RoboVac 15T under running water in a sink, demonstrating its easy-to-clean design.

Troubleshooting

If you encounter issues with your RoboVac 15T, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
RoboVac does not turn on or charge.	Battery is depleted; charging pins are not connected; power adapter not plugged in.	Ensure RoboVac is properly seated on the charging base. Check power connections. Allow sufficient time for initial charge.
RoboVac gets stuck frequently.	Cables or small objects on the floor; low-hanging furniture.	Clear the cleaning area of obstacles. Use cable ties. Consider raising furniture if possible.
Side brushes fall off or get tangled.	Debris wrapped around brushes; brushes are worn.	Clean brushes regularly. Replace brushes if they are damaged or excessively worn.
Reduced suction power or poor cleaning.	Full dustbin; clogged filter; tangled rolling brush.	Empty dustbin. Clean or replace filter. Clean rolling brush.
RoboVac does not return to charging base.	Charging base obstructed; RoboVac too far from base.	Ensure charging base has clear space. Manually place RoboVac near the base.

Specifications

Key technical specifications for the eufy BoostIQ RoboVac 15T:

- **Brand:** eufy
- **Model Name:** eufy [BoostIQ] RoboVac 15T
- **Model Number:** AK-T2115J81
- **Color:** Brown
- **Suction Power:** Up to 1500Pa
- **Battery Life:** Up to 100 minutes (standard suction mode on hardwood floors)
- **Dustbin Capacity:** 0.6 Liters (0.2 Gallons)
- **Filter Type:** Disk (Triple-layer high-performance filter)
- **Dimensions:** 12.8 x 12.8 x 2.9 inches (Ultra-slim 2.85" body height)
- **Item Weight:** 5.14 pounds
- **Control Method:** Remote Control
- **Compatible Devices:** Amazon Echo
- **Power Source:** Corded Electric (for charging base)
- **Voltage:** 14.4 Volts
- **UPC:** 848061058413

Warranty and Support

Your eufy BoostIQ RoboVac 15T comes with a worry-free 12-month warranty, ensuring peace of mind regarding your

purchase.
For further assistance, detailed instructions, or to download the full user guide, please refer to the official documentation provided with your product or visit the eufy support website.

- **Official User Manual (PDF):** Download PDF
- **eufy Store on Amazon:** Visit Store

For technical support or warranty claims, please contact eufy customer service directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07P63BMVP

More documents and user manuals: **https://manuals.plus/**