Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun BC02BLA-WHI

Braun Classic Travel Analogue Alarm Clock

Model: BC02BLA-WHI

Introduction

Thank you for choosing the Braun Classic Travel Analogue Alarm Clock. This compact and reliable alarm clock is designed for ease of use and portability, featuring a quiet quartz movement, crescendo beep alarm, and a convenient snooze/light function. Please read this manual carefully to ensure proper setup and operation of your new alarm clock.

Safety Information

- Keep the clock away from water and high humidity.
- Do not expose the clock to extreme temperatures or direct sunlight.
- Avoid dropping the clock or subjecting it to strong impacts.
- Do not attempt to disassemble or repair the clock yourself. Refer all servicing to qualified personnel.
- Dispose of used batteries responsibly according to local regulations.

Package Contents

- 1 x Braun Classic Travel Analogue Alarm Clock (Model BC02BLA-WHI)
- 1 x User Manual

Note: 1 x AA battery is required for operation and is NOT INCLUDED in the package.



Image: The Braun Classic Travel Analogue Alarm Clock shown in its retail packaging, highlighting its compact size and design.

Product Overview

Familiarize yourself with the main components of your alarm clock:

- **Front:** Analogue clock face with hour, minute, and second hands.
- **Top:** Snooze/Light button.
- **Back:** Time setting knob, alarm setting knob, alarm ON/OFF switch, battery compartment.



Image: Front view of the Braun Classic Travel Analogue Alarm Clock, displaying its white dial, black hands, and yellow second hand.

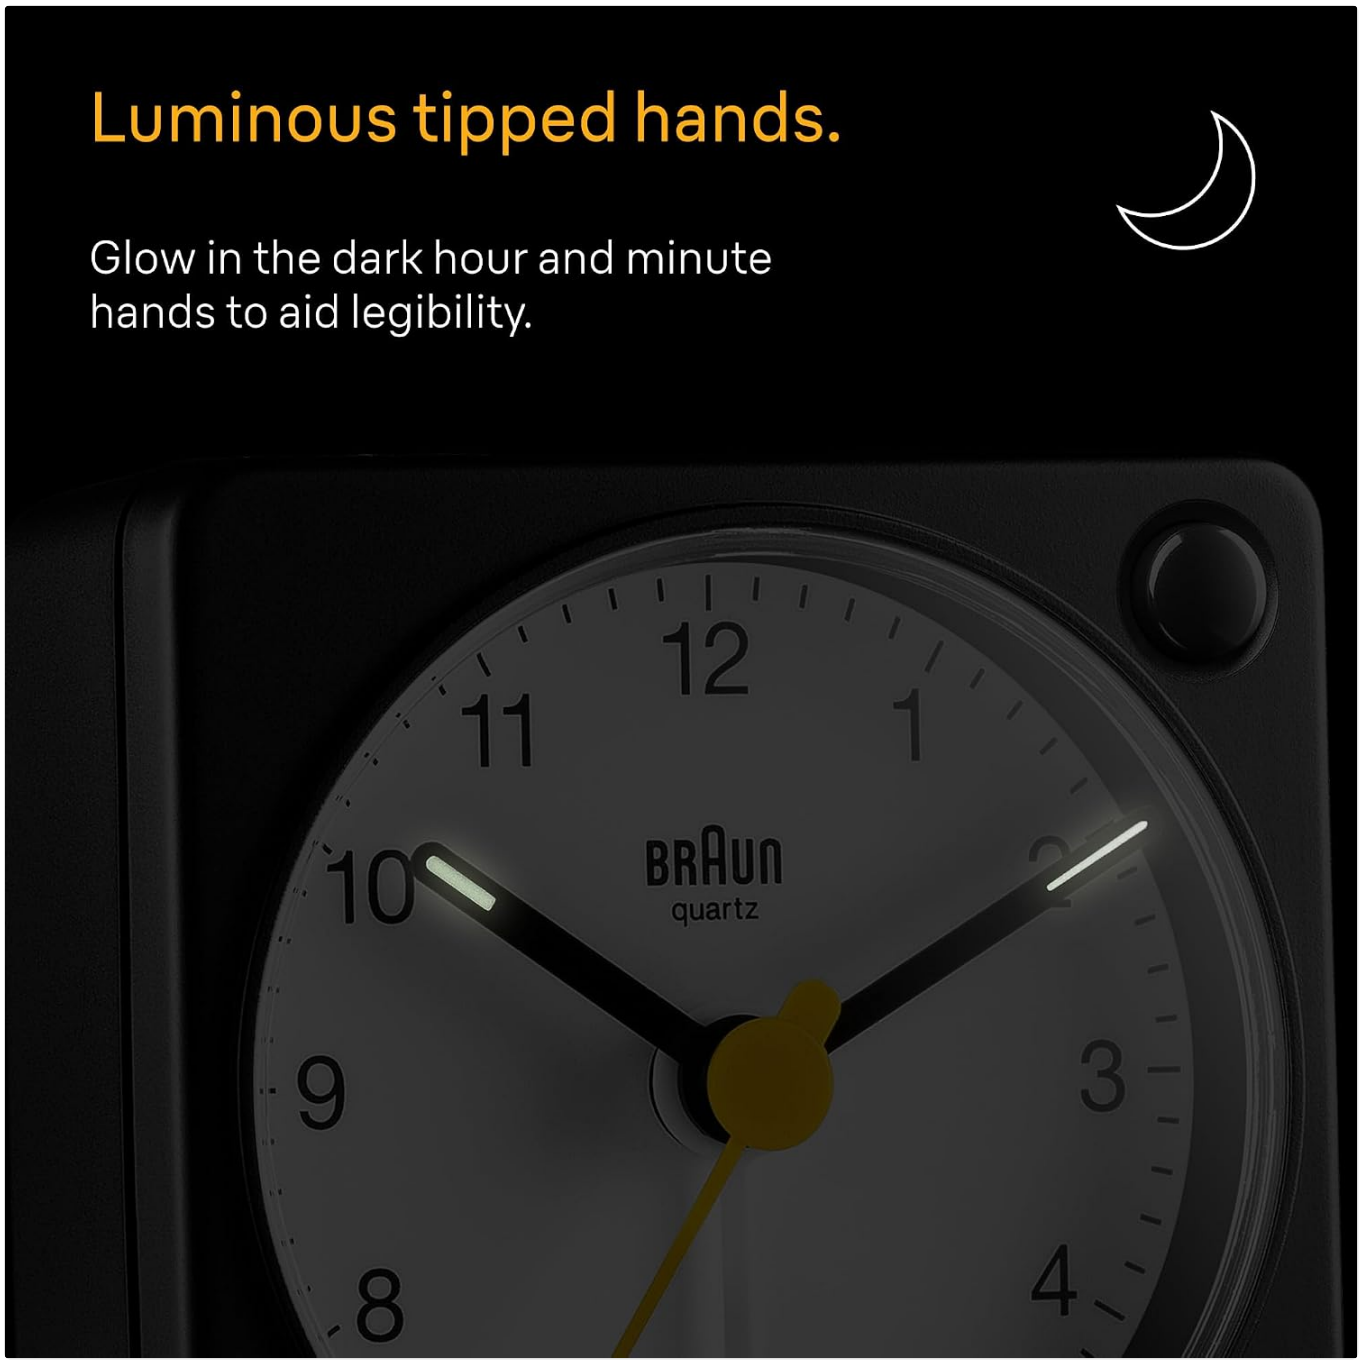


Image: Back view of the Braun Classic Travel Analogue Alarm Clock, showing the time setting knob, alarm setting knob, and alarm switch.

Setup

1. Battery Installation

1. Open the battery compartment cover on the back of the clock.
2. Insert one (1) AA battery, ensuring the polarity (+/-) matches the diagram inside the compartment.
3. Close the battery compartment cover securely.

2. Setting the Time

1. Locate the time setting knob on the back of the clock (usually marked with a clock icon).
2. Rotate the knob in the direction indicated by the arrow (clockwise) to set the current time.
3. Ensure you set the correct AM/PM time if the clock has a 12-hour display.

3. Setting the Alarm

1. Locate the alarm setting knob on the back of the clock (usually marked with a bell icon).
2. Rotate the knob in the direction indicated by the arrow (clockwise) to set your desired alarm time.
3. To activate the alarm, slide the alarm ON/OFF switch (often green) to the 'ON' position. To deactivate, slide it to the 'OFF' position.

Operating Instructions

Crescendo Beep Alarm

The alarm features a crescendo beep, meaning the beep sound will gradually increase in frequency and volume if not turned off. This ensures a gentle wake-up that becomes more insistent if you continue to sleep.

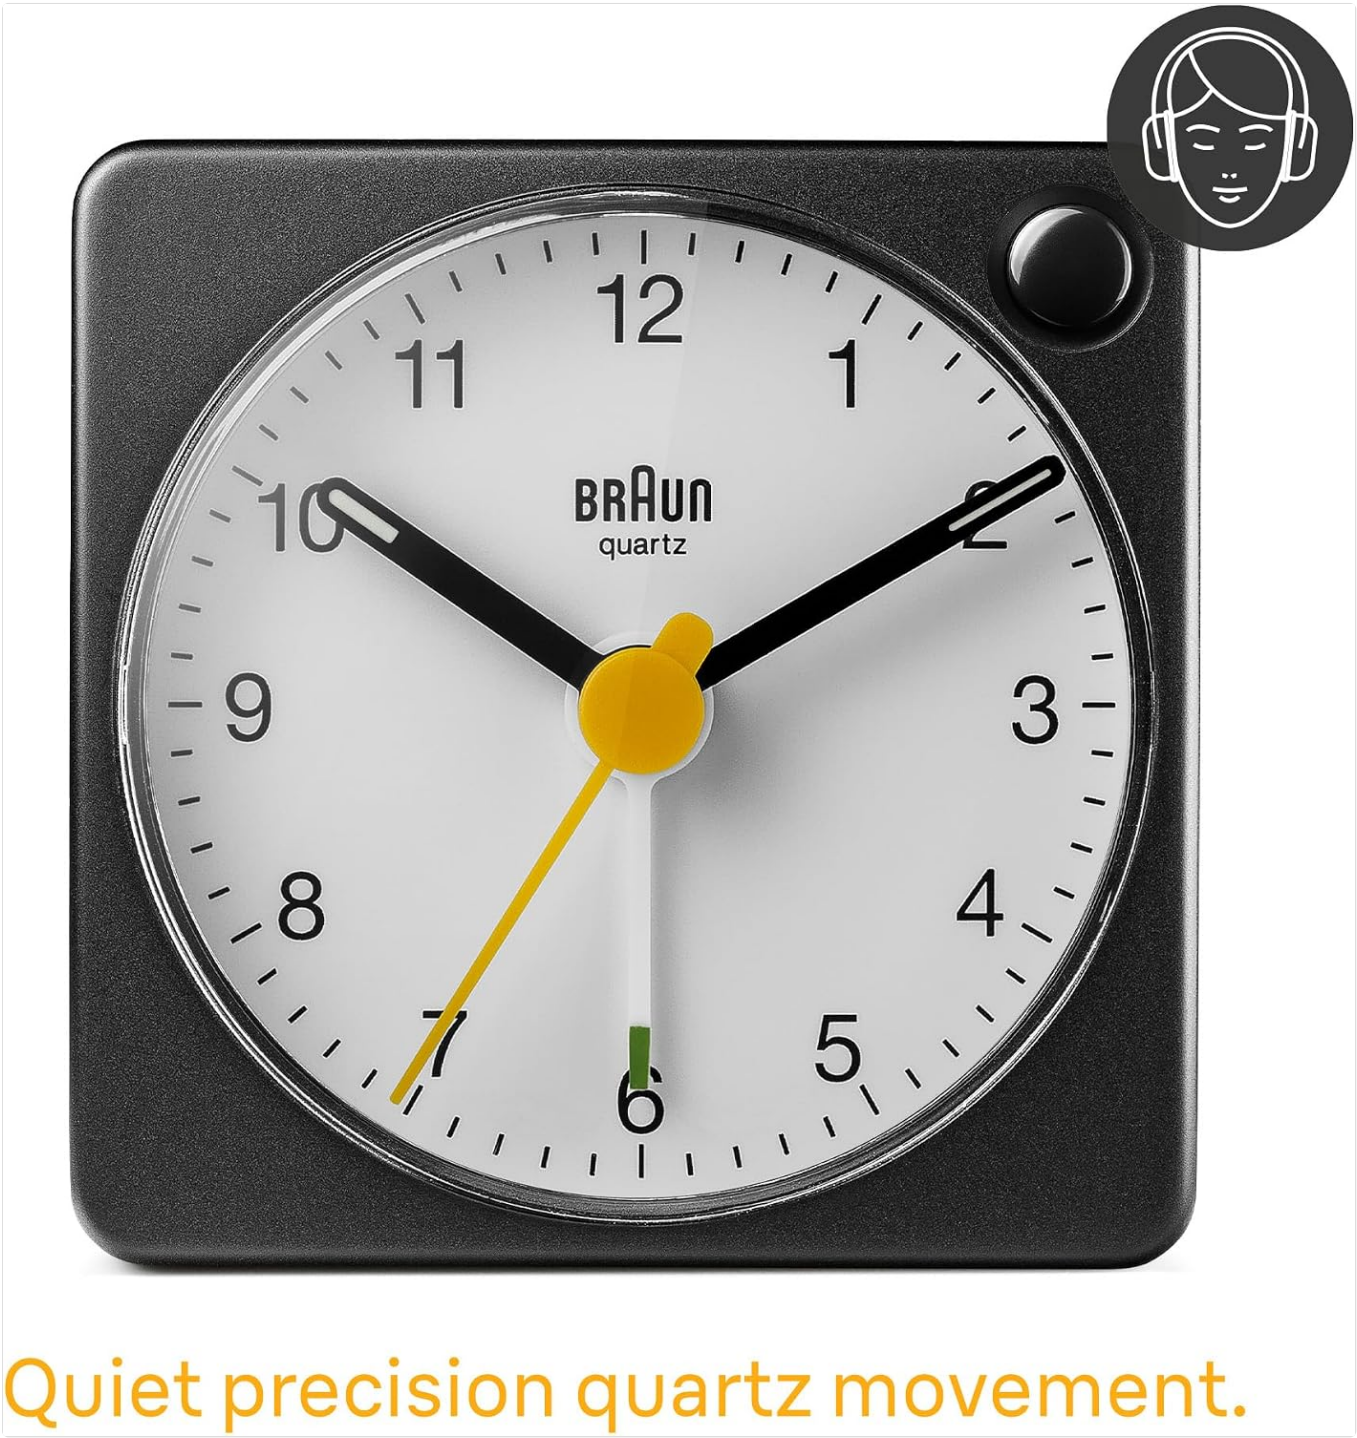


Image: Visual representation of the crescendo beep alarm, showing sound waves increasing in intensity.

Snooze / Light Function

When the alarm sounds, press the large button on the top of the clock to activate the snooze function. The alarm will pause for approximately 5 minutes and then sound again. Pressing this button also illuminates the clock face for about 5 seconds, allowing you to check the time in the dark.

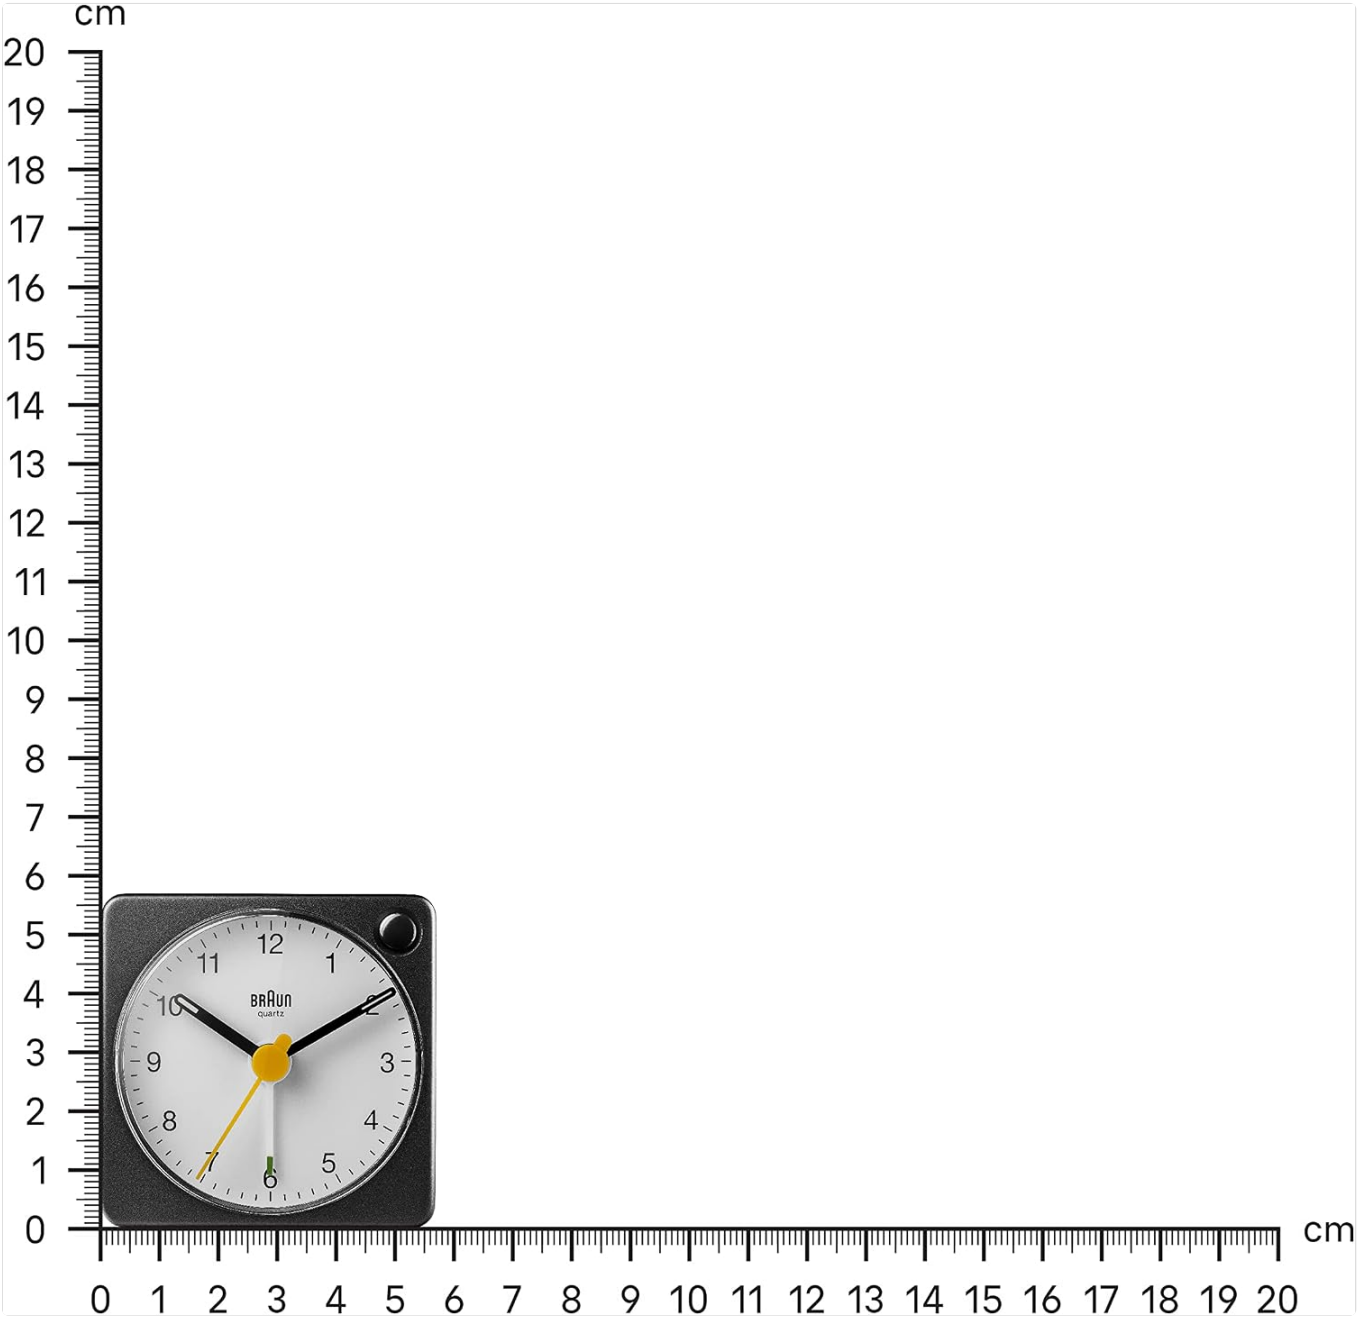


Image: Illustration showing the snooze (Zzz) and light (bulb) icons, indicating the dual function of the top button.

Luminous Tipped Hands

The hour and minute hands of the clock are tipped with luminous material. This allows them to glow in the dark after being exposed to light, aiding legibility in low-light conditions. The glow duration may vary depending on the light exposure.





Image: Close-up of the clock face in darkness, showing the luminous hour and minute hands glowing.

Maintenance

Cleaning

To clean your alarm clock, gently wipe the surface with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or internal components.

Battery Replacement

When the clock starts to lose time or the alarm becomes weak, it is time to replace the battery. Follow the battery installation steps outlined in the 'Setup' section to replace the AA battery.

Troubleshooting

Problem	Possible Cause	Solution
Clock not working / hands not moving	Battery is dead or incorrectly inserted.	Replace the battery with a new AA battery, ensuring correct polarity.
Alarm not sounding	Alarm switch is OFF; alarm time not set correctly; battery low.	Ensure alarm switch is ON. Verify alarm time setting. Replace battery.
Snooze/Light button not working	Battery is low or dead.	Replace the battery.
Clock losing time	Low battery; extreme temperature changes.	Replace the battery. Keep the clock in a stable temperature environment.

Specifications

- **Brand:** Braun
- **Model:** BC02BLA-WHI
- **Display Type:** Analog
- **Movement:** Quiet Precision Quartz Movement
- **Power Source:** 1 x AA Battery (not included)
- **Special Features:** Crescendo Beep Alarm, Snooze/Light Function, Luminous Tipped Hands
- **Product Dimensions:** 57 x 57 x 27 mm (2.24"W x 1.06"H)
- **Material:** Plastic
- **Color:** Black/White



Image: A diagram illustrating the compact dimensions of the Braun Classic Travel Analogue Alarm Clock in centimeters.

Warranty and Support

This Braun alarm clock comes with a limited warranty. For specific details regarding warranty coverage, please refer to the warranty information provided with your purchase or contact Braun customer support. For further assistance or technical support, please visit the official Braun website or contact their customer service department.
You can also find additional documentation, such as a User Guide (PDF) and User Manual (PDF), at the following links:

- User Guide (PDF)
- User Manual (PDF)

© 2024 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07SR57BFV

More documents and user manuals: **https://manuals.plus/**