Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Frigidaire AIRFRYTRAY

Frigidaire AIRFRYTRAY Ready Cook Oven Insert User Manual

Model: AIRFRYTRAY

1. Introduction

The Frigidaire AIRFRYTRAY Ready Cook Oven Insert is designed to enhance the air frying capabilities of compatible Frigidaire ovens. This accessory allows for the preparation of various air-fried foods, such as chicken wings, french fries, and tater tots, by promoting optimal air circulation within the oven. Constructed from durable stainless steel, the tray is engineered to exact specifications for reliable performance.

2. Product Overview

The AIRFRYTRAY consists of two primary components: a mesh air fry basket and a supporting oven rack. These components work together to elevate food, allowing hot air to circulate evenly for crisping results.

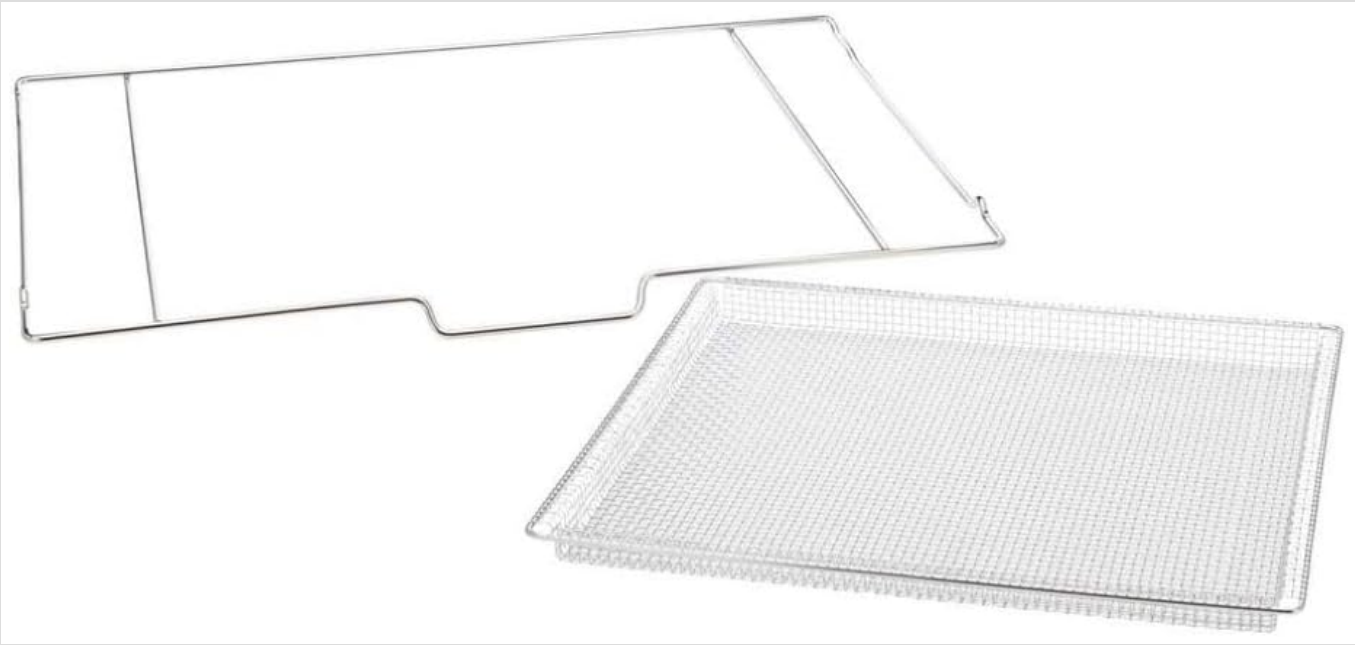

Figure 1: The mesh air fry basket and the supporting wire rack shown separately.



Figure 2: The Frigidaire Air Fry Tray fully assembled, ready for use.

The dimensions of the components are approximately: **Air Fry Basket:** 18.4 inches x 15.3 inches x 0.8 inches. **Oven Rack:** 24.1 inches x 15.3 inches.

3. Compatibility

This Frigidaire AIRFRYTRAY is designed for use with specific Frigidaire oven models. It is crucial to verify your appliance's model number to ensure proper fit and function. The tray is compatible with Frigidaire Gallery 30-inch free-standing and slide-in ranges that have 24-inch wide oven racks.

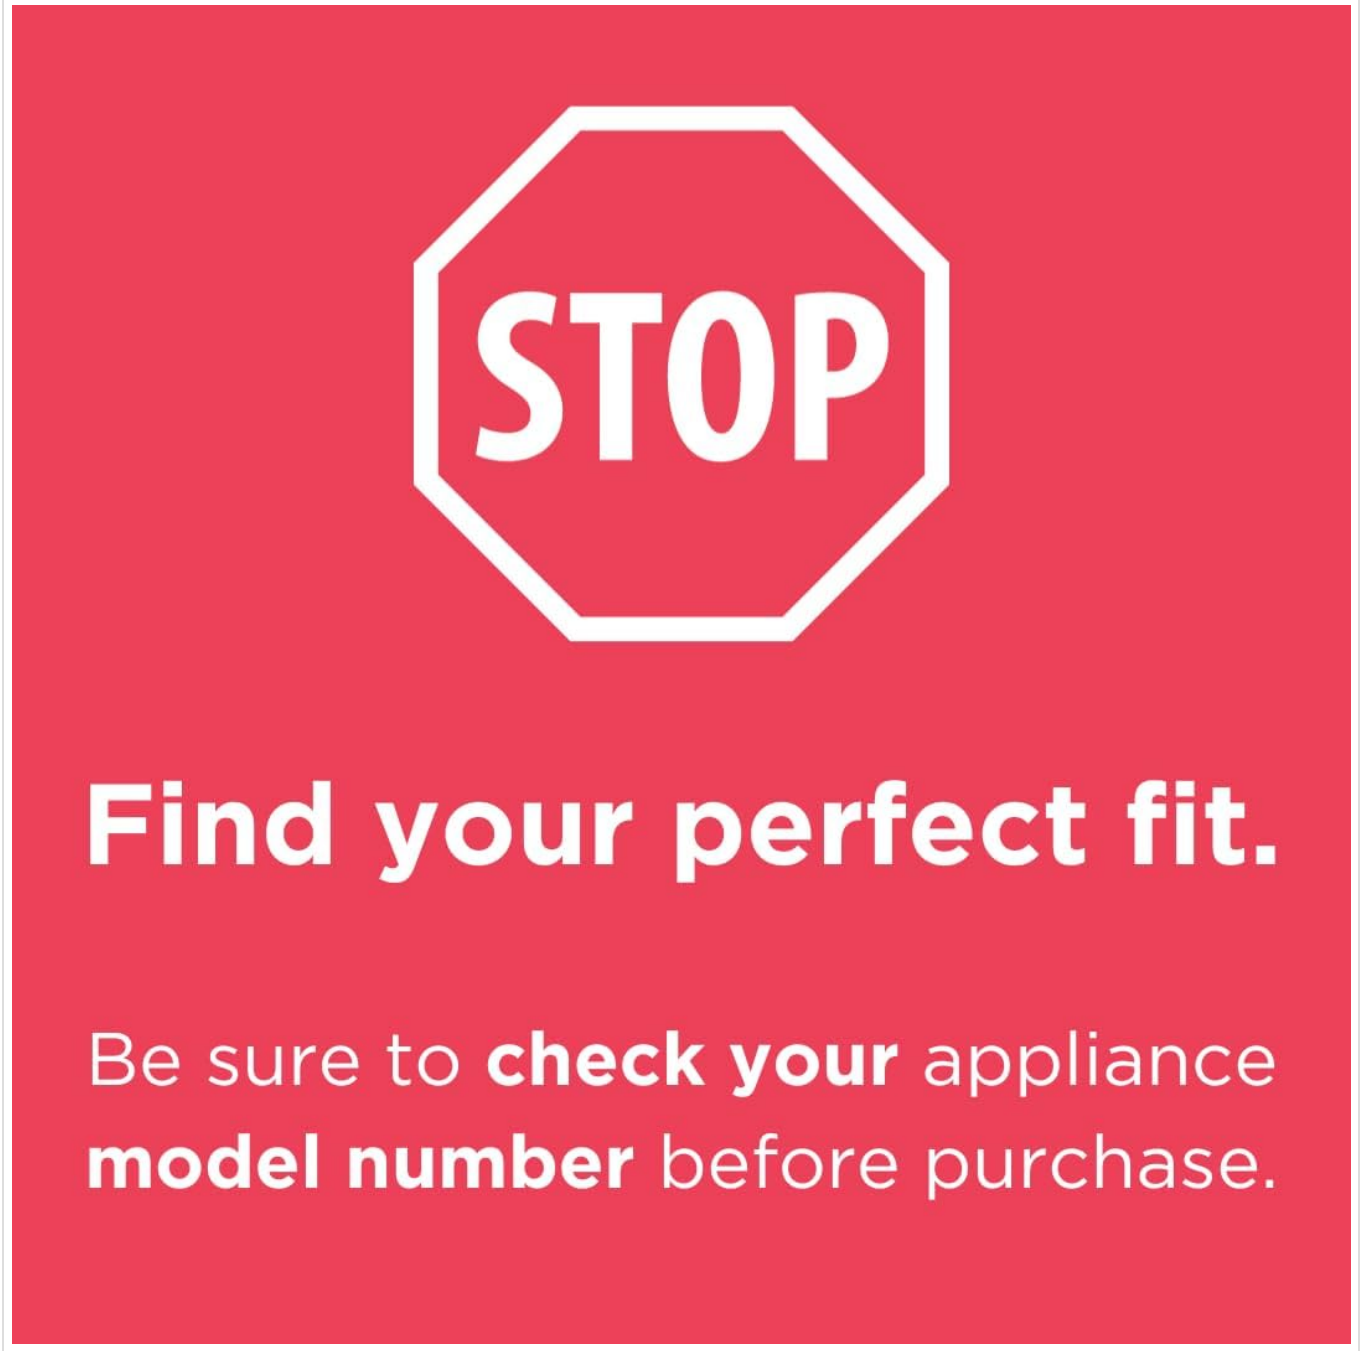

Figure 3: Important notice regarding product compatibility.

To confirm compatibility: Measure the width and depth of your oven's existing racks. The AIRFRYTRAY's oven rack measures approximately 24.1 inches wide and 15.3 inches deep. This accessory is not compatible with wall-mounted Frigidaire ovens, which require a different size and part number.

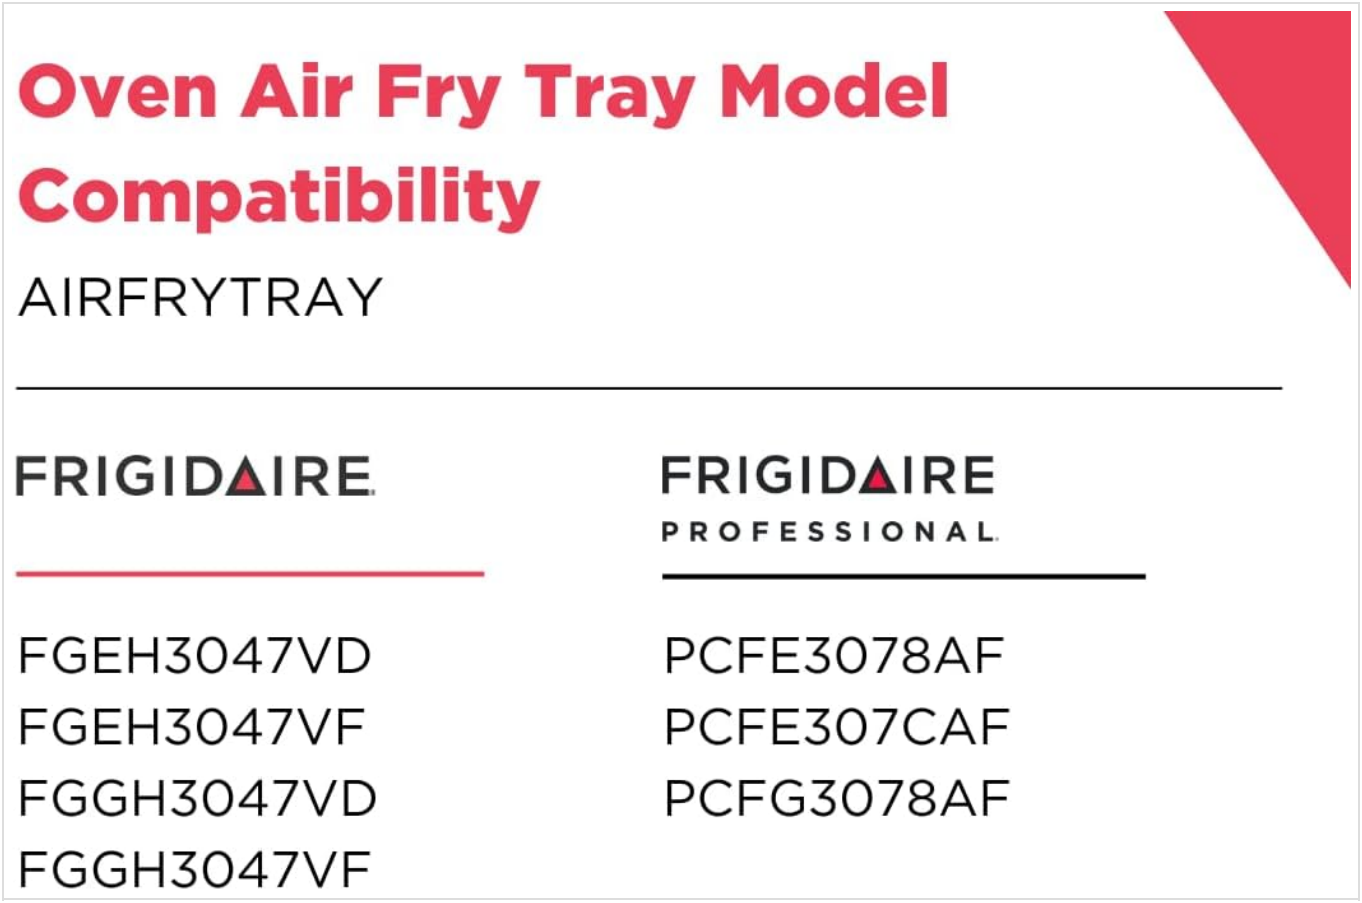

Figure 4: List of compatible Frigidaire oven models.

Compatible Models Include:

- FGEH3047VD
- FGEH3047VF
- FGGH3047VD
- FGGH3047VF
- PCFE3078AF
- PCFE307CAF
- PCFG3078AF

4. Setup

1. **Assemble the Tray:** Place the mesh air fry basket securely onto the supporting wire oven rack. Ensure it is stable and level.
2. **Prepare for Drips:** Always place a large, rimmed baking sheet or drip pan on the oven rack directly below the AIRFRYTRAY. This will catch any grease or food particles that may fall during cooking, preventing smoke and keeping your oven clean.
3. **Position in Oven:** Slide the assembled AIRFRYTRAY, with the drip pan underneath, into your oven. Refer to your oven's manual for recommended rack positions for air frying. Typically, a middle or upper-middle rack position is used for optimal air circulation.

5. Operating Instructions

The Frigidaire AIRFRYTRAY works in conjunction with your oven's air fry function. Always consult your oven's owner's manual for specific air frying instructions, temperature settings, and cooking times.

1. **Preheat Oven:** Preheat your oven to the recommended temperature for air frying, as specified by your recipe or oven manual.
2. **Prepare Food:** Arrange food in a single layer within the mesh basket. Avoid overcrowding to ensure proper air circulation and even cooking. For best results, lightly toss food with a small amount of oil.
3. **Cook:** Place the AIRFRYTRAY into the preheated oven. Cook for the recommended time, turning or shaking the food halfway through if necessary, to achieve desired crispness.
4. **Monitor:** Keep an eye on your food, especially during the first few uses, as cooking times may vary based on food type and oven model.



Figure 5: Air frying french fries and tater tots in the AIRFRYTRAY.



Figure 6: Example of various foods prepared using the AIRFRYTRAY.

6. Maintenance and Cleaning

Regular cleaning of your AIRFRYTRAY will ensure its longevity and optimal performance.

- **Dishwasher Safe:** Both the mesh basket and the wire rack are dishwasher safe for convenient cleaning.
- **Hand Washing:** For hand washing, use warm, soapy water and a non-abrasive sponge or brush.
- **Cleaning the Mesh:** Food particles may stick to the mesh. For stubborn residue, soak the basket in warm, soapy water for a period before scrubbing. Turning the basket upside down in a sink and rinsing from the exterior towards the interior can help dislodge stuck particles.
- **Drying:** Ensure both components are thoroughly dry before storing to prevent water spots or corrosion.

7. Troubleshooting

Incorrect Fit

If the AIRFRYTRAY does not fit your oven, double-check your oven's model number against the compatibility list provided in Section 3. Verify the measurements of your oven racks against the tray's dimensions (24.1 inches wide for the rack). This tray is specifically designed for certain Frigidaire 30-inch ranges and not for wall ovens or other brands.

Excessive Smoke During Use

Excessive smoke is often caused by dripping grease or food particles burning on the oven floor. Ensure you are always using a large, rimmed baking sheet or drip pan on the rack directly below the AIRFRYTRAY to catch any drippings. Also, ensure the tray and oven are clean before use.

Food Sticking to Basket

To minimize food sticking, lightly toss food with a small amount of cooking oil before placing it in the basket. Avoid pressing food into the mesh. For cleaning, refer to the soaking method described in Section 6.

8. Specifications

- **Part Number:** AIRFRYTRAY
- **Item Weight:** 15.2 ounces
- **Product Dimensions (Overall):** 24.1 x 15.3 x 0.8 inches
- **Basket Dimensions:** 18.4 inches x 15.3 inches x 0.8 inches
- **Rack Dimensions:** 24.1 inches x 15.3 inches
- **Color:** Silver
- **Material:** Stainless Steel
- **Finish:** Non Stick (referring to the material properties, not a coating)
- **Special Features:** BPA-Free, Dishwasher Safe
- **Included Components:** Single Frigidaire AIRFRYTRAY Ready Cook Stainless Steel Air Fry Tray (Basket and Rack)

9. Warranty Information

The Frigidaire AIRFRYTRAY Ready Cook Oven Insert comes with a **90-Day Limited Warranty**. Please retain your proof of purchase for any warranty claims. For full details regarding warranty coverage and terms, refer to the documentation included with your product or contact Frigidaire customer support.

10. Support

For further assistance, questions regarding your Frigidaire appliance, or to confirm part numbers for repairs, please refer to your main oven's owner's manual. Some repairs may require a trained service professional. You can also visit the official Frigidaire store for additional product information and support resources: Frigidaire Store on Amazon.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07T8Z5G2S

More documents and user manuals: **https://manuals.plus/**