Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

FITHOOD CS-GDC20XL

FITHOOD Replacement Battery User Manual

For Garmin DC40, DC30, Astro System DC20, DC20 Dog Tracking Systems

1. Introduction

This user manual provides essential information for the proper installation, operation, and maintenance of your FITHOOD Replacement Battery. Please read this manual thoroughly before using the battery to ensure safe and efficient performance. This battery is designed as a high-quality replacement for specific Garmin dog tracking system models.

2. Product Overview

Key Features

- High quality replacement battery for GARMIN Dog Collar systems.
- Battery Specifications: Capacity: 2600mAh, WH: 9.62Wh, Type: Li-ion, Voltage: 3.7V.
- Features a new fully decoded chip that functions identically to the original battery.
- Dimensions: 66.00 x 18.35mm; Weight: 80g / 2.82oz.
- All batteries are Certificated with ISO9001, RoHS, and CE for quality and safety assurance.

Compatible Models

- GARMIN DC40 battery
- GARMIN DC30 battery
- GARMIN Astro System DC20 battery
- GARMIN DC20 battery
- GARMIN Dog Tracking DC 20 battery

Compatible Battery Part Numbers

- 010-10806-0
- 010-10806-00
- 010-10806-01
- 010-10806-20
- 361-00029-00

Product Images



Front view of the FITHOOD replacement battery, highlighting the model number CS-GDC20XL and capacity.



Angled view of the battery, emphasizing the connector and wiring for installation.

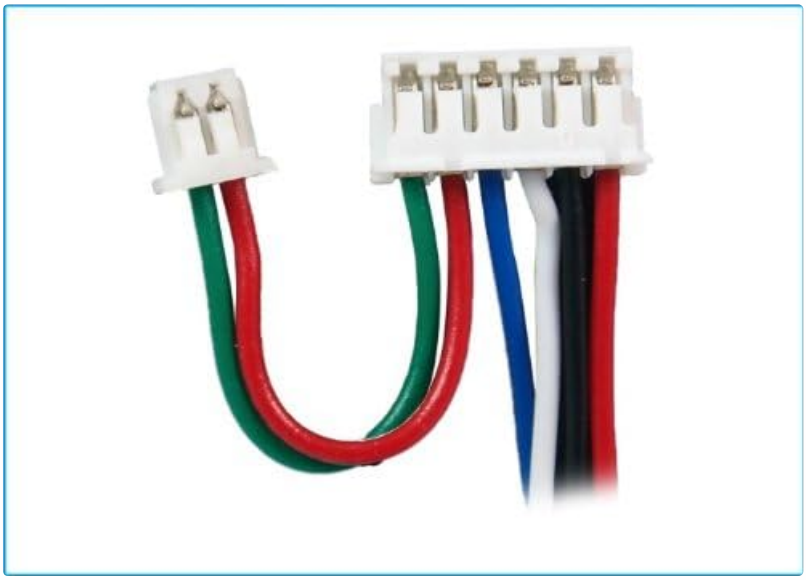

Detailed close-up of the battery's white connector plug and colored wires (red, green, blue, white, black) for precise connection.

3. Setup

Unpacking

1. Carefully remove the battery from its packaging.
2. Inspect the battery for any visible damage. Do not use if damaged.
3. Retain packaging materials for future storage or return if necessary.

Initial Charge

It is recommended to fully charge the battery before its first use to optimize performance and battery life.

1. Install the battery into your compatible Garmin device as per the device's specific instructions.
2. Connect your Garmin device to its original charger.
3. Allow the device to charge until the battery indicator shows a full charge.

4. Operating Instructions

Installation

Refer to your Garmin device's original user manual for specific battery compartment access and installation procedures. The general steps are as follows:

1. Ensure your Garmin device is powered off before beginning installation.
2. Locate and open the battery compartment on your Garmin device.
3. Carefully disconnect and remove the old battery.
4. Align the connector of the FITHOOD replacement battery with the port inside the device and gently push until it clicks into place. Ensure the connection is secure.
5. Carefully place the battery into the compartment, ensuring no wires are pinched.
6. Close the battery compartment securely.
7. Power on your Garmin device to confirm proper installation.

Usage Tips

- Always use the original or a certified compatible charger for your Garmin device.
- Avoid completely draining the battery frequently, as this can reduce its overall lifespan.
- If the device will not be used for an extended period, store the battery with approximately 50% charge.
- Operating the device in extreme temperatures (very hot or very cold) can affect battery performance and lifespan.

5. Maintenance

Storage

- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge the battery to about 50% capacity.
- Avoid storing the battery in a fully charged or fully discharged state for prolonged periods.

Cleaning

- Ensure the battery is disconnected from the device before cleaning.
- Wipe the battery's exterior with a clean, dry, soft cloth.
- Do not use liquid cleaners or solvents, as they may damage the battery or its contacts.

6. Troubleshooting

Problem	Possible Solution
Battery not charging.	Ensure the battery is correctly installed and the connector is secure. Verify the charger and charging cable are functioning correctly. Try charging with a different compatible charger if available. Check the device's charging port for debris or damage.
Short battery life.	Ensure the battery is fully charged before use. Reduce screen brightness or disable unnecessary features on your Garmin device. Avoid operating the device in extreme temperatures. The battery may require a few charge/discharge cycles to reach full capacity.
Device does not power on after battery installation.	Re-check battery installation to ensure it is seated correctly and the connector is firm. Ensure the battery has some charge; try charging the device for a short period. Confirm the battery model is compatible with your specific Garmin device.

7. Specifications

Attribute	Value
Brand	FITHOOD
Model Number	CS-GDC20XL
Battery Cell Composition	Lithium Ion
Battery Capacity	2600 Milliampere Hour (mAh)
Voltage	3.7V
Watt-hours (Wh)	9.62Wh
Item Weight	2.82 ounces

Attribute	Value
Dimensions	66.00 x 18.35mm
Number of Batteries	1 Lithium Ion batteries required. (included)
Certifications	ISO9001, RoHS, CE

8. Warranty Information

FITHOOD replacement batteries are manufactured to high-quality standards and are certified with ISO9001, RoHS, and CE, ensuring toxic-free materials and quality assurance. While specific warranty terms may vary, these certifications attest to the product's adherence to international safety and quality benchmarks. For detailed warranty claims or information, please refer to your purchase documentation or contact customer support.

9. Support

If you encounter any issues or have questions regarding your FITHOOD Replacement Battery, please ensure both the model and battery part number are matched with your device before contacting support. If you are unsure about compatibility or require further assistance, please send an email to us with your battery details or pictures. Our professional support team will provide guidance and suggestions.
For the most up-to-date support information, please visit the official FITHOOD website or refer to the contact details provided with your purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07TJQNTJV

More documents and user manuals: **https://manuals.plus/**