Manuals+
Q & A | Deep Search | Upload

WilTec 61801

Wiltec 3x3m Green Garden Gazebo Instruction Manual

Model: 61801 | Brand: WilTec

1. Important Safety Information

Please read this manual carefully before assembling and using your Wiltec Garden Gazebo. Retain this manual for future reference.

- **Weather Conditions:** This gazebo is designed for temporary use and offers protection against sun and light rain. It is **not** intended for use in strong winds, heavy rain, snow, or other severe weather conditions. Disassemble and store the gazebo during adverse weather to prevent damage and ensure safety.
- **Anchoring:** Always secure the gazebo firmly to the ground using the provided tension ropes and pegs. Additional anchoring may be required in certain conditions.
- **Assembly:** Assemble the gazebo on a flat, level surface. Ensure all connections are secure before use. It is recommended that at least two adults perform the assembly.
- **Fire Safety:** Keep all flame and heat sources away from the gazebo fabric. The fabric is not fireproof.
- **Children:** Keep children away from the assembly area. Do not allow children to play unsupervised around or inside the gazebo.

2. Package Contents

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, contact Wiltec customer support.

- Gazebo Frame Components (Poles, Connectors)
- Canopy Fabric (Roof and Side Panels)
- Tension Ropes
- Ground Pegs
- Storage Bag (if included)

3. Setup Instructions

Follow these steps for quick and simple installation. It is recommended to have at least two people for assembly.

1. **Assemble the Frame:** Lay out all frame components. Connect the poles and connectors to form the base and roof structure. Ensure all connections are firmly clicked into place.
2. **Attach the Canopy:** Drape the main canopy fabric over the assembled roof frame. Ensure it is centered and evenly distributed.
3. **Extend the Legs:** Carefully lift the frame and extend the legs to their full height. Secure the locking mechanisms on each leg.
4. **Attach Side Panels:** The gazebo includes removable side panels with windows. Attach these panels to the frame using the integrated hook-and-loop fasteners. You can choose to attach all panels, some, or none, depending on your needs.
5. **Secure the Gazebo:** Use the provided tension ropes and ground pegs to anchor the gazebo securely to the ground. Attach the ropes to the designated loops on the canopy and secure them with pegs.

Figure 1: Visual guide illustrating the four main steps for quick and simple gazebo installation, from frame assembly to full setup.

Figure 2: Detailed view of key gazebo features: a durable loop for tension ropes, a robust frame connector, and a side panel with a large window design.

4. Operating Instructions

The Wiltec Garden Gazebo is designed for versatile outdoor use, offering shade and shelter.

- **UV Protection:** The canopy provides UV 50+ protection, shielding users from harmful sun rays.
- **Water Resistance:** The canopy material is waterproof, offering protection during light rain.
- **Flexible Side Panels:** The removable side panels allow you to customize the level of enclosure and ventilation. Attach them for privacy and protection from wind or rain, or remove them for an open-air experience.
- **Applications:** Ideal for garden parties, camping, festivals, or as a temporary shelter on terraces.

Figure 3: The gazebo canopy offers both UV 50+ protection from the sun and waterproof capabilities against rain, as indicated by the icons.

Figure 4: Examples of the gazebo's wide range of applications, including beach outings, garden gatherings, and providing shelter for camping vehicles.

Figure 5: Various combinations demonstrating the flexibility of the gazebo's setup, including open configurations and enclosed options with side panels.

5. Maintenance

Proper maintenance will extend the life of your gazebo.

- **Cleaning:** Clean the canopy and side panels with a mild soap solution and a soft cloth. Rinse thoroughly with water and allow to air dry completely before storage. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** Wipe down the frame with a damp cloth to remove dirt and debris. Inspect the frame for any signs of rust or damage.
- **Storage:** When not in use, disassemble the gazebo and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Periodically check all connections, ropes, and pegs for wear and tear. Replace any damaged parts immediately.

6. Troubleshooting

Here are solutions to common issues you might encounter:

- **Gazebo is unstable:** Ensure all frame connections are fully engaged. Verify that tension ropes are taut and ground pegs are securely driven into the ground. In windy conditions, additional anchoring (e.g., sandbags, weights) is highly recommended.
- **Difficulty with assembly:** Ensure you have enough space and assistance. Double-check that poles are inserted into the correct connectors. Refer to the assembly steps in Section 3.
- **Water pooling on canopy:** Ensure the canopy is stretched tightly and evenly over the frame. Slight pooling can occur in heavy rain; this gazebo is designed for light rain protection.
- **Side panels not fitting correctly:** Ensure the main canopy is correctly positioned and the frame is fully extended. Re-attach the hook-and-loop fasteners carefully.

7. Specifications

Feature	Detail
Model Number	61801
Dimensions (L x W x H)	300 x 300 x 260 cm (3L x 3l x 2.6H meters)
Weight	7.34 Kilograms
Color	Green
Canopy Material	Polypropylene (PP)
Pole Material	Aluminium
UV Protection	50+
Water Resistance Level	Waterproof
Number of Tension Ropes	4
Assembly Required	Yes
Recommended Uses	Garden parties, camping, festivals, sun protection, rain protection

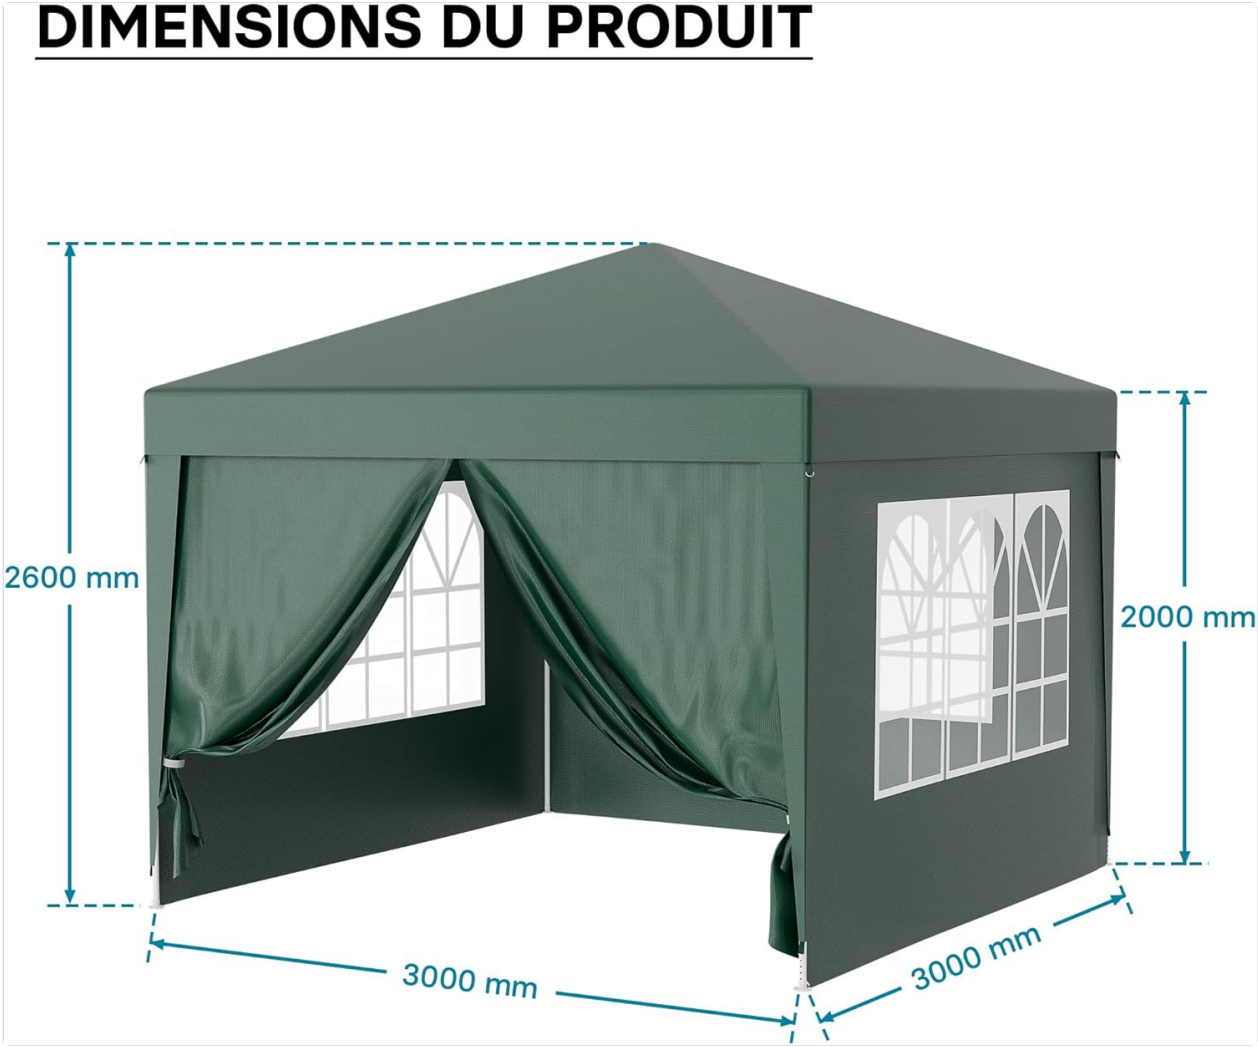

Figure 6: Detailed product dimensions, including overall length, width, and height, as well as the height of the side walls.

8. Warranty and Support

For warranty information and customer support, please refer to the seller's policies or contact Wiltec directly.
Keep your proof of purchase for any warranty claims.
The product is subject to a return policy of 30 days for refund or replacement.

© 2023 Wiltec. All rights reserved.