Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

UltraPro 40956

UltraPro 40956 7-Day Digital Outdoor Timer

INSTRUCTION MANUAL

PRODUCT OVERVIEW

The UltraPro 7-Day Digital Outdoor Timer provides automated control for your outdoor or indoor lighting and devices. This weather-resistant timer features dual grounded outlets and Daysmart technology, which automatically adjusts ON/OFF times based on sunrise and sunset in your region. It supports LED, CFL, incandescent, and halogen bulbs, offering up to eight personalized ON/OFF settings for a varied routine.



Image: Front view of the UltraPro 7-Day Digital Outdoor Timer, showcasing its digital display and control buttons.

Key Features:

- **Automatic Lighting:** Automate seasonal outdoor lighting and holiday decorations with personalized ON/OFF times or daily presets.
- **Sunrise to Sunset (Daysmart Technology):** Automatically adjusts ON/OFF times based on local sunrise

and sunset, saving energy.

- **7-Day Programmability:** Set daily and weekly ON/OFF schedules with up to eight personalized settings.
- **Dual Grounded Outlets:** Two grounded outlets for connecting multiple devices, with a built-in mounting loop for convenient hanging.
- **High Visibility LCD:** Clear digital screen for easy setup and monitoring.
- **Power Ratings:** Total ratings for both outlets – 125V, 50/60Hz, 1875W (15A) general/resistive, 1250W (10A) tungsten, ½ HP. Compatible with LED, CFL, incandescent, and halogen bulbs.

Setup

Installation

The timer is designed for both indoor and outdoor use. For outdoor applications, ensure it is plugged into a Ground Fault Circuit Interrupter (GFCI) outlet. A mounting loop is provided for secure, long-term installation using a screw, nail, or hook. Always ensure the timer's outlets are positioned downward and at least 4 feet above the ground to prevent water ingress.

Your browser does not support the video tag.

Video: This video demonstrates the installation process for the UltraPro Outdoor Outlet Timer, including plugging it into an outlet and using the mounting loop.

Initial Setup

1. **Connect Devices:** Plug the device(s) you wish to control into the timer's two grounded outlets. If your device has a power switch, ensure it is in the ON position.
2. **Reset Timer:** To begin setup or clear all previous settings, press the recessed 'R' (Reset) button using a non-metallic fine-tipped object like a toothpick or pencil. The display will show 12:00.
3. **Set Current Time:** Press and hold the UP or DOWN arrow buttons beneath the display until the correct current time appears. Pay attention to the AM/PM indicator.
4. **Program Date and Time Zone:** Press the 'SET' button. The year will flash. Use the arrow buttons to select the current year and press 'SET' to confirm. Repeat this process to set the month and day.
5. **Select Time Zone Region:** After setting the date, select your time zone region using the arrow buttons. This is crucial for the automatic sunrise and sunset adjustment feature. A region map is typically included in the full manual for reference.

Operating

Programming Custom ON/OFF Times

The timer allows for up to eight personalized ON/OFF settings.

1. **Set ON Time:** Press the 'ON TIME' button. The display will flash, indicating it's ready for adjustment. Use the UP/DOWN arrows to select the desired activation time. Observe the AM/PM indicator.
2. **Select Days for ON Time:** Press the 'SET' button. The days of the week will flash at the bottom of the screen. Use the arrow buttons to cycle through options: Every Day, Monday-Friday, Saturday-Sunday, Sunday-Thursday, Friday-Sunday, or any individual day. Press 'SET' to confirm your selection.
3. **Set OFF Time:** Press the 'OFF TIME' button and repeat the steps above to determine the time and days you want your connected device to turn off.
4. **Extra Programs:** Up to seven additional ON/OFF programs can be set. Press the 'EXTRA PROGRAMS' button. 'ON 1' will flash. Press 'SET' to adjust the ON time for the first extra program, then follow the same

steps for selecting days and setting the OFF time. Use the arrow buttons to scroll through programs (ON 1, OFF 1, ON 2, OFF 2, etc.).

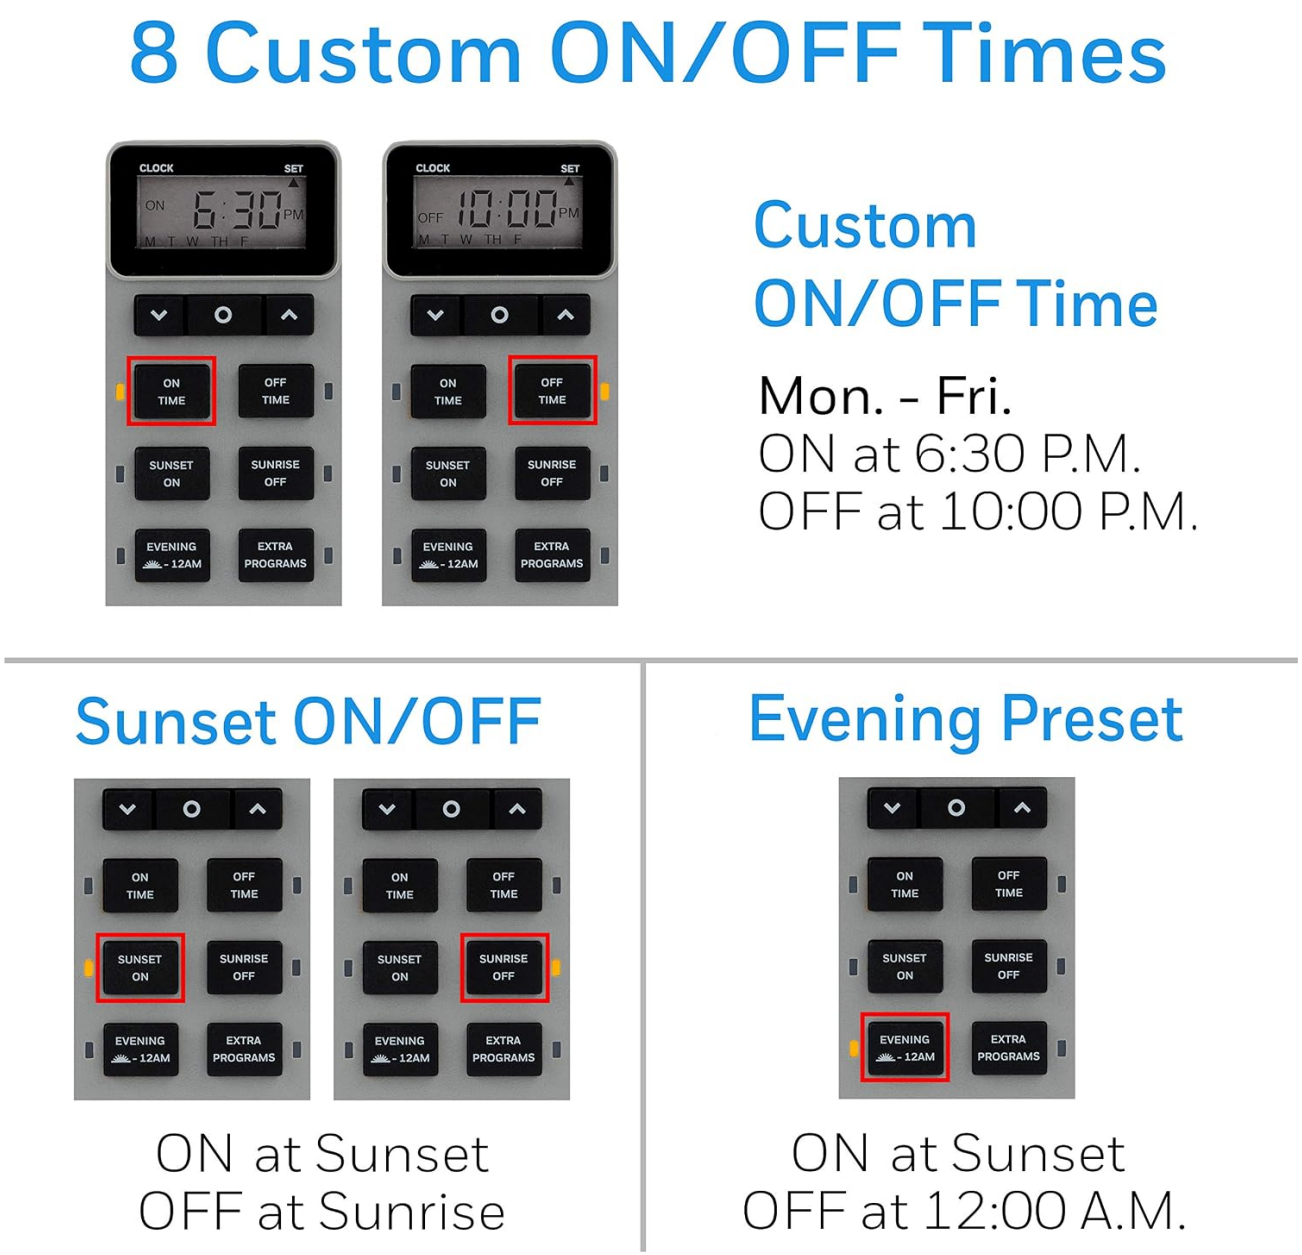

Image: Visual examples of setting custom ON/OFF times and utilizing Sunset ON/OFF and Evening Preset functions on the timer's LCD screen.

Using Preset Functions

- **Sunset ON / Sunrise OFF:** Press the 'SUNSET ON' button to activate your device at dusk and the 'SUNRISE OFF' button to deactivate it at dawn. These times are automatically determined by the time zone region you selected during initial setup.
- **Evening Preset:** Press the 'EVENING - 12AM' button for a quick option to activate your device at 5 PM and turn it off at midnight.

Adjusting Presets

Both the Sunset/Sunrise and Evening presets can be adjusted up to one hour before or after their automatically determined times.

- **Early Activation:** To turn on a device earlier than the preset, press 'ON TIME' and adjust it to the desired time prior to the automatic sunset time.
- **Early Deactivation:** To shut off lighting before a preset expires, use the 'OFF TIME' button to override the

standard end time.

Maintenance

The UltraPro 7-Day Digital Outdoor Timer features a durable, weather-resistant housing. To ensure optimal performance and longevity:

- **Cleaning:** Periodically wipe the timer with a soft, damp cloth to remove dirt and debris. Do not use harsh chemicals or abrasive cleaners.
- **Weather Protection:** While weather-resistant, avoid submerging the timer in water. Ensure the outlets are always facing downward when installed outdoors.
- **Storage:** If storing the timer for an extended period, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

Troubleshooting

- **Timer Not Turning ON/OFF:**
  - Ensure the timer is securely plugged into a working outlet.
  - Verify that the connected device's power switch is in the ON position.
  - Check your programmed ON/OFF times and days for accuracy, including AM/PM settings.
  - Confirm the correct time zone region is selected for Daysmart features.
- **Display is Blank or Faint:**
  - The timer may require a short period (e.g., 1 hour) plugged in to charge its internal battery for the display to become fully visible, especially after a power outage or initial unboxing.
- **Incorrect Sunrise/Sunset Times:**
  - Re-verify that the correct time zone region was selected during initial setup.
- **Resetting All Settings:**
  - If experiencing persistent issues, perform a full reset by pressing the recessed 'R' button with a non-metallic fine-tipped object. This will clear all settings and restore factory defaults, allowing you to reprogram from scratch.

Specifications

Model Number	40956
Color	Gray
Material	Metal, Resin
Product Dimensions	1.56"D x 2.88"W x 4.81"H
Item Weight	8 ounces
Number of Settings	8
UPC	030878409568

Power Source	AC
Voltage	125 Volts
Manufacturer	Jasco Products Company, LLC



Image: The UltraPro 7-Day Digital Outdoor Timer with its dimensions labeled: 4.81 inches (height), 2.88 inches (width), and 1.56 inches (depth).

Warranty & Support

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the manufacturer's official website. Keep your purchase receipt as proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07VQ8P7VX

More documents and user manuals: **https://manuals.plus/**