Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Shark HV302

Shark Rocket HV302 Ultra-Light Corded Bagless Vacuum User Manual

Model: HV302

Important Safety Instructions

When using an electrical appliance, basic precautions should always be observed, including the following:

- Read all instructions before using this vacuum cleaner.
- Always unplug the power cord from the electrical outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup and/or filters in place.

Product Overview

The Shark Rocket HV302 is an ultra-light corded vacuum designed for versatile cleaning across various floor types. It features powerful suction, swivel steering, and converts into a handheld vacuum for detailed cleaning.



Image: The Shark Rocket HV302 Ultra-Light Corded Bagless Vacuum, showcasing its slim design and power cord.

Included Components:

- Main Vacuum Unit (Motorized Hand Vac)
- Extension Wand
- Floor Nozzle
- Crevice Tool

- Brush Attachment

Setup and Assembly

Follow these steps to assemble your Shark Rocket HV302 vacuum:

1. Insert the Extension Wand into the Floor Nozzle until it clicks securely into place.
2. Insert the Motorized Hand Vac into the top of the Extension Wand until it clicks securely into place.
3. Ensure all connections are firm before operating the vacuum.

Operating Instructions

Power and Mode Selection:

- Plug the power cord into a standard electrical outlet.
- The power switch is located on the handle of the motorized hand vac.
- Press the power button once for bare floor/area rug mode (brush roll spins slowly).
- Press the power button a second time for carpet mode (brush roll spins faster).
- Press the power button a third time to turn off the vacuum.



Image: A user operating the Shark Rocket HV302 in upright mode on a carpeted floor.

Swivel Steering:

The advanced swivel steering allows for easy maneuverability around furniture and obstacles. Gently twist the handle to guide the vacuum in the desired direction.



Image: The vacuum head easily reaching under furniture, demonstrating its swivel steering capability.

Converting to Hand Vac:

To convert to a handheld vacuum for above-floor cleaning:

1. Press the wand release button located at the top of the floor nozzle to detach the wand and hand vac assembly.
2. Press the hand vac release button on the wand to detach the motorized hand vac.
3. Attach desired accessory (crevice tool, brush) directly to the hand vac or to the end of the wand for extended reach.





Image: A user utilizing the Shark Rocket HV302 in handheld mode with the extension wand to clean high surfaces.

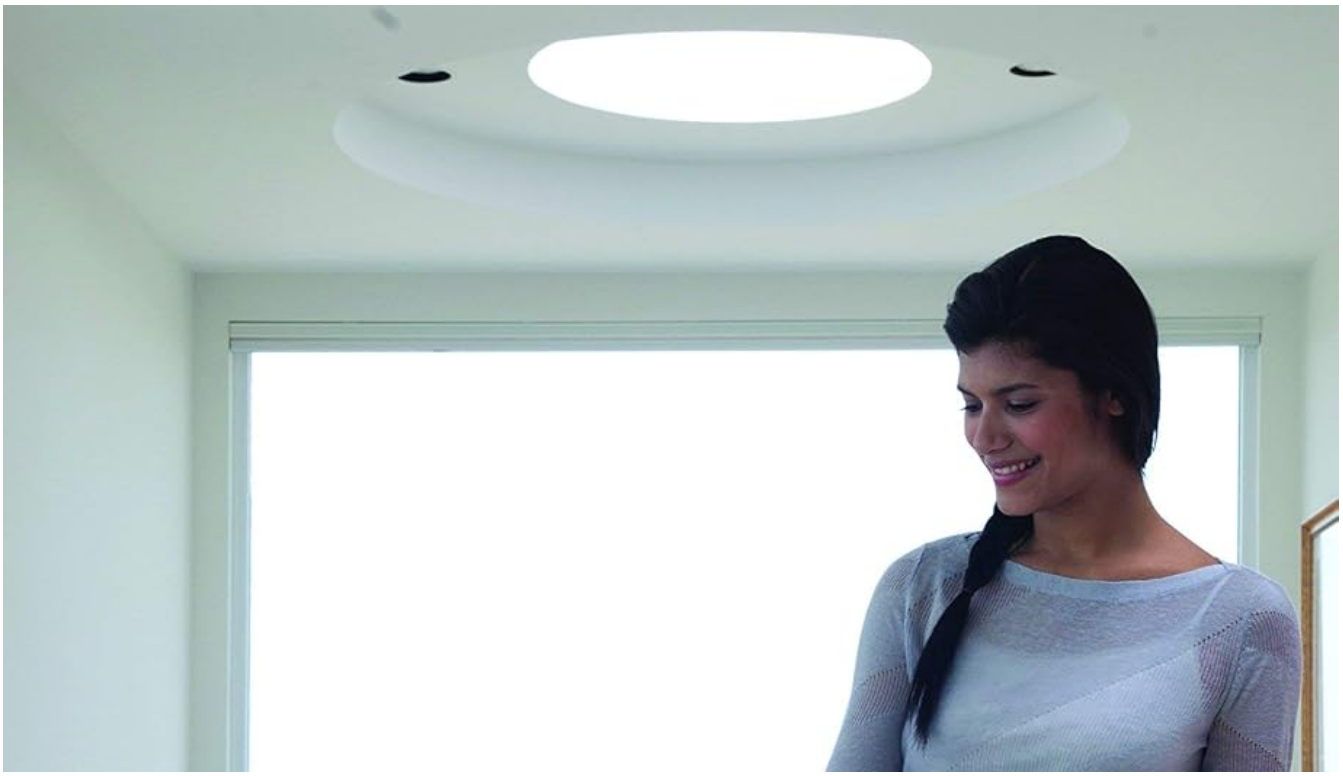




Image: A user cleaning a sofa with the Shark Rocket HV302 in handheld mode, using a crevice tool for detailed cleaning.



Image: A user cleaning carpeted stairs with the Shark Rocket HV302 in handheld mode, demonstrating its versatility.

Maintenance

Emptying the Dust Cup:

1. Ensure the vacuum is unplugged.
2. Hold the hand vac over a trash bin.
3. Press the dust cup release latch to open the bottom of the dust cup and empty debris.
4. Close the dust cup flap securely until it clicks.

Cleaning Filters:

The Shark Rocket HV302 uses foam filters. Regular cleaning is essential for optimal performance.

1. Ensure the vacuum is unplugged.
2. Remove the dust cup from the hand vac.
3. Pull out the foam filters.
4. Rinse the filters with cold water until the water runs clear.
5. Allow filters to air-dry completely for at least 24 hours before reinstalling. Do not use a hairdryer or other heating methods.
6. Reinstall dry filters and reattach the dust cup.

Cleaning the Brush Roll:

Periodically check the brush roll for hair or debris entanglement.

1. Ensure the vacuum is unplugged.
2. Use scissors to carefully cut away any hair or string wrapped around the brush roll.
3. Remove any debris from the brush roll housing.

Troubleshooting

Problem	Possible Cause	Solution
Vacuum not picking up dirt or no suction.	Dust cup is full; Filters need cleaning; Hose/nozzle is blocked.	Empty dust cup; Clean filters; Check hose and nozzle for blockages.
Brush roll not spinning.	Brush roll is jammed; Vacuum is in bare floor mode; Belt is broken.	Remove obstructions from brush roll; Switch to carpet mode; Contact customer support if belt is broken.
Vacuum turns off on its own.	Overheating due to clogged filters or blockages.	Unplug and let cool for 45 minutes; Clean filters and check for blockages.

Specifications

- **Brand:** Shark
- **Model:** HV302
- **Power:** Corded, 500 watts
- **Filter Type:** Foam
- **Capacity:** 8 Pounds (Dust Cup)
- **Weight:** 8.2 pounds
- **Product Dimensions:** 11.2"L x 9.8"W x 31.5"H
- **Recommended Uses:** Bare Floor, Carpet, Hard Floor
- **Special Feature:** Swivel Steering
- **Form Factor:** Handheld, Upright

Warranty and Support

Warranty Information:

This product is backed by a 90-day limited warranty. Please refer to your purchase documentation for specific terms and conditions.

Customer Support:

For technical assistance, replacement parts, or warranty inquiries, please visit the official Shark website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07VQX36X7

More documents and user manuals: **https://manuals.plus/**