Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

LEXiBOOK ROB80EN

LEXiBOOK Powerman Max

INSTRUCTION MANUAL

Introduction

Welcome to the world of LEXiBOOK Powerman Max, your interactive and programmable robot companion. This manual provides essential information for setting up, operating, and maintaining your robot to ensure a fun and educational experience. Powerman Max is designed to engage users with its talking, dancing, storytelling, and quiz features, promoting STEM learning through interactive play.



Image: The Powerman Max robot, its remote control, and the product packaging, illustrating the complete set.

What's in the Box

Upon unboxing your LEXiBOOK Powerman Max, please verify that all components are present:

- 1 x Powerman Max Robot
- 1 x Remote Control
- 9 x Foam Discs
- 1 x Instruction Manual (this document)



Image: The Powerman Max robot, its remote control, and the colorful foam discs, showing the main components included.

Setup

Before operating your Powerman Max, battery installation is required for both the robot and the remote control.

Battery Installation

- **Robot:** Requires 5x LR6/AA batteries (not included). Locate the battery compartment on the robot's back or base, open it, insert the batteries according to the polarity indicators (+/-), and close the compartment securely.
- **Remote Control:** Requires 2x LR6/AA batteries (not included). Locate the battery compartment on the back of the remote, open it, insert the batteries according to the polarity indicators (+/-), and close the compartment securely.

Important: Ensure batteries are inserted correctly. Do not mix old and new batteries, or different types of batteries.

Operating Instructions

Powerman Max offers a wide range of interactive features. Familiarize yourself with the remote control and the robot's functions for optimal enjoyment.

Remote Control Functions

The remote control allows you to direct Powerman Max's movements and activate various features. Use the directional buttons to move the robot forward, backward, left, and right. Specific buttons on the remote correspond to different interactive modes and actions.

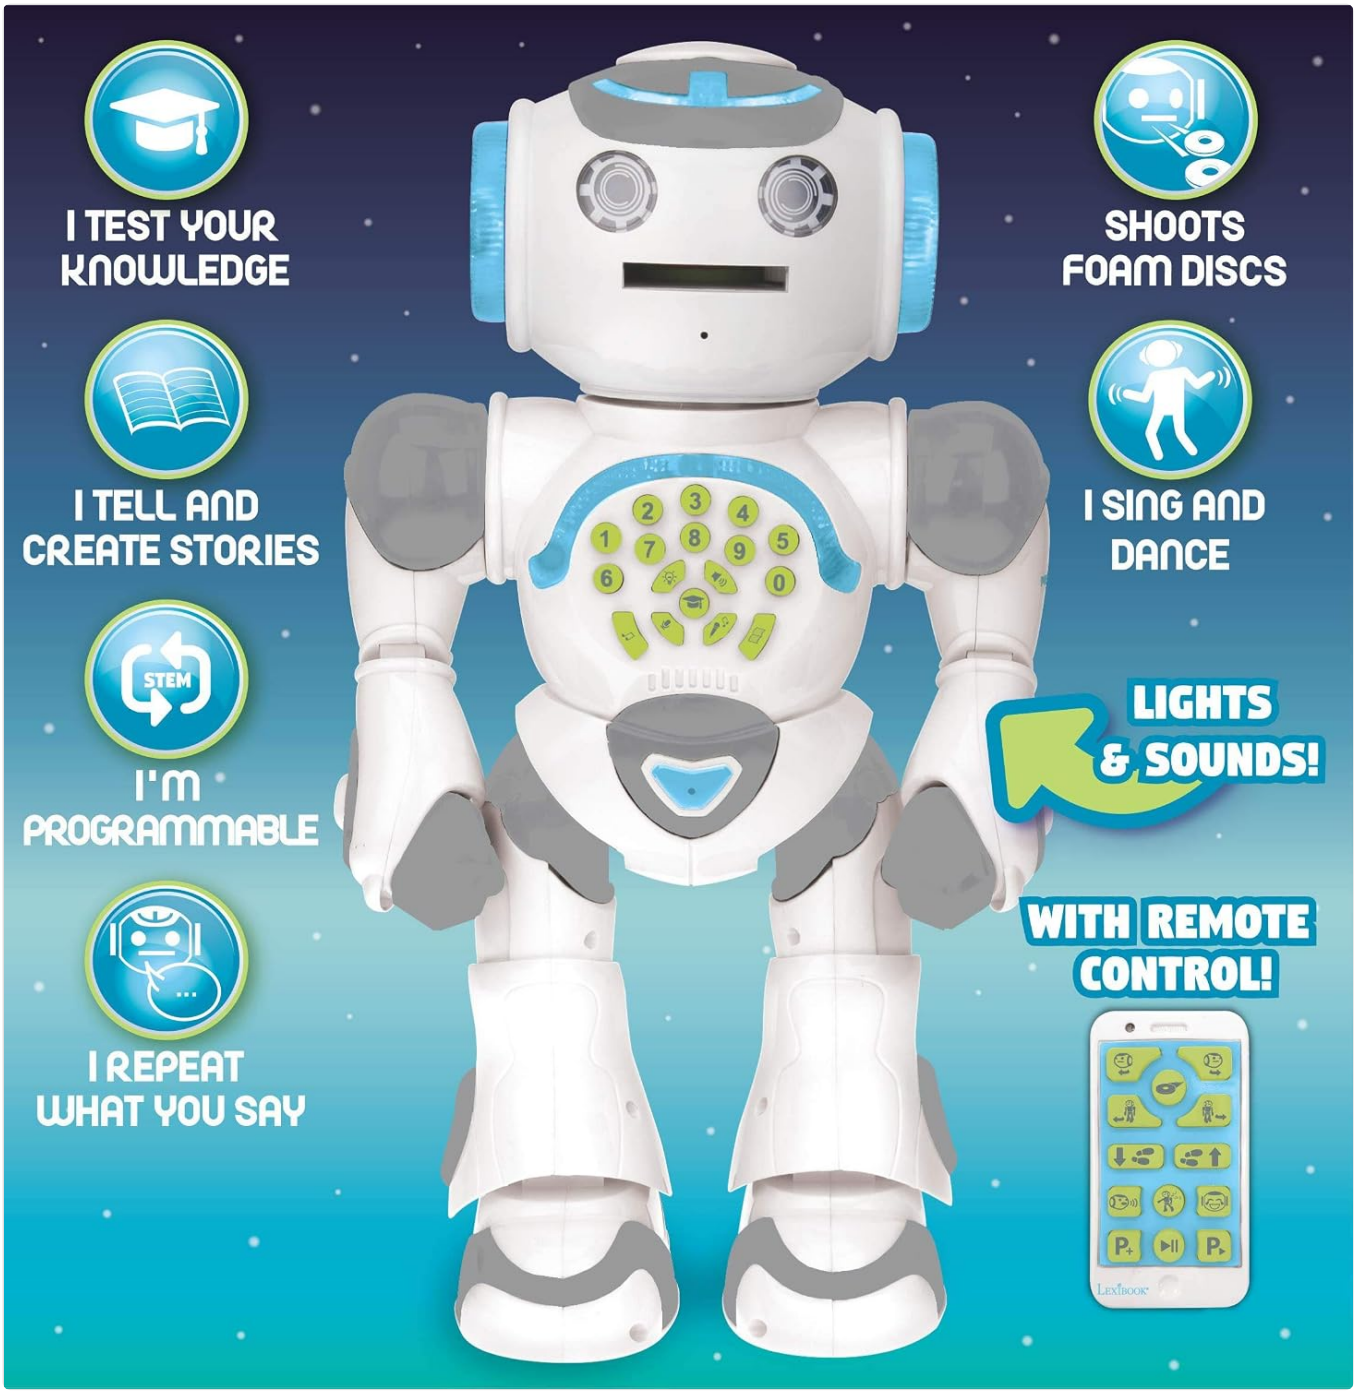


Image: The Powerman Max robot with visual callouts indicating its key features such as knowledge testing, storytelling, programming, voice repeat, disc shooting, singing, dancing, lights, sounds, and remote control functionality.

Interactive Features

- **Learning Quizzes:** Powerman Max includes over 300 learning quizzes across 6 educational activities, covering numbers, animals, daily life, and musical instruments. Activate this mode to test knowledge.

- **Story Maker:** Utilize the Story Maker function to create up to 10,000 unique and engaging stories. The robot also features 10 classic Aesop's fables, suitable for bedtime stories.
- **Programmable Actions:** Discover the basics of programming by setting up to 40 actions for Powerman Max. You can also add music to your programmed sequences to create custom choreographies.
- **Voice Repeat & Recording:** The robot can repeat what you say in its fun robot voice. It can also memorize and reuse recorded phrases later, and even perform karaoke with your voice.
- **Disc Shooting:** Powerman Max can shoot soft foam discs. Load the discs into the designated slot and activate the shooting mechanism via the remote control. Ensure a clear area for disc shooting.
- **Music and Dance:** Enjoy several built-in music tracks and watch Powerman Max perform various dance moves.



Image: The Powerman Max robot interacting with a child, with a speech bubble indicating its ability to tell up to 10,000 stories, demonstrating its storytelling feature.



Image: A child pressing a button on the Powerman Max robot, with a speech bubble indicating the robot's ability to repeat after the user, showcasing its voice repeat function.

Maintenance

To ensure the longevity and optimal performance of your Powerman Max, follow these maintenance guidelines:

- **Cleaning:** Wipe the robot and remote control with a soft, dry cloth. Do not use abrasive cleaners or immerse the units in water.
- **Battery Care:** Remove batteries if the robot will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly.
- **Storage:** Store the robot in a cool, dry place away from direct sunlight and extreme temperatures.

Troubleshooting

If you encounter issues with your Powerman Max, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on or respond.	Low or incorrectly installed batteries.	Check battery polarity and replace with fresh batteries in both robot and remote.
Robot's movements are erratic or slow.	Low batteries or interference.	Replace batteries. Ensure no strong electronic interference nearby.
Voice functions are unclear or not working.	Microphone obstruction or low battery.	Ensure microphone is clear. Replace batteries.
Foam discs do not shoot properly.	Discs are jammed or mechanism is obstructed.	Clear any obstructions from the disc shooting mechanism. Ensure discs are inserted correctly.

Specifications

- **Model Number:** ROB80EN
- **Product Dimensions:** 8.15 x 5.24 x 14.49 inches
- **Item Weight:** 2.08 pounds
- **Manufacturer:** Lexibook
- **Recommended Age:** 4 years and up
- **Robot Power Supply:** 5x AA batteries (not included)
- **Remote Control Power Supply:** 2x AA batteries (not included)
- **Release Date:** August 13, 2019

Safety Information

WARNING!

- Not suitable for children under 3 years due to small parts. Choking hazard.
- Do not aim discs at eyes or face.
- Adult supervision is recommended during play.
- Keep away from water and excessive heat.

Warranty and Support

For warranty information, technical support, or replacement parts, please refer to the contact details provided on the product packaging or visit the official LEXiBOOK website. Keep your purchase receipt as proof of purchase.

© 2025 LEXiBOOK. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07WDHYPHL

More documents and user manuals: **https://manuals.plus/**