Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Noma CTI1516238

NOMA 7-Foot Henry Fir Christmas Tree CTI1516238 User Manual

Model: CTI1516238

1. Product Overview

The NOMA 7-Foot Henry Fir Christmas Tree is a pre-lit artificial tree designed for ease of assembly and festive illumination. It features 400 energy-saving LED bulbs with color-changing capabilities and 1000 PVC tips for a full, lifelike appearance. This manual provides instructions for assembly, operation, maintenance, and troubleshooting.





Figure 1: NOMA 7-Foot Henry Fir Christmas Tree with warm white lights.

2. Setup Instructions

Follow these steps to assemble your NOMA Henry Fir Christmas Tree:

1. **Unpack Components:** Carefully remove all tree sections, the metal stand, and any accessories from the packaging.
2. **Assemble Tree Stand:** Open the durable metal stand and ensure it is stable on a flat surface. Tighten any securing screws if present.
3. **Insert Bottom Section:** Place the largest tree section (bottom) into the assembled stand. Ensure it is firmly seated.
4. **Connect Middle and Top Sections:** Insert the middle section into the bottom section, aligning the internal electrical connections. Then, insert the top section into the middle section, ensuring all connections are secure. The tree is designed for simple, three-section assembly.

5. **Fluff Branches:** Starting from the bottom, gently spread out each branch and individual tip to give the tree a full, lifelike appearance. This process helps to fill any gaps and provides ample space for ornaments.
6. **Connect to Power:** Plug the tree's power cord into a standard electrical outlet.

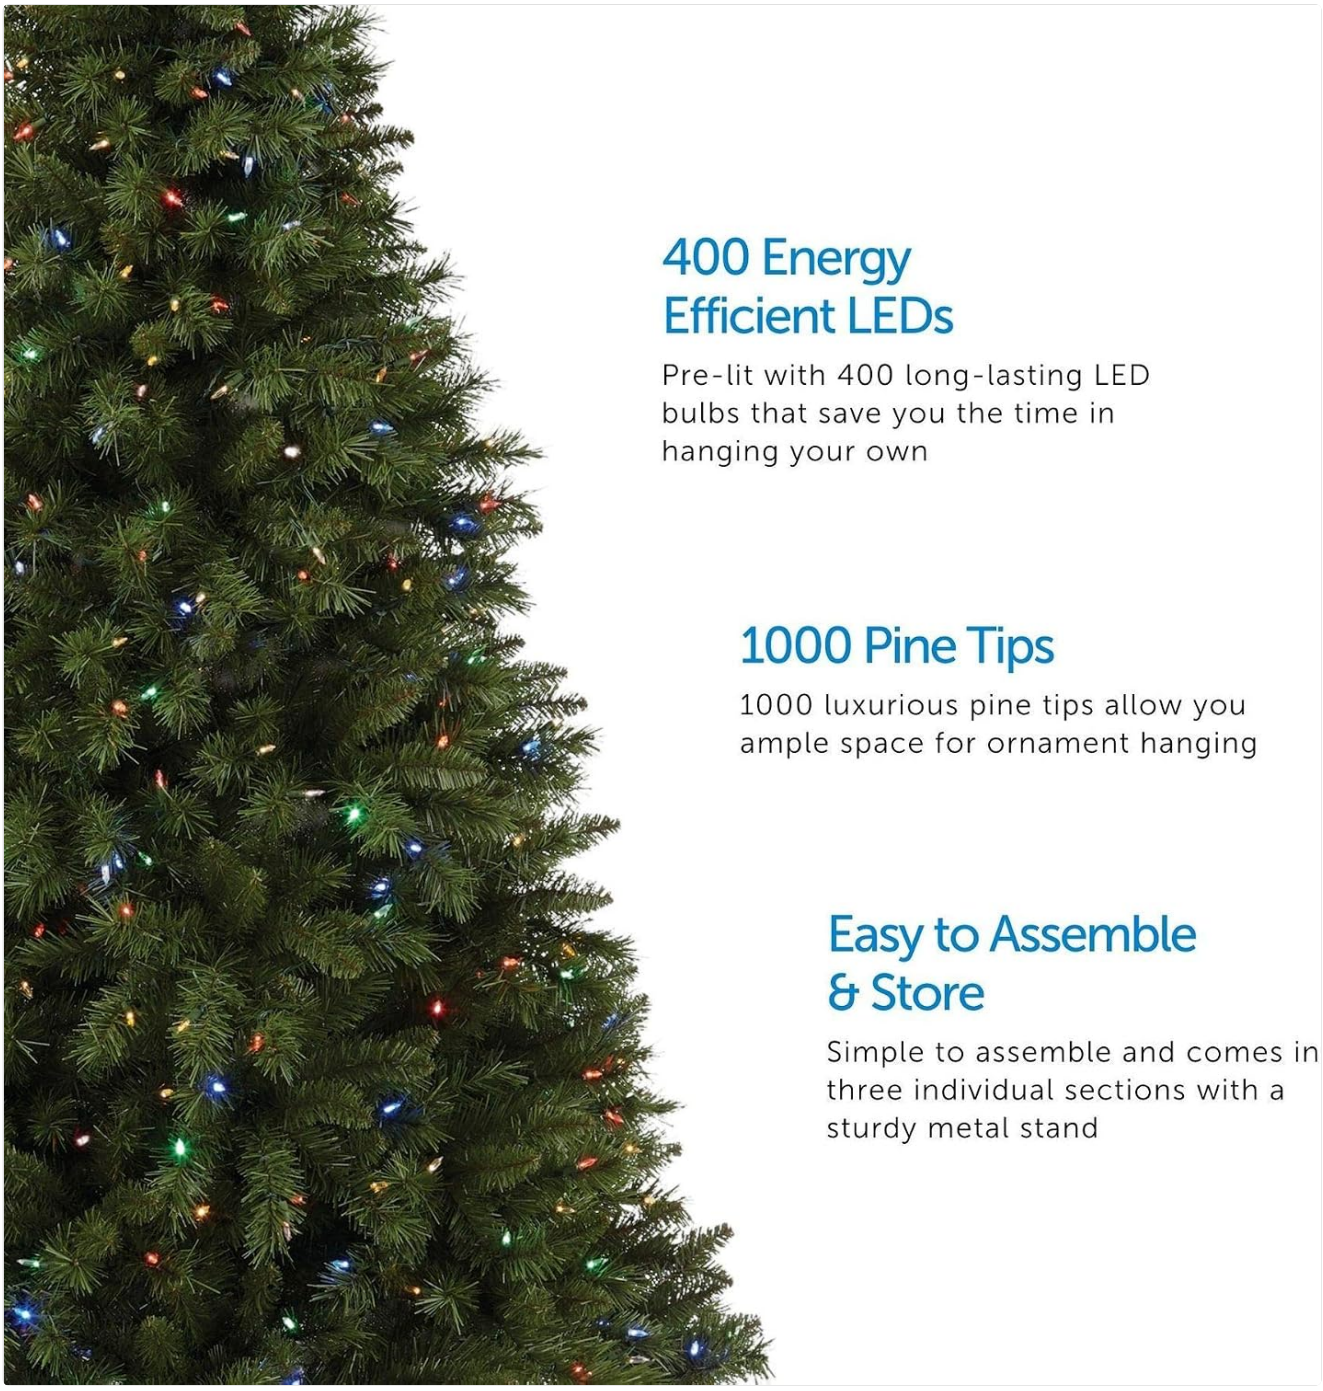

Figure 2: Tree features and assembly overview.





Figure 3: Tree dimensions for placement planning.

Setup Video

Your browser does not support the video tag.

Video 1: An overview of NOMA Christmas Trees, demonstrating their realistic appearance and ease of setup. This video highlights the quality and design of the trees, including the Henry Fir model.

3. Operating Instructions (Light Modes)

The NOMA Henry Fir Christmas Tree features 400 color-changing LED lights with multiple modes, controlled by a convenient foot pedal:

- **Warm White Lights Only:** Provides a classic, cozy glow.
- **Multi-Color Lights Only:** Displays vibrant, festive colors.
- **Alternating Warm White & Multi-Color:** Cycles between the two color options.

To change the light mode, simply press the foot pedal located near the base of the tree. Each press will cycle through the available modes.



Figure 4: Demonstration of warm white and multi-color light modes.



Figure 5: Tree illuminated with warm white lights.



Figure 6: Tree illuminated with multi-color lights.

4. Maintenance and Storage

Proper care and storage will ensure the longevity of your NOMA Henry Fir Christmas Tree:

- **Cleaning:** Dust the tree periodically with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Disassembly:** To disassemble, unplug the tree from the power source. Carefully remove all ornaments. Reverse the assembly steps, detaching the sections.
- **Storage:** Store the disassembled tree in its original box or a dedicated tree storage bag. Ensure it is stored in a cool, dry place away from direct sunlight to prevent material degradation and light fading.
- **Light Care:** The LED bulbs are designed for long life. If a bulb fails, refer to the included spare parts for replacement. Always unplug the tree before attempting any bulb replacement.

5. Troubleshooting

If you encounter issues with your NOMA Henry Fir Christmas Tree, consider the following common solutions:

- **Lights Not Illuminating:**
  - Ensure the tree is properly plugged into a functional electrical outlet.
  - Check all internal section connections to ensure they are securely fastened.
  - Inspect for any loose or broken bulbs. Replace any faulty bulbs with the provided spares.
  - Verify that the foot pedal is functioning correctly and has not been damaged.
- **Partial Light Section Out:**
  - This often indicates a loose connection between tree sections. Re-seat the affected sections firmly.
  - Check for any blown fuses in the plug or light strings (if applicable). Refer to the product's specific fuse replacement instructions.
- **Tree Stability Issues:**
  - Ensure the metal stand is fully extended and all securing screws are tightened.
  - Place the tree on a flat, level surface.

For persistent issues not resolved by these steps, please contact NOMA customer support.

6. Specifications

Feature	Detail
Brand	Noma
Model Number	CTI1516238
Product Dimensions	50"D x 50"W x 84"H (7 feet tall)
Color	Green
Material	Polyvinyl Chloride (PVC)
Tree Type	Fir
Tip Count	1000
Built-in Light	Yes
Number of Bulbs	400
Light Color	Color-Changing (Warm White & Multi-Color)
Special Features	3 Color Modes, Corded, Prelit, Durable Metal Stand
Item Weight	33.7 pounds
Date First Available	August 16, 2019

7. Warranty and Support

For detailed warranty information and customer support, please refer to the documentation included with your

product or visit the official NOMA brand store. The brand store can be accessed via this link: NOMA Brand Store.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07WK7CXKH

More documents and user manuals: **https://manuals.plus/**