Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Warehouse of Tiffany CFL-8372REMO/CHD

Warehouse of Tiffany Walter Dual Lamp Chrome 52-inch Lighted Ceiling Fan

Model: CFL-8372REMO/CHD

Important Safety Information

Read all instructions carefully before beginning installation. Consult a qualified electrician if you are unfamiliar with electrical installations. Always turn off power at the main circuit breaker before working on the fan. Ensure all connections are secure and comply with local codes. This fan is intended for indoor use only.

- Disconnect power before installation or servicing.
- All wiring must be in accordance with national and local electrical codes.
- Support structure must be capable of supporting the fan's weight (approximately 22.27 lbs).
- Do not bend blade holders during installation or cleaning.
- Keep children away from the fan during operation.

Package Contents

Verify that all components are present before beginning installation.

- Ceiling Fan Motor Assembly
- Fan Blades (5)
- Blade Holders
- Light Kit Assembly (Upper and Lower)
- Crystal Shades
- Frosted Glass Bottom Cover
- Remote Control and Receiver
- Mounting Bracket and Hardware
- Downrod
- Instruction Manual

Setup and Installation

Professional installation is recommended. Ensure power is disconnected at the circuit breaker before proceeding.

1. Mounting Bracket Installation

Secure the mounting bracket to the ceiling junction box. The junction box must be securely fastened to the building structure and capable of supporting the fan's weight. Use hardware suitable for your ceiling type.

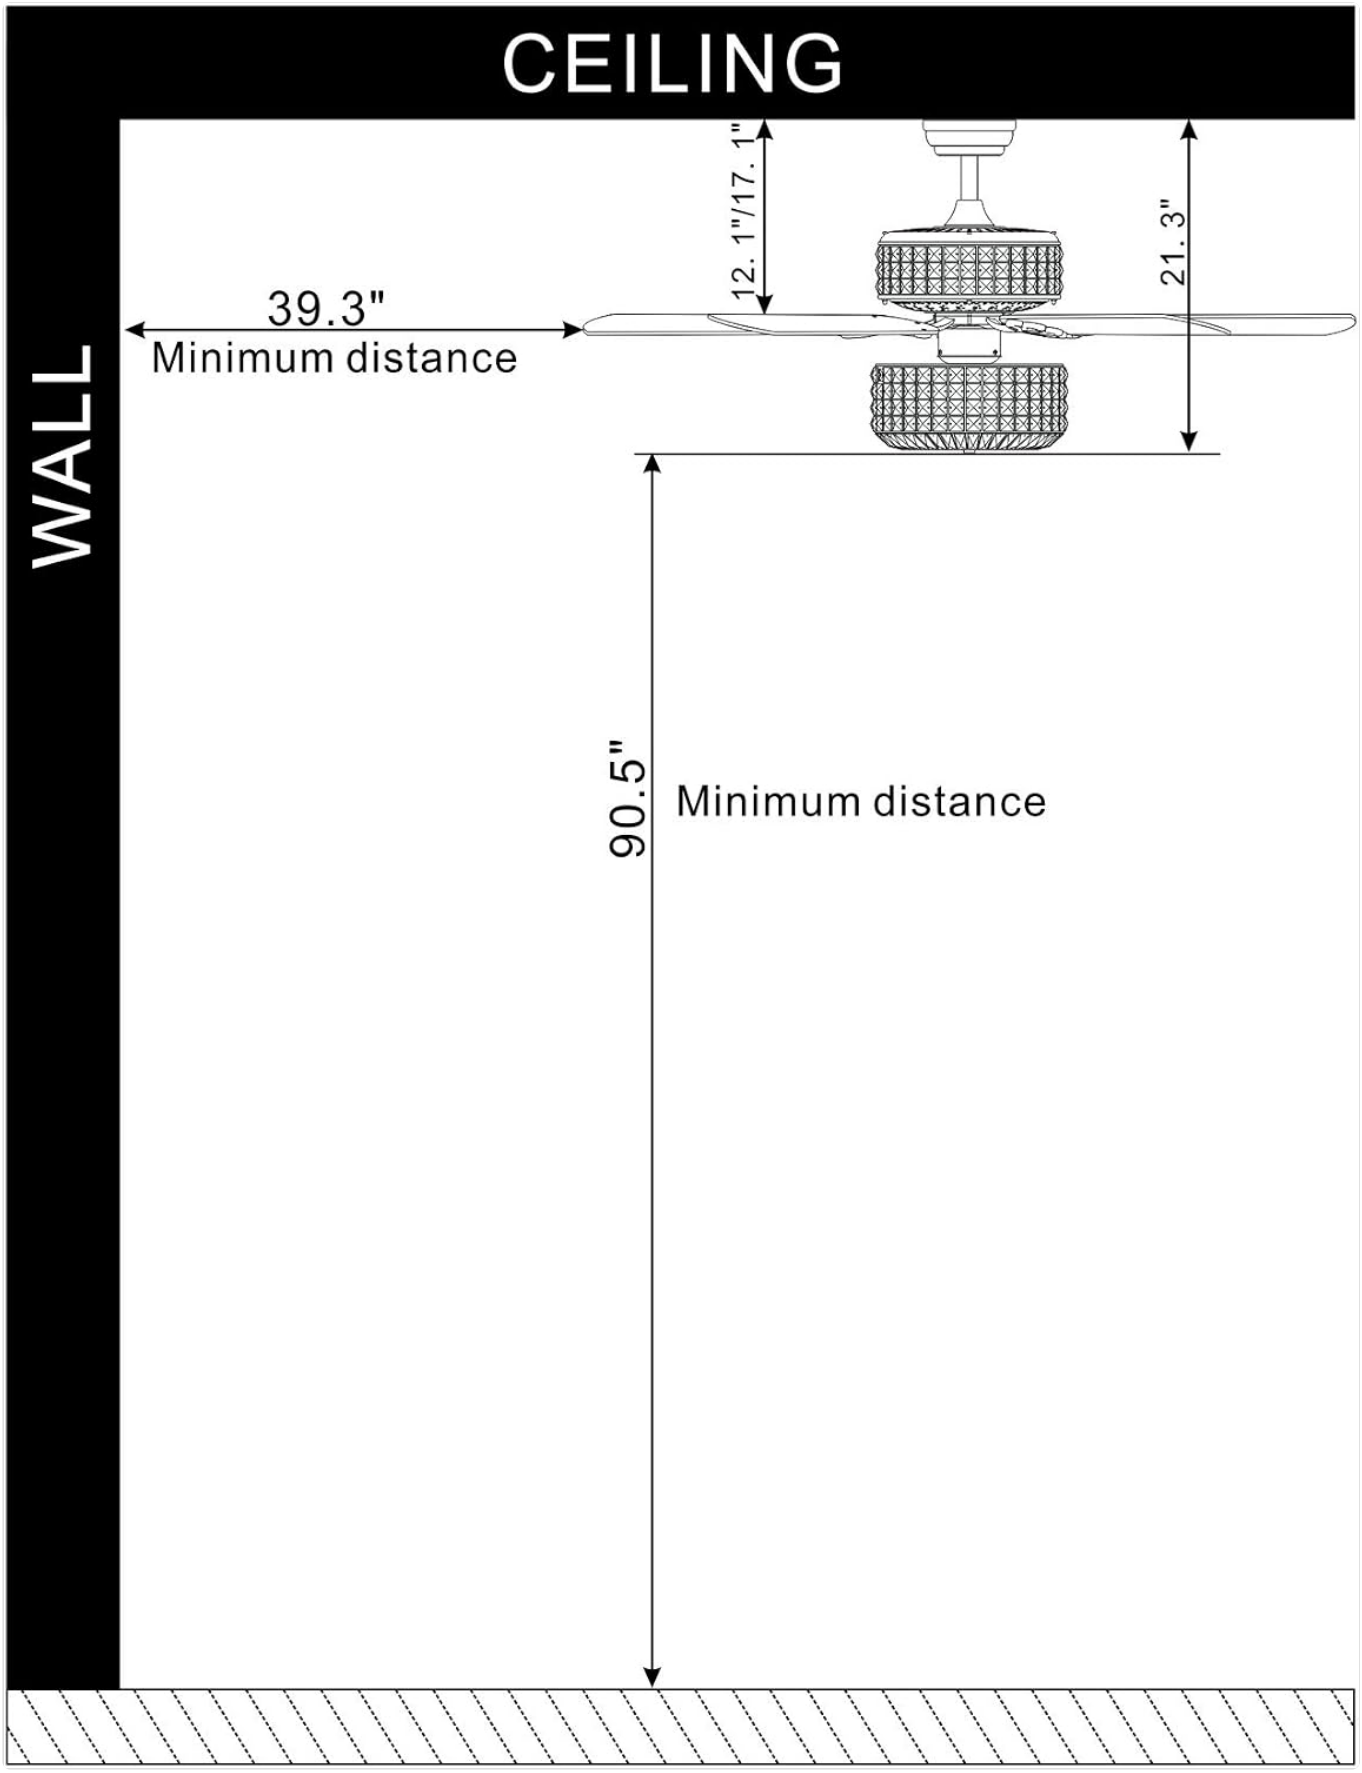

Figure 1: Minimum clearance distances for ceiling fan installation. Ensure a minimum distance of 39.3 inches from the wall and 90.5

inches from the floor to the bottom of the fan.

2. Wiring

Connect the fan's electrical wires to the household wiring according to the wiring diagram provided in the full manual. Ensure all connections are tight and secured with wire nuts. Install the remote receiver into the mounting bracket canopy.

3. Fan Assembly

Attach the downrod to the motor housing. Carefully lift the fan assembly and hang it from the mounting bracket. Connect the fan blades to the blade holders, then attach the blade assemblies to the motor. Install the light kit, including the crystal shades and frosted glass cover, ensuring all connections are secure.

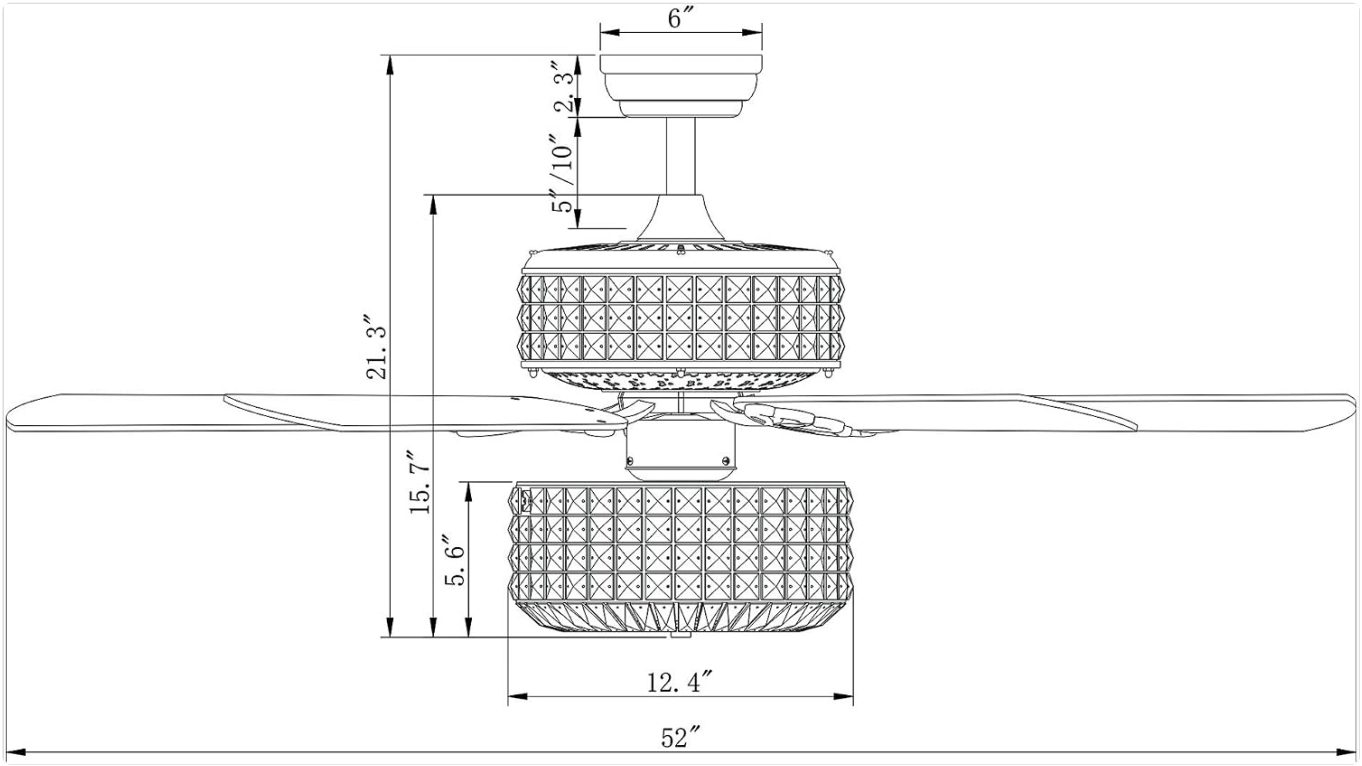

Figure 2: Detailed dimensions of the ceiling fan, including blade span (52 inches), total height (21.3 inches), and light kit dimensions.

4. Remote Control Pairing

After installation and restoring power, the remote control may need to be paired with the fan receiver. Refer to the remote control's specific instructions for pairing procedures, typically involving pressing a button within a short timeframe after power-up.

Operating Instructions

This ceiling fan is operated using the included remote control.

- **Fan Speed Control:** Use the speed buttons on the remote to cycle through low, medium, and high fan speeds.
- **Light Control:** Use the light button to turn the fan lights on or off.
- **Fan Direction:** A switch on the fan motor housing controls the blade direction. For **summer operation**, set the switch for downward airflow to create a cooling effect. For **winter operation**, set the switch for upward airflow to circulate warm air.



Figure 3: The Walter Dual Lamp Ceiling Fan in operation, showcasing its chrome finish and crystal shades.

Maintenance

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Periodically wipe the fan blades, motor housing, and light kit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. This fan uses (3) E12 40W bulbs and (3) E26 60W bulbs (not included).
- **Blade Tightening:** Check blade screws periodically and tighten if necessary to prevent wobbling and noise.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Fan does not start	No power to fan; loose wire connections; remote not paired.	Check circuit breaker; verify all wiring connections; re-pair remote control.
Fan wobbles	Loose blade screws; unbalanced blades; improper mounting.	Tighten all blade screws; ensure blades are balanced (use balancing kit if needed); verify mounting bracket is secure.
Lights do not work	Bulbs faulty or not installed correctly; loose wire connection in light kit.	Replace bulbs; ensure bulbs are screwed in tightly; check light kit wiring.
Remote control not working	Dead batteries; remote not paired; interference.	Replace remote batteries; re-pair remote with receiver; ensure no strong interference sources nearby.

Specifications

Model Number	CFL-8372REMO/CHD
Brand	Warehouse of Tiffany
Fan Size	52 inches
Color	Chrome
Materials	Crystal, Metal, Wood
Control Method	Remote Control
Light Source	Incandescent
Bulb Requirements	(3) E12 40W, (3) E26 60W (not included)
Voltage	120 Volts
Wattage	60 watts (fan motor)
Item Weight	22.27 Pounds
Airflow	3246 Cubic Feet Per Minute
Airflow Efficiency	89 Cubic Feet Per Minute Per Watt
Estimated Yearly Energy Cost	$10 (based on 12 cents per kWh and 6.4 hours use per day, excludes lights)
Certifications	ETL Listed

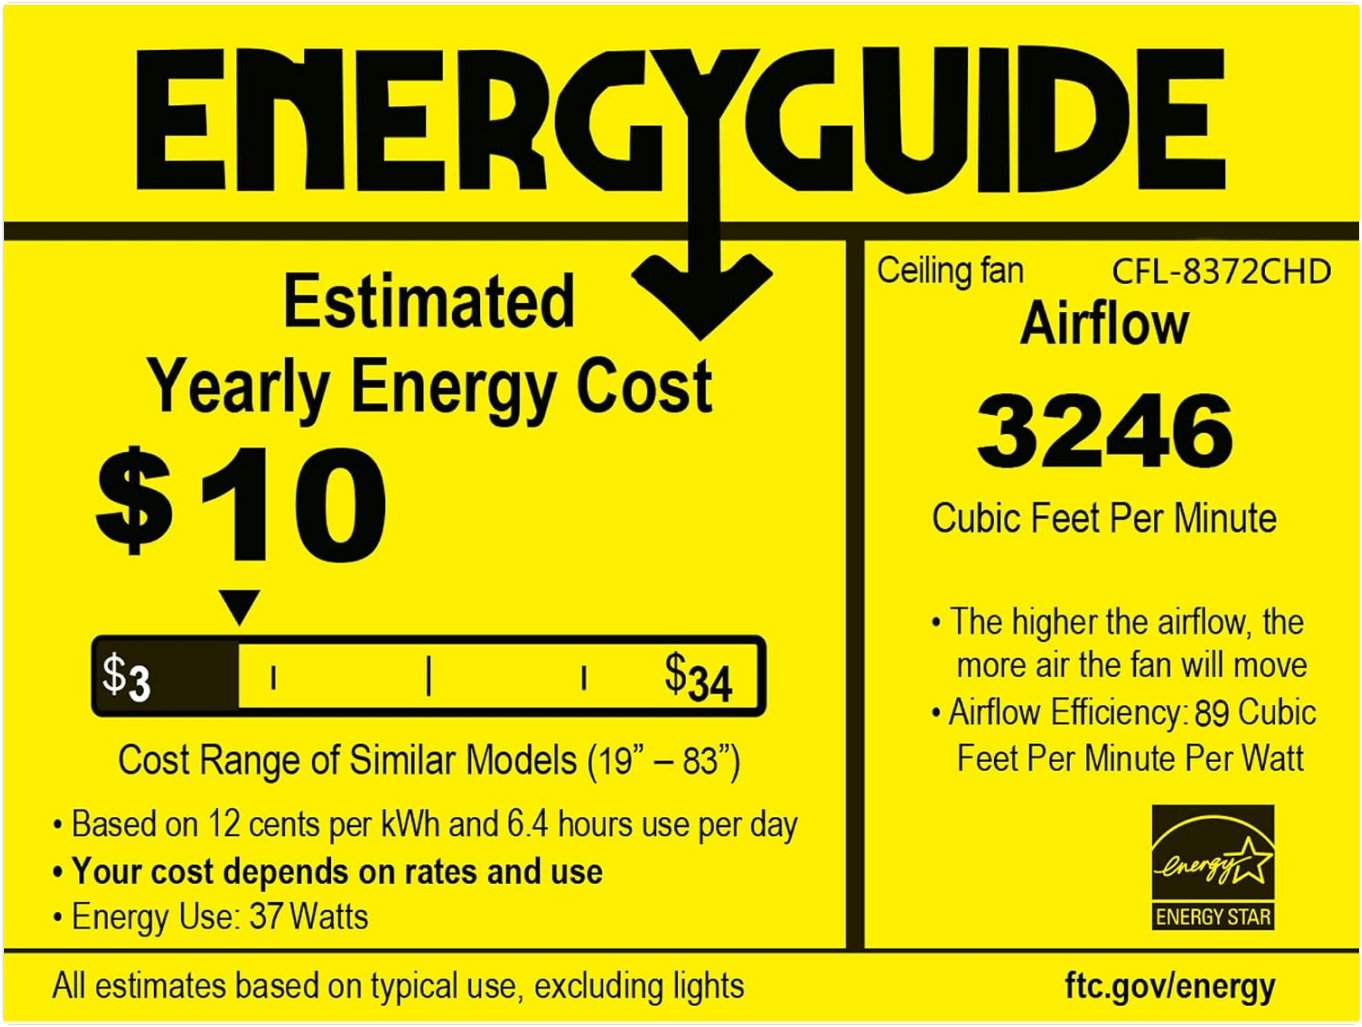

Figure 4: Energy Guide label providing estimated yearly energy cost and airflow data.

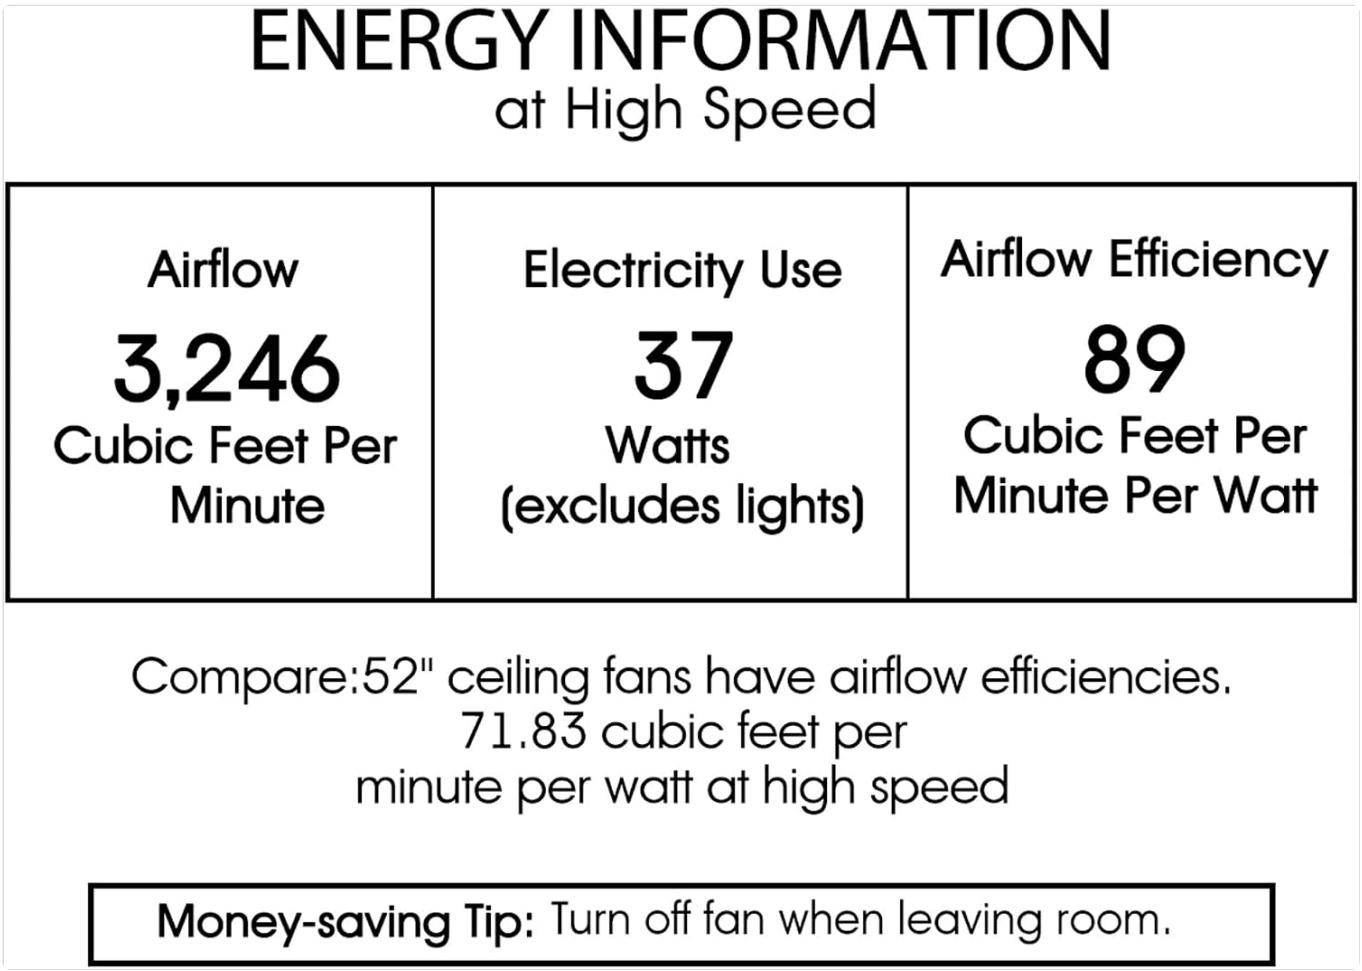

Figure 5: Detailed energy information at high speed, including airflow, electricity use (37 Watts excluding lights), and airflow efficiency.

Warranty and Support

This product is sold without a manufacturer's warranty. For technical assistance or inquiries regarding your Warehouse of Tiffany ceiling fan, please refer to the retailer's return policy or contact their customer service department.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07WSYBLJN

More documents and user manuals: **https://manuals.plus/**