Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Braun HC-0630

Braun MGK5280 9-in-1 Grooming Kit User Manual

Model: HC-0630

1. Important Safety Information

Please read all instructions before using this appliance. When using an electrical appliance, basic precautions should always be followed to reduce the risk of electric shock, burns, fire, or injury to persons.

DANGER

- The charger unit is not for immersion in water or for use in a shower.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not place, store, or charge the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- This appliance is provided with a special cord set with integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it.
- Do not use an extension cord with this appliance.
- Unplug this appliance before cleaning.

WARNING

- Close supervision is necessary when this appliance is used by, on, or near children or persons with disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if the power supply has been dropped into water. Return the appliance to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening of this appliance.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this appliance with a damaged or broken cutter or comb, as serious skin injuries may occur.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls off, then remove plug from outlet.
- When plugging to an electrical outlet outside North America, use a plug adapter to match the outlet's pin configuration.

- **Caution:** The battery used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100 °C (212 °F) or incinerate.
- To recharge the battery, only use the detachable power supply provided with this appliance. If the appliance is marked 491 or 492, only use Braun power supplies coded 491-XXXX or 492-XXXX.

2. Product Overview & What's in the Box

The Braun MGK5280 is a versatile 9-in-1 grooming kit designed for comprehensive head-to-toe styling. It features a rechargeable, cordless design suitable for wet and dry use, equipped with lifetime sharp blades and an AutoSensing motor for efficient trimming.



Image: The Braun MGK5280 main unit displayed with all included attachments, including various trimmer heads, comb guides, and a Gillette ProGlide razor.

What's Included:

- 1 × Beard & Hair Trimmer (main unit)
- 1 × Ear & Nose Trimmer head
- 1 × Detail Trimmer head
- 1 × Body Groomer head
- 4 × Comb Attachments (for various lengths)
- 1 × Mini Foil Shaver
- 1 × Gillette ProGlide Razor
- 1 × Cleaning Brush
- 1 × Soft Bag
- 1 × Smart Plug Charger
- 1 × User Manual (this document)

3. Setup

Charging the Device

1. Ensure the trimmer is switched off.
2. Connect the smart plug charger to the trimmer's charging port.
3. Plug the charger into an electrical outlet. The charging indicator light will illuminate.
4. A full charge takes approximately 1 hour, providing up to 100 minutes of cordless trimming.
5. For safety, the appliance can only be operated cordless.

Attaching and Detaching Trimmer Heads and Combs

1. To attach a trimmer head: Align the head with the main unit and press it down until it clicks into place.
2. To detach a trimmer head: Pull the head upwards firmly to remove it from the main unit.
3. To attach a comb attachment: Slide the desired comb onto the trimmer head until it locks.
4. To detach a comb attachment: Gently push the comb upwards and off the trimmer head.

4. Operating Instructions

The Braun MGK5280 is designed for both wet and dry use, allowing for convenient grooming in the shower or at the sink.

Beard Trimming



Image: The Braun MGK5280 trimmer with a comb attachment, illustrating the adjustable length settings for precise beard trimming.

1. Attach the beard trimmer head.
2. Select one of the comb attachments (short beard comb for 3-11mm, long beard comb for 13-21mm) and slide it onto the trimmer head.
3. Adjust the length setting using the precision dial on the comb.
4. Turn on the trimmer and move it against the direction of hair growth for an even trim.

Hair Clipping

1. Attach the hair trimmer head.
2. Select the appropriate comb attachment for your desired hair length (the kit includes 4 comb attachments covering 0.5-21mm).
3. Adjust the length setting.
4. Guide the trimmer through your hair, ensuring consistent contact with the scalp.

Ear and Nose Trimming

1. Attach the ear & nose trimmer head.
2. Gently insert the trimmer into your nostril or ear canal.
3. Move the trimmer in small circular motions to remove unwanted hair.

Body Grooming

1. Attach the body groomer head.
2. Use without a comb for a close trim, or with a comb for longer body hair.
3. Move the trimmer smoothly over the desired areas of the body.

Detail Trimming and Clean Shaving

1. For precise lines and edges, attach the detail trimmer head.
2. Use the detail trimmer to define beard lines, sideburns, or other facial hair.
3. For a clean shave, use the included Gillette ProGlide razor after trimming.

5. Maintenance and Cleaning

Cleaning the Trimmer

1. Ensure the trimmer is switched off and unplugged from the charger.
2. Remove the trimmer head and comb attachment.
3. Rinse the trimmer head and comb under running water. The main unit is also waterproof and can be rinsed.
4. Use the included cleaning brush to remove any stubborn hair from the blades and housing.
5. Allow all parts to air dry completely before reassembling or storing.

Blade Care

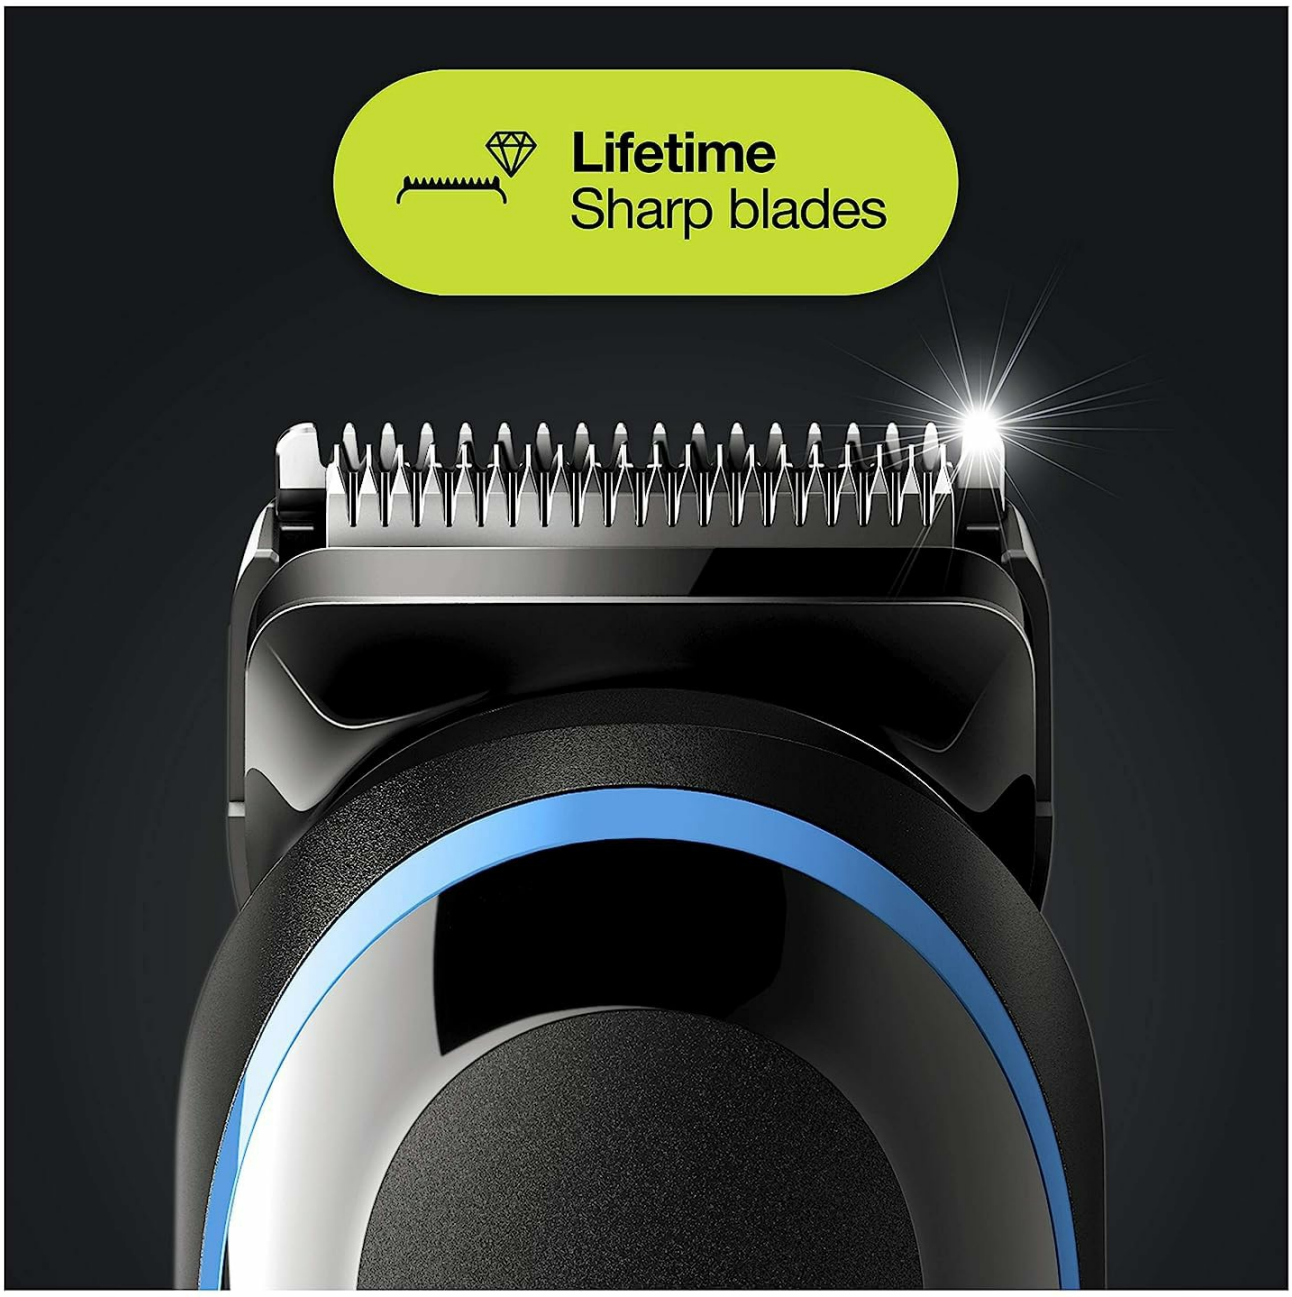

Image: A close-up view of the Braun trimmer's precision blades, highlighting their sharp design for effective cutting.

The Braun MGK5280 features lifetime sharp blades designed for long-lasting performance. Regular cleaning as described above is sufficient to maintain their sharpness and efficiency. Oiling is generally not required for these self-sharpening blades.

6. Troubleshooting

Common Issues and Solutions

- **Trimmer not turning on:** Ensure the device is fully charged. If the battery is depleted, connect it to the charger.
- **Poor trimming performance:** Clean the trimmer head and blades thoroughly to remove any accumulated hair. Ensure the comb attachment is correctly secured. The blades are designed to be lifetime sharp, but excessive debris can hinder performance.
- **Charging indicator not working:** Verify that the charger is properly connected to both the trimmer and the electrical

outlet. Ensure the outlet is functional.

- **Device feels hot during use/charging:** A slight warming is normal. If it becomes excessively hot, discontinue use and contact customer support.

If these steps do not resolve the issue, please refer to the Warranty and Support section for further assistance.

7. Specifications

Product Dimensions	8.86 x 2.42 x 8.74 inches
Item Model Number	HC-0630
Batteries	1 AA battery required (included)
UPC	069055888032
Manufacturer	Procter & Gamble
ASIN	B07XLVB8PD
Recommended Uses	Beard, Body, Ear, Eyebrows, Face, Mustache, Nose, Under Arm
Color	Black
Item Weight	380 Grams (13.4 ounces)
Brand	Braun
Power Source	Battery Powered

8. Warranty and Support

Warranty Information

Braun products are manufactured to meet high quality standards. For specific warranty details regarding your MGK5280 grooming kit, please refer to the warranty card included in your product packaging or visit the official Braun website for your region.

Customer Support

Should you require further assistance, have questions about your product, or need to report an issue, please contact Braun customer service. Contact information can typically be found on the official Braun website or within your product's packaging.

© 2023 Braun. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07XLVB8PD

More documents and user manuals: **https://manuals.plus/**